

Jabra[®]

DISCOVER FREEDOM

Jabra[®] CRUISER2



User manual

www.jabra.com

CONTENTS

 
 
| | |
|---|----|
| THANK YOU | 2 |
| ABOUT YOUR JABRA CRUISER2 | 2 |
| WHAT YOUR SPEAKERPHONE CAN DO | 3 |
| GETTING STARTED..... | 4 |
| CHARGE YOUR SPEAKERPHONE..... | 4 |
| TURNING YOUR SPEAKERPHONE ON AND OFF | 5 |
| PAIRING IT WITH YOUR PHONE | 5 |
| CONNECTING WITH YOUR PHONE | 6 |
| PLACE THE SPEAKERPHONE IN YOUR VEHICLE..... | 7 |
| HOW TO | 7 |
| WHAT THE LIGHTS MEAN..... | 9 |
| ADDITIONAL FEATURES..... | 9 |
| TROUBLESHOOTING & FAQ | 13 |
| NEED MORE HELP? | 14 |
| TAKING CARE OF YOUR SPEAKERPHONE | 15 |
| GLOSSARY | 15 |

THANK YOU

Thank you for purchasing the Jabra CRUISER2 Bluetooth® speakerphone. We hope you enjoy it! This instruction manual will get you started and ready to make the most of your speakerphone.

ABOUT YOUR JABRA CRUISER2

- A Answer/end button**
- B Volume up**
- C Volume down**
- D Mute button**
- E FM Button**
- F On/off switch**
- G Charging port**
- H FM status icon**
- I Connection status icon**
- J Call status icon**
- K Battery status icon**
- L Visor clip**

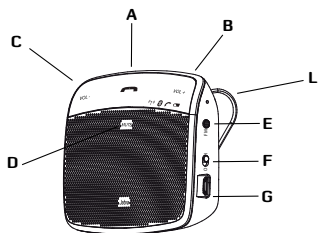

WHAT YOUR SPEAKERPHONE CAN DO

Your Jabra CRUISER2 lets you do all this:

- Answer calls
- Announce the name of the caller
- End calls
- Reject calls*
- Voice dialing*
- Last number redial*
- Mute
- Third party calling*
- Transfer calls
- Night Driving Mode
- Adjust volume
- Download your speakerphone so the name of the caller will be announced
- Transmit mobile music
- Transmit calls or music to your car stereo via the FM transmitter
- Advanced MultiUse™ – Stay connected to two active Bluetooth devices at the same time

Specifications

- Talk time up to 14 hours/Standby time up to 300 hours
- Dual Microphone technology
- Digital sound enhancement via DSP technology
- Voice Announcements™
- A2DP (Advanced Audio Distribution Profile) for streaming music
- FM transmitter
- Jabra Status display – battery status, call status, connection status, FM status
- Size: L 65 mm x W 130 mm x H 19 mm
- Weight 85 grams
- Operating range up to 10 meters (approximately 33 feet)
- Supported Bluetooth profiles: HFP, HSP, A2DP, AVRCP, PBAP
- Bluetooth specification (see glossary) version 2.1 + EDR
- e-SCO for enhanced audio quality
- Rechargeable battery with charging option from car charger or via USB cable

GETTING STARTED

You should follow three steps before using your speakerphone:


- 1 Charge your speakerphone**
- 2 Activate Bluetooth on your mobile phone (refer to the manual for your Mobile phone)**
- 3 Pair your speakerphone to your mobile phone**

The Jabra CRUISER2 is easy to operate. The answer/end button on the speakerphone performs different functions depending on how long you press it.

| Instruction | Duration of press |
|----------------|-------------------------|
| Tap | Press briefly |
| Double tap | 2 quickly repeated taps |
| Press | Approx. 1 second |
| Press and hold | Approx. 5 seconds |

CHARGE YOUR SPEAKERPHONE

 Make sure that your speakerphone is fully charged for two hours before you start using it. Use the USB cable to connect Jabra CRUISER2 to the car charger. Plug the car charger into your car's power outlet. The Battery Status Icon will light up red while charging. When fully charged the Battery Status Icon will turn green. Jabra CRUISER2 can be charged outside your car by only using the USB cable.

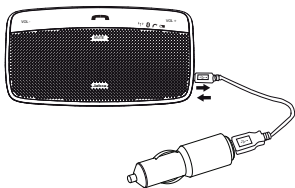


Use only the charger provided in the box – do not use chargers from any other devices as this may damage your speakerphone.

Please note: The lifetime of the battery will be significantly reduced if your device is left uncharged for a long period. We therefore recommend that you recharge your device at least once a month.

TURNING YOUR SPEAKERPHONE ON AND OFF

 - Slide the on/off button to turn the speakerphone on or off

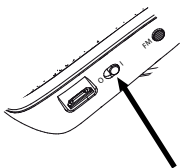

SLEEP MODE

When disconnected from the phone, the speakerphone turns off automatically after 10 minutes. Tap answer/end button to turn the speakerphone on again.

PAIRING IT WITH YOUR PHONE

Speakerphones are connected to mobile phones using a procedure called 'pairing'. By following a few simple steps, a phone can be paired with a speakerphone in a matter of minutes.

1 Put the speakerphone in pairing mode

 
 
 
 
- When you turn on your Jabra CRUISER2 for the first time, the speakerphone will automatically start up in pairing mode – i.e. it is discoverable for your phone. When the speakerphone is in pairing mode you will hear the voice announcement "pairing mode" and the Connection status icon will flash rapidly.

2 Set your Bluetooth phone to 'discover' the Jabra CRUISER2

- Follow your phone's instruction guide. First make sure that Bluetooth is activated on your mobile phone. Then set your phone to discover the speakerphone. This usually involves going to a 'setup,' 'connect' or 'Bluetooth' menu on your phone and selecting the option to 'discover' or 'add' a Bluetooth device.*

3 Your phone will find the Jabra CRUISER2

- Your phone will find the speakerphone under the name "Jabra CRUISER2".
- Your phone then asks if you want to pair with the speakerphone. Accept by pressing 'Yes' or 'OK' on the phone and confirm with the passkey or PIN = 0000 (4 zeros). Your phone will confirm when pairing is complete.



Manual pairing mode

If you wish to use the speakerphone with a different phone, or if the pairing process was interrupted, you can manually set the speakerphone to pairing mode.

 
Turn the speakerphone on. Press and hold the answer/end button for approximately 5 seconds until "pairing mode" is announced. Then repeat steps 2. and 3. in the above pairing guide.

CONNECTING WITH YOUR PHONE

Pairing is only needed the first time a speakerphone and a phone are used together. When the speakerphone and phone have been paired once, they will automatically connect when the speakerphone is on and Bluetooth is activated on the phone. The speakerphone can be used when it is "connected" to the phone. If the devices are paired, but do not immediately connect, tap the answer/end button.

PLACE THE SPEAKERPHONE IN YOUR VEHICLE

The Jabra CRUISER2 sits discreetly and conveniently on the sun visor using the attached clip. **For optimal sound quality place the Jabra CRUISER2 right in front of you and speak directly into the speakerphone.**

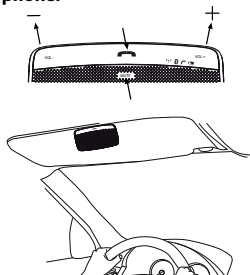

HOW TO

Answer a call

- Tap the answer/end button on your speakerphone to answer a call.

End a call

- Tap the answer/end button on your speakerphone to end an active call.

Make a call

- The call will automatically transfer to your speakerphone*. If not tap the answer/end button.

Reject a call*

- Press the answer/end button.

Activate voice dialing*

- Press the answer/end button. For best results, record the voice-dialing tag through your speakerphone.

Redial last number*

- Double tap the answer/end button when the speakerphone is on and not used.

Mute/un-mute

- Press the mute button to mute your microphone during a call and again to turn mute off.

Adjust sound and volume

- Tap the volume up or volume down button to adjust the volume level. (In FM mode you are not able to adjust volume via Jabra CRUISER2 – use your car stereo).

Third party calling*

- This lets you put a call on hold during a conversation and answer a waiting call.
- Press the answer/end button once to put the active call on hold and answer the waiting call.
- Press the answer/end button to switch between the two calls.
- Tap the answer/end button to end the active conversation.

Transfer call

- Press and hold answer/end button until you hear a beep to transfer a call from the speakerphone to the mobile phone.
- Press and hold answer/end button until you hear a beep to transfer a call from the mobile phone to the speakerphone.

Play music*

- If your phone supports A2DP audio streaming then you can transfer music or any other type of audio to the CRUISER2.

Night Driving Mode

- Press FM and volume up button simultaneously when the speakerphone is on. The light will then turn off. You can turn the lights back on with another press. The speakerphone will always turn on with the lights turned on.

WHAT THE LIGHTS MEAN

| LED Indicator | Speakerphone Status |
|---|---------------------|
| Connection Status Icon flashes rapidly | Pairing mode |
| Connection Status Icon solid blue | Connected |
| Connection Status Icon flashes every 2 seconds | Standby/ Idle |
| Call Status Icon flashes every 1 second | Incoming call |
| Call Status Icon solid blue | Active call |
| FM Status Icon solid red | FM mode |
| FM Status Icon flashes every 1 second | Frequency scanning |
| Call Status Icon and Connection Status Icon flashes | Language selection |
| Battery Status Icon on (red) | Low battery |

ADDITIONAL FEATURES

Advanced MultiUse™ - Using your Jabra CRUISER2 with two mobile devices

The Jabra CRUISER2 supports Advanced MultiUse™ and is capable of having two active mobile phones (or other Bluetooth devices) connected at the same time. This will give you the freedom of having only one speakerphone to operate both of your mobile phones.

If you are on a call on one of the connected phones and the other phone starts ringing you can put the first call on hold with a press on the answer/end button or reject the second call with a double tap. If you have two active calls you can switch back and forth between them with a press on the answer/end button.

Please note that Last Number Redial will dial the number from the last outgoing call independent of the mobile phone.

Transfer your phone book to the Jabra CRUISER2

The first time you connect your mobile phone to the CRUISER2 your phonebook will be transferred.

Caller ID and name announcement

During an incoming call the CRUISER2 will access the downloaded phonebook and announce the name of the caller. If the name is not stored in your phonebook and your phone supports PBAP it will announce the number of the caller instead.

PLAY MUSIC

Make sure that the speakerphone and mobile phone are connected. When you play music from your mobile phone it will automatically transfer to your speakerphone. If your phone does not allow this feature, press the Answer/En button to transfer the music to the speakerphone. Music will automatically be paused when you have an incoming call. When the call is ended it will start playing again. Remote control your music via the music buttons.

CHANGE VOICE ANNOUNCEMENT LANGUAGE

Voice announcements give you a more convenient and safe use of Jabra CRUISER2. Depending which country you purchased your Jabra CRUISER2 in, there are 4 pre-installed languages available.

| | |
|---|-------------------|
| 1 | English |
| 2 | Italian |
| 3 | Portuguese |
| 4 | Chinese Mandarine |

Additional languages

US English, UK English, Spanish, German, French, Italian, Russian, Polish, Brazilian Portuguese, Simplified Chinese can be downloaded via a separate software version found on www.jabra.com.

Default language is English. To change language follow these steps:

- Enter pairing mode by pressing and holding the Answer/End button when Jabra CRUISER2 is on until voice announces: "Pairing mode".
- Press FM button until current language is announced.
- Tap Volume Up or Volume Down button to select a new language.
- Select preferred language and press FM button until the new language is announced.

Note: It is possible to turn off the voice announcement function. When tapping the Volume Up or Volume Down buttons to select the desired language, the beep tone indicates the voice announcement function is off. When beep tone is heard press FM button and the voice announcement function will be off.

USING THE FM TRANSMITTER

The FM transmitter in the speakerphone allows you to transmit calls and music from your mobile to the car stereo when the speakerphone and car radio are set to the same frequency.

- Connect your mobile phone and speakerphone.
- Press FM button to enter FM mode. The FM Status Icon will turn solid red and a FM frequency will be announced.
- Manually turn your radio into the same FM frequency and you are now ready to transmit calls or music from your phone to your car stereo.
- The FM transmitter will automatically turn off after 10 minutes if the function is not used.

Note: The visor clip works as the FM antenna. The FM transmitter will not work if the visor clip is removed.

CHANGING FM FREQUENCY

When you enter FM mode the speakerphone will always transmit calls and music on the latest used FM frequency. For the FM transmitter to work well, a free radio frequency must be found. A free radio frequency is one that no commercial and public radio station is broadcasting on. As you drive and change environment the FM audio quality could potentially be reduced due to frequency interferences. If sound performance is unsatisfactory it is possible to select a new FM frequency.

- Enter FM mode.
- Press Volume up button until "Searching" is announced.
- When a new frequency is found and announced, tune your radio manually into the same FM frequency. The speakerphone will automatically save the new frequency.

A tap on the Volume up/Volume down button will change the frequency on your speakerphone by 0.2 MHz allowing you to fine tune the signal.

USING THE FM TRANSMITTER WHEN VOICE ANNOUNCEMENT FUNCTION IS OFF

If voice announcement function is turned off you can select any of the pre-programmed frequency channels in the following order:

| Channel No | Pre-programmed Frequency | LED indication (FM Frequency selection mode) | | | |
|------------|--------------------------|---|-------------|-------------------|-----------|
| | | Battery status | Call status | Blue-tooth status | FM status |
| 1 | 88.1 MHz | Off | Off | On | Flash |
| 2 | 88.3 MHz | Off | On | Off | |
| 3 | 88.5 MHz | On | Off | Off | |
| 4 | 88.7 MHz | Off | On | On | |
| 5 | 88.9 MHz | On | Off | On | |
| 6 | 89.1 MHz | On | On | Off | |
| 7 | 89.3 MHz | On | On | On | |

To select the desired FM frequency channel, follow these steps:

- Connect your mobile phone and speakerphone.
- Press FM button to enter FM mode. The default frequency channel is 88.1MHz
- Press the Volume Up or Volume Down button to move to the next/previous channel.
- Manually turn your radio into the same FM frequency and you are now ready to transmit calls or music from your phone to your car stereo.

Note 1: While changing frequencies the FM Status Icon flashes every 1 second.

Note 2: While changing frequencies, a repeated beep-tone will be heard and frequencies can be recognized by the combinations of Status Indicators. (See the table above.)

SOFTWARE UPGRADE

It is possible to upgrade the speakerphone software. Go to www.jabra.com and follow the instructions.

TROUBLESHOOTING & FAQ

I hear crackling noises

- Bluetooth is a radio technology, which means it is sensitive to objects between the speakerphone and the connected device. It is designed for the speakerphone and the connected device to be used within 33 feet (10 meters) of each other, with no major objects in the way (walls, etc.).

I cannot hear anything in my speakerphone

- Increase the volume in the speakerphone.
- Ensure that the speakerphone is paired to a device that is playing.
- Make sure your phone is connected to the speakerphone by tapping the Answer/End button.

I am having pairing problems

- You may have deleted your speakerphone pairing connection in your mobile phone. Follow the pairing instructions.

I want to reset the pairing list in my speakerphone

The speakerphone registers a list of up to 7 mobile phones. To remove the list, press and hold the Answer/End button, Volume up button and FM button at the same time. A beep indicates the list was removed from the speakerphone memory. The next time you power on, the speakerphone will go into pairing mode as the first time you powered your new Jabra CRUISER2 on.

Will the Jabra CRUISER2 work with other Bluetooth equipment?

- The Jabra CRUISER2 is designed to work with Bluetooth mobile phones. It can also work with other Bluetooth devices that are compliant with Bluetooth version 1.1 or higher and support a headset, hands-free and/or advance audio distribution profile.

I cannot use Reject call, call on hold, Redial or voice dialing

These features are dependent on the ability of your phone to support a hands-free profile. Even if the handsfree profile is implemented reject call, call hold and voice dialing are optional features which are not supported by all devices. Please consult your device manual for details.

Please note that some features can only be operated from the primary device e.g. voice dial using Jabra CRUISER2 with 2 mobile phones.

I can not connect speakerphone and radio via FM transmitter

- Make sure the radio is turned on and speakerphone is in FM mode (FM Status Icon is on).
- If your radio when searching is not able to find the FM frequency set by your speakerphone, the FM frequency must be tuned in manually on the radio. Please read radio manual to find out how to manually change frequency on your radio.
- If your radio is in TA (Traffic Announcement) mode, switch TA off and your radio should be able to find your speakerphone when using the search function on the radio. If not tune in manually.
- The sensitivity of the search function on your radio determines whether it is able to find the frequency set by your speakerphone. On some radios you are able to adjust the sensitivity thus making it possible to find the speakerphone frequency when searching. If not tune in manually.
- In urban areas it might be difficult to find a clear frequency. It is therefore advisable to use a frequency in the lower or upper end of the FM frequency band (e.g. 88.1 or 107.7 MHz) where you will have the best chance to find a clear frequency.

NEED MORE HELP?

1. Web: <http://www.jabra.com>
(for the latest support info and online User Manuals)

2. E-mail:

| | |
|-----------|---|
| Australia | support.au@jabra.com |
| China | support.cn@jabra.com |
| Japan | support.jp@jabra.com |
| Singapore | support.sg@jabra.com |
| | Information: info@jabra.com |

3. Phone:

| | |
|-----------|---------------|
| Australia | 1-800-738-521 |
| China | 800-858-0789 |
| Japan | 03-3242-8722 |
| Singapore | 800-101-2329 |

TAKING CARE OF YOUR SPEAKERPHONE

- Always store the Jabra CRUISER2 with the power off and safely protected.
- Avoid storage at extreme temperatures (above 45°C/113°F – including direct sunlight – or below -10°C/14°F). This can shorten battery life and may affect operation. High temperatures may also degrade performance.
- Do not expose the Jabra CRUISER2 to rain or other liquids.

GLOSSARY

- 1. Bluetooth** is a radio technology that connects devices, such as mobile phones and headsets, without wires or cords over a short distance (approx. 10 meters/33 feet). Bluetooth is safe to use. It is secure too, so once a connection has been made no-one can listen in and there is no interference from other Bluetooth devices either. Get more information at www.bluetooth.com.
- 2. Bluetooth profiles** are the different ways that Bluetooth devices communicate with other devices. Bluetooth phones support the headset profile, the hands-free profile or both. In order to support a certain profile, a phone manufacturer must implement certain mandatory features within the phone's software.
- 3. Pairing** creates a unique and encrypted link between two Bluetooth devices and lets them communicate with each other. Bluetooth devices will not work if the devices have not been paired.
- 4. Passkey or PIN** is a code that you enter on your Bluetooth enabled device (e.g. a mobile phone) to pair it with your Jabra CRUISER2. This makes your device and the Jabra CRUISER2 recognize each other and automatically work together.
- 5. Standby mode** is when the Jabra CRUISER2 is passively waiting for a call. When you 'end' a call on your mobile phone, the speakerphone goes into standby mode.



Dispose of the product according to local standards and regulations.

www.jabra.com/weee

Jabra®

DISCOVER FREEDOM

A BRAND BY

GN Netcom

© 2010 GN Netcom US, Inc. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

© 2010 GN Netcom A/S. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

MADE IN KOREA
TYPE: HFS002



www.jabra.com

81-03272 B

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>