




Wireless Weather Instruments
by LA CROSSE TECHNOLOGY

Wireless Temperature Station

Model 9245

Quick Setup Guide

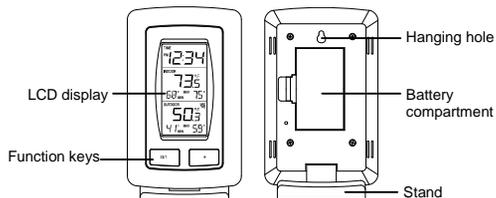

FEATURES

The Temperature Station

- Manual time set (hour and minute)
- 12-Hour Time Format
- Temperature Display in Fahrenheit (°F)
- Indoor and Outdoor Temperature with MIN/MAX Records
- Low Battery Indicator
- Wireless Transmission at 915 MHz
- 8 Second Signal Reception Interval
- Wall Mount or Table Stand

The Outdoor Temperature Transmitter



- Wireless 915 MHz Outdoor Temperature Transmitter
- Rain-resistant Casing
- Wall Mounting or Table Stand

Note: Mount in a sheltered place. Avoid direct rain and sunshine.

SETUP

 
IMPORTANT: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries.

Note: This temperature station can only receive one transmitter only.

1. First, insert batteries into the transmitter, observing the correct polarity (see marking inside battery compartment).
2. Within 30 seconds of powering up the transmitter, insert batteries into the Temperature Station, observing the correct polarity (see marking inside battery compartment). Once the batteries are in place, all segments of the LCD will light up briefly. Following the indoor temperature, the time as 12:00 will be displayed. If they are not shown in the LCD after 60 seconds, remove the batteries and wait for at least 60 seconds before reinserting them. Once the indoor data is displayed you may proceed to the next step.
3. After the batteries are inserted, the Temperature Station will start receiving outdoor temp data from the transmitter. The outdoor temperature should then be displayed on the Temperature station. If this does not happen after 2 minutes, remove the batteries from both units and start again from step 1.
4. In order to ensure sufficient 915 MHz transmission, the outdoor transmitter should be placed a distance of no more than 200 feet (60 meters) from the Temperature Station and the transmitter (see notes on "Positioning").

FUNCTION KEYS


The Temperature Station has only two easy to use function keys:



SET key: Press and hold for about 3 seconds to enter the Manual setting mode.


+ key: Press to make adjustment in the setting mode. Press and hold to reset all MIN/MAX records

LCD SCREEN AND SETTINGS

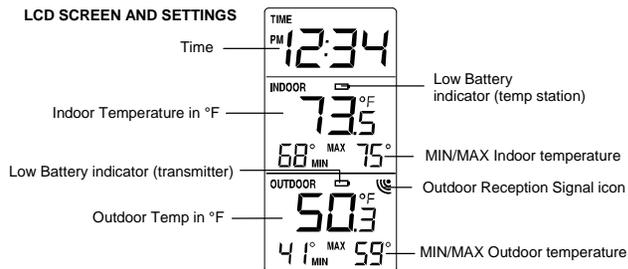

MANUAL TIME SET

 To manually set the time of the Temperature Station:



1. Press and hold the **SET** key for 3 seconds to enter the manual time setting mode.
2. The hour digit of the time display will be flashing.
3. Press the **+** key to adjust the hour (press and hold to allow fast advance). Press **SET** key to confirm and go to the minute setting.
4. The minute digit will be flashing. Press the **+** key to adjust the minute (press and hold to allow fast advance). Press **SET** key once more to return to normal display.

Note: If no buttons are pressed within approximately 8 seconds while in setting mode, the unit will return to normal operating mode.

VIEWING THE INDOOR TEMPERATURE AND MIN/MAX

The indoor temperature is displayed in the second section of the LCD along with the indoor MIN/MAX records:



Notes:

- The minimum temperature range: 14°F to 99°F (100°F to 140°F will show "99°F").
- The maximum temperature range: 14°F to 140°F
- The MIN/MAX temperature resolution is 1°F
- The resolution of the indoor temperature is 0.5°F

VIEWING THE OUTDOOR TEMPERATURE AND THE MIN/ MAX

The outdoor temperature is displayed in the last section of the LCD along with the outdoor MIN/MAX records:



Notes:


- The MIN/MAX temperature resolution is 1°F
- The resolution of the outdoor temperature is 0.2°F

TO RESET THE MIN/MAX DATA

The MIN/MAX temperature can be reset manually by pressing and holding the **+** key for about 3 seconds. This will reset all indoor and outdoor MIN/MAX temperature to current indoor and outdoor temperatures.

POSITIONING THE REMOTE TEMPERATURE TRANSMITTER:

The remote temperature transmitter can be placed onto any flat surface or wall mounted using the bracket which doubles as a stand or wall mount base.

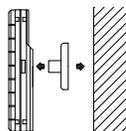

To wall mount: Secure the bracket onto a desired wall using the screws and plastic anchors.

Clip the remote temperature transmitter onto the bracket.

Note: The mounting surface can affect the transmission range. If, for instance, the unit is attached to a piece of metal, it may then either reduce or increase the transmitting range. For this reason, we recommend not to place the unit on any metal surfaces or in any

position where a large metal or highly polished surface is in the immediate vicinity (garage doors, double glazing, etc.). Before securing in place, please ensure that the Temperature Station can receive the 915MHz signal from the temperature transmitter at the positions that you wish to place them.

WARRANTY

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology, Ltd
2817 Losey Blvd. S
La Crosse, WI 54601

www.lacrossetechnology.com/support

FCC ID: OMO-TX40U (transmitter)

FCC DISCLAIMER

RF Exposure mobile:

The internal / external antennas used for this mobile transmitter must provide a separation distance of at least 20 cm (8 inches) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

Statement according to FCC part 15.19:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Statement according to FCC part 15.21:

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

Statement according to FCC part 15.105:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher. This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks and patents are acknowledged.

EJMA9245L2#0

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>