

H31 - RS232 Command List

Interface

Hardware : 3 wires RS-232C
Baud Rate: 9600
Data Bits: 8
Parity: None
Stop Bits: 1
Flow Control: None

Command Sequence

Write	Basic Protocol
Header:	'**'
Address Code:	'0' fixed
Command Code:	ASCII Text
Data:	Fixed 3 digits
Terminator Code:	Carriage Return

Command Sequence

Read	Basic Protocol
Header	'**'
Address Code	'0' fixed
Command Code	ASCII Text
Data	'?' fixed
Terminator Code	Carriage Return

Acknowledgement

Basic Protocol	Return Status
Receive OK	Receive OK
Invalid Command	Invalid Command
Transmit OK	Transmit Ok
Data response	As Write Command

Function List I (IR)

Function	Command
Power On (*1)	OKOKOKOKOK
Power Off	* 0 IR 002
Freeze	* 0 IR 007
Menu	* 0 IR 008
Up	* 0 IR 009
Down	* 0 IR 010
Right	* 0 IR 011
Left	* 0 IR 012
Enter	* 0 IR 013
Re-Sync	* 0 IR 014

Function List II (Directly OSD Menu)

Function	Command
Brightness	* 0 IR 025
Contrast	* 0 IR 026
Color	* 0 IR 029
Mode	* 0 IR 032
Color Temperature	* 0 IR 036
Edge Mask	* 0 IR 037
Brightness	* 0 IR 038
Keystone	* 0 IR 039
FullScreenMode	* 0 IR 043
ImageMode	* 0 IR 044
Phase	* 0 IR 056

Function List III(Auto Status)

Function	Basic Command
Call Picture state	* 0 AUTO 001
Exit to Normal state	* 0 AUTO 002
Save current value as default	* 0 AUTO 003

Function List IV (Lamp Status)

function	Basic Command	Return Status
Get Lamp Status	* 0 Lamp ?	Lamp 0 (Lamp Lamp 1 (Lamp

*1: only MP Product workable

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>