

# **SWISHER**



## **REPAIR MANUAL**

**ZT2560**


**Swisher Mower Co  
Warrensburg, MO**

## TABLE OF CONTENTS

1. If engine won't crank
2. If engine won't crank – continued
3. If engine cranks but won't start  
    If engine stalls when PTO is engaged
4. If PTO clutch will not engage  
    Hour meter not operating
5. Wire identification at switches
6. Wire identification at switches – continued
7. Drive control adjustment
8. Drive control adjustment – continued  
    Drive control overview
9. Electrical components
10. Parking brake and neutral switch operation
11. Deck lifting system
12. Deck belt replacement
13. Repairing or replacing blade driver
14. Replacement Parts – Quick reference

# IF ENGINE WON'T CRANK

## ALWAYS CHECK FUSE FIRST

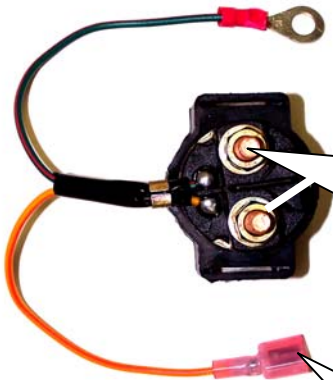

### TEST #1

Using a remote starter switch or suitable device, make a connection between the large terminals on the solenoid. If engine does **not** crank!!!

- Battery may be weak or dead
- Starter may be bad
- Battery cables may have bad connections
- Do **not** go to Test #2 until this test gives results

### TEST #2

If engine **did** crank in test #1, disconnect green wire at spade connector and apply positive voltage from the battery to the primary wire on the solenoid. Make sure the one with the eyelet is grounded. If engine doesn't crank now, replace the solenoid. **Remember, all other tests are useless unless these two tests make the engine turn over.**




### TEST #3

If engine **did** crank in the first part of test #2, reconnect green wire to solenoid. Make sure the drive controls are out in neutral position. Using a jumper wire attached to the positive terminal of the battery, apply 12 volts to the red wire on terminal **B** of the ignition switch. Try to crank, using the ignition switch. If engine cranks, the fuse or the fuse holder, or related wiring is defective somewhere back to the solenoid.

### TEST #4



If engine **did not** crank in test #3, make sure the drive controls are in neutral position. This time move the jumper wire attached to the positive terminal of the battery, to the green wire on **S** terminal of the ignition switch. If all components in the circuit are working, the engine should crank. If it doesn't, move on to next test.

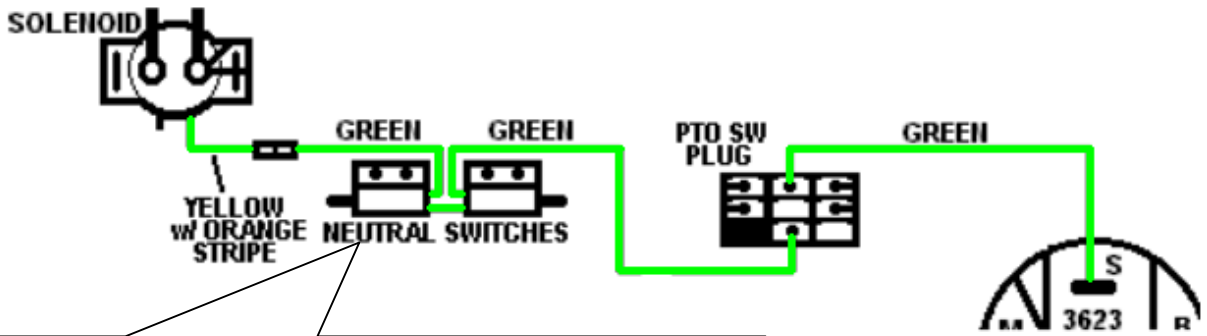

A neutral switch is located on the lower end of both drive control handles and is activated when the handles are outward in the neutral position. Check that the plunger buttons on both switches are depressed at least 3/8". Meter should go to zero when checking continuity across switch terminals with plungers depressed.

If any of the switches in this circuit tested bad, install a new one and perform **Test #4** again. If all switches are good, a connecting wire must be at fault. Don't move past **Test #4** until it assures a good circuit. When you do get good results, hook all wires back to original position and try the ignition switch again. If no results, you will need to replace the ignition switch.

With PTO switch in the off position, meter should go to zero when checking continuity across these two terminals.

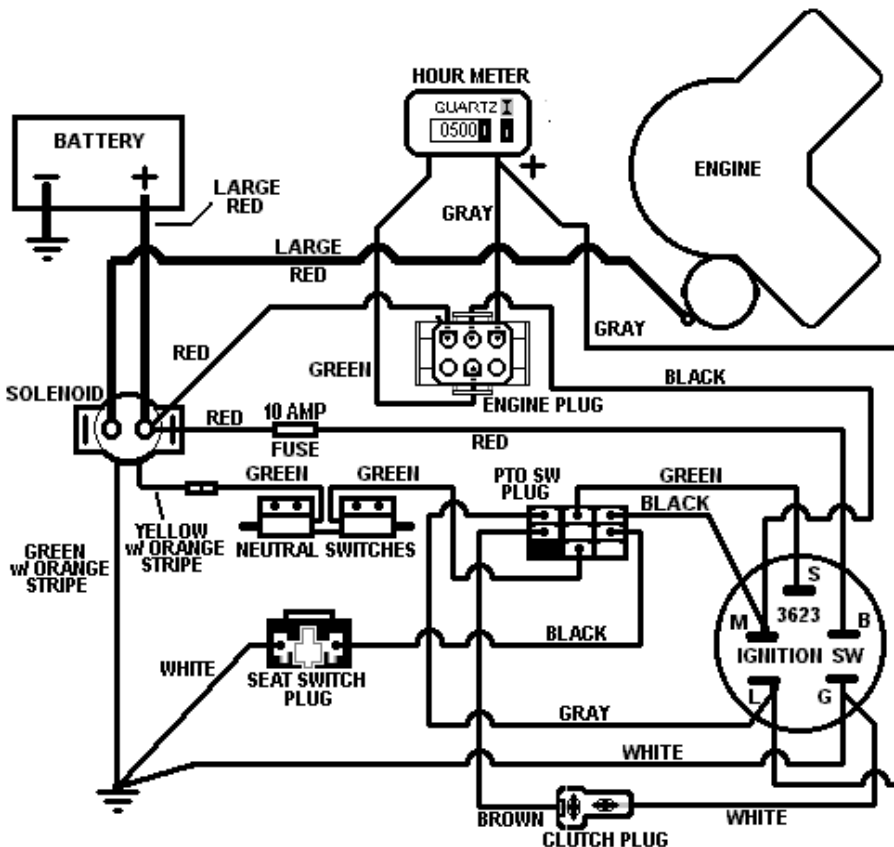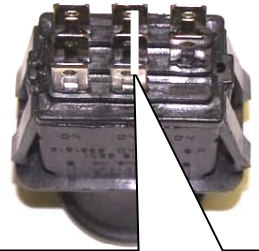

## ENGINE CRANKS BUT WON'T START


### Checks for electrical problems

- While turning ignition switch to its first position, listen for the fuel solenoid on the carburetor to click. It must click to supply fuel to the carburetor.
- Try a new spark plug.
- Check for spark at plug when it is removed and the threaded end is grounded.
- Unplug the six-position socket that connects engine wiring to mower wiring harness. Engine will still crank. If plug doesn't have a spark now, ignition module is probably defective.


### Checks for mechanical problems

- Make sure the tank gas valve is turned on.
- Remove air filter element to check for signs of gas in the throat of the carburetor.
- If no gas, check to see if choke is working properly.
- If all above checks show positive, carburetor must have an internal problem. Remove and clean the carburetor.

## ENGINE STALLS WHEN PTO IS ENGAGED

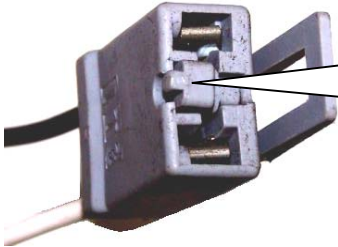

The seat safety switch plug not being properly inserted, or a defective plug can cause this problem. If the plug is not inserted or is defective, the spark plug is grounded out when the PTO is engaged.

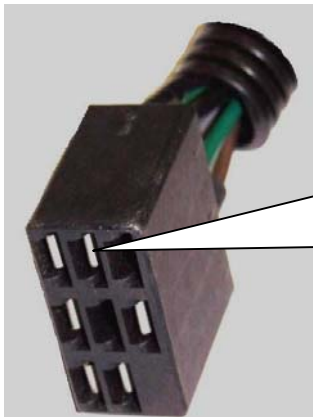

To check, remove plug from the PTO switch. Using an ohmmeter, place one probe on the terminal connected to the black wire going to the seat safety switch plug. Place the other probe on a good chassis ground. The meter should be on zero with no weight on the seat. Pulling the seat down should open the circuit.


## IF PTO CLUTCH WILL NOT ENGAGE



Apply a negative ground to this terminal

Apply 12 volts to this terminal. Clutch should activate, if it doesn't, clutch is defective.

If clutch checks OK, use a voltmeter to measure if there is 12 volts at the brown wire's terminal. First turn ignition switch to the **ON** position but don't start the engine. Now engage the PTO switch. For the first test put the negative probe on a good ground, **not** on the white wire's terminal in the plug. If no voltage is measured, move on to next test.

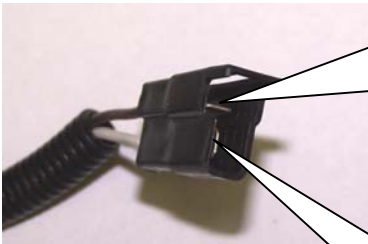

With the PTO switch **ON** there should be continuity between these two connectors, if not, replace switch. If switch tested good, check wires and connectors back to ignition switch and back to clutch plug.



If all checked good in the two previous tests, the problem may now be a poor ground on the white wire in the clutch plug. Check by testing for continuity to ground or check for voltage between the two terminals

## HOUR METER NOT OPERATING




Hour meter has a **positive** and a **negative** post. Gray wire should go on the positive. Power is supplied from the ignition switch.

Green wire from hour meter is grounded by the oil pressure switch, therefore only has a ground when the engine is running.



# WIRE IDENTIFICATION AT SWITCHES

## 3623 IGNITION SWITCH

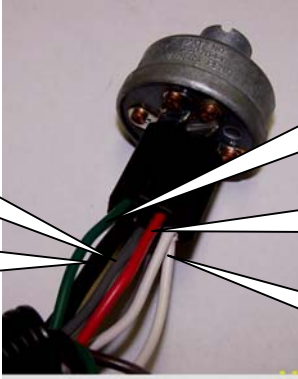

One gray wire goes to the PTO switch and the other goes to the hour meter


Green wire goes to PTO switch

Red wire goes to fuse and on to battery positive at the solenoid terminal.

One black wire goes to PTO switch and the other goes to the engine plug

One white wire goes to clutch and other one goes to ground.

## STARTER SOLENOID

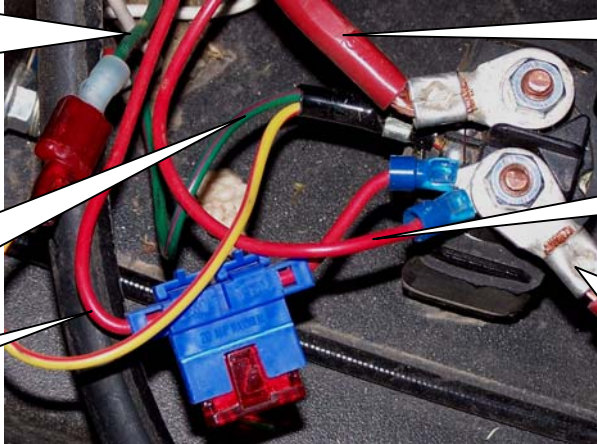

Green wire goes to neutral switches and on to the ignition switch.

Green wire with orange stripe goes to the ground.


Red wire goes to ignition switch.

Heavy red cable goes to the starter.

Red wire goes to engine plug.

Heavy red cable goes to the positive post of the battery.

## PTO SWITCH PLUG

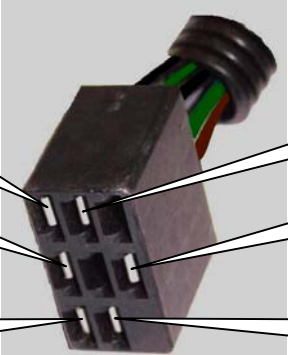

Black wire goes to the ignition switch.

Black wire goes to the seat switch.


Green wire goes to the ignition switch.

Green wire goes to the neutral switches.

Gray wire goes to the ignition switch.

Brown wire goes to the clutch.

## WIRING HARNESS TO ENGINE PLUG CONNECTION

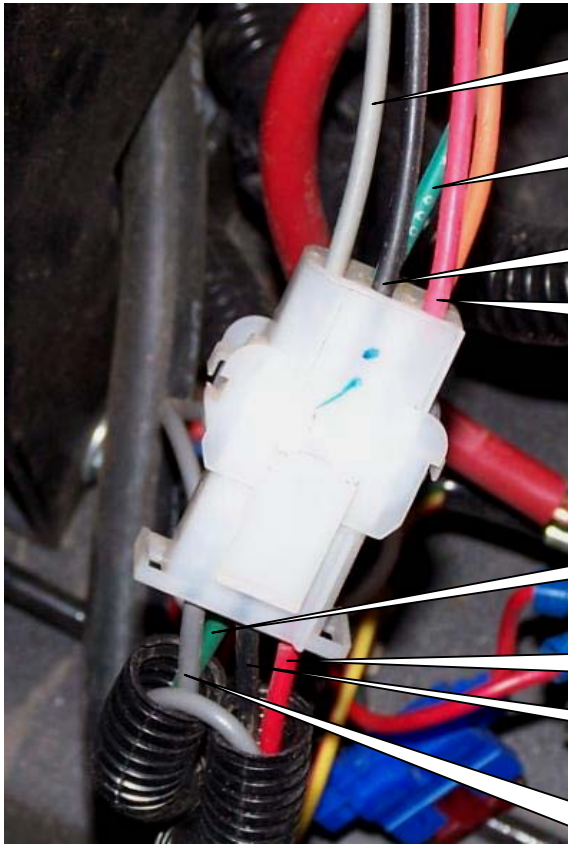

Gray wire goes to carburetor fuel solenoid

Green wire goes to oil pressure switch

Black wire goes to engine ignition module

Red wire goes to engine charging system


Green wire goes to hour meter

Red wire goes to terminal on solenoid with the positive battery cable.

Black wire goes to the ignition switch.

Gray wire goes to hour meter

## WIRING HARNESS PLUG TO ENGINE

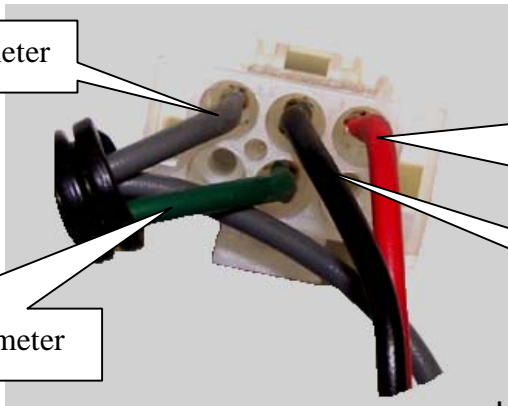

Gray wire goes to hour meter


Red wire goes to terminal on solenoid with the positive battery cable.

Green wire goes to hour meter

Black wire goes to the ignition switch.



## BATTERY CHARGING SYSTEM

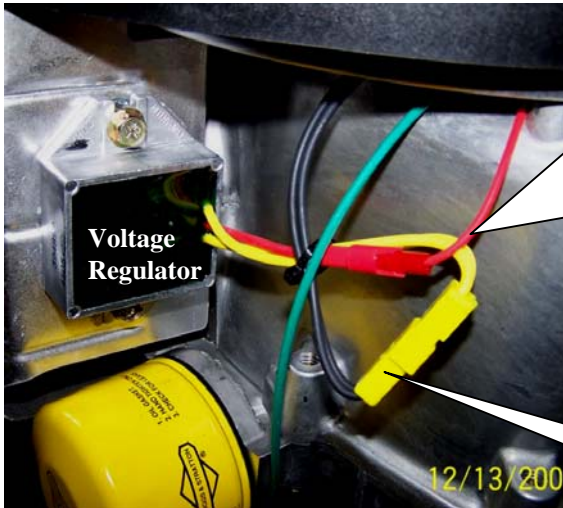

Red wire goes to the engine plug and then on to the positive terminal of the solenoid to keep the battery charged. Easiest way to check if the charging is taking place is to measure the DC voltage of the battery before you start the engine. Then start the engine. Measure the voltage at the battery with the engine running. The voltage should be at least one volt higher right after the engine is started. This voltage will drop a little as the battery gets recharged.


To test alternator before it goes to the regulator, unplug the yellow connector and measure the AC voltage across the the two gray wires inside this connector. There should be at least 20 volts AC.

## CARBURETOR FUEL SOLENOID

Black wire goes to engine ground.


Gray wire goes to the engine plug, then on to the ignition switch where it receives power to activate the fuel shut off valve.

Fuel shut off solenoid is a Briggs part and is available through them only.

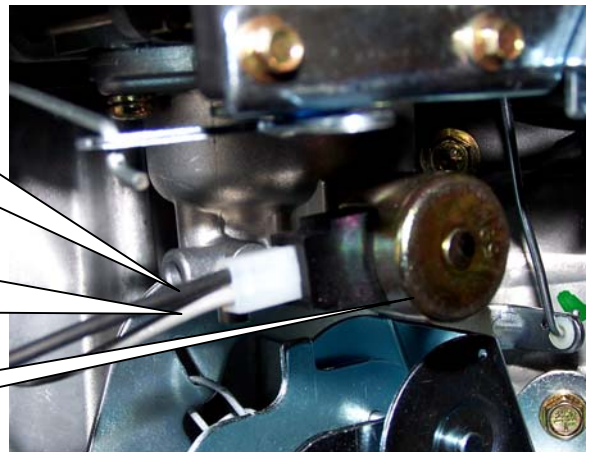


# DRIVE CONTROL ADJUSTMENTS

## LEFT SIDE SHOWN

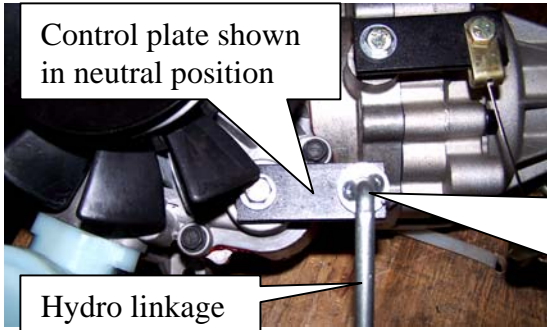


Start your adjustments by putting the drive control arms in the neutral position. Remove the linkage from the control plate at the Eaton hydro by removing the cotter pin and washer on the under side. By moving the control plate forward and backwards by hand you can easily find the neutral position on the hydro.

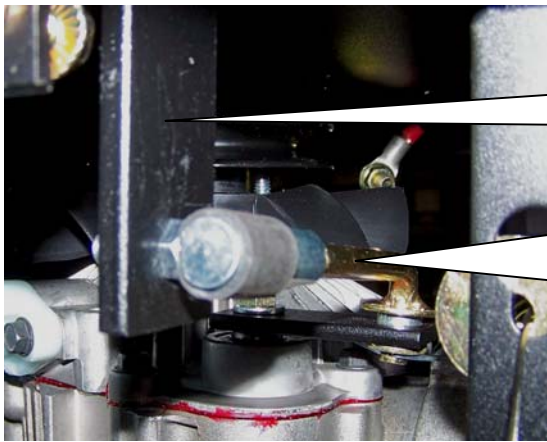


With the drive control handles in the neutral position, this linkage pivot should be close to straight up and down.

With control plate on hydro still in the neutral position, try to put hydro linkage back into the hole on the plate. If it won't go in without forcing one way or the other, adjust threads here to make an easy hookup.

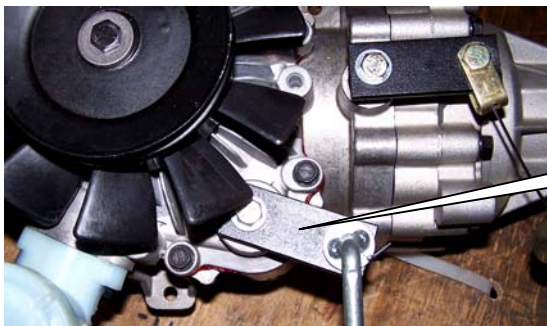

With the control linkage once again removed, move the control plate forward as far as it will go.

Move the control handle forward until this linkage contacts the adjusting bolt in front of it. Again try to put the control linkage in to the control plate. Do not adjust the control linkage to make this happen, adjust the bolt in front instead.

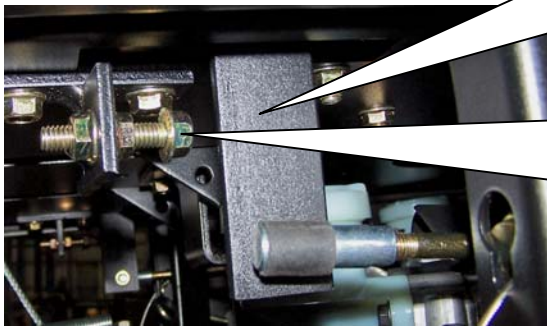

This adjusting bolt will now be used to set both drive wheels to pull equally. With the control handles fully forward, observe which side is turning the fastest. Extend the bolt rear ward to slow the travel of that side until they are pulling the same on both sides.

# DRIVE CONTROL ADJUSTMENTS (CONTINUED)


## LEFT SIDE SHOWN




Once both hydro units are pulling equally, make your final control handle adjustment with this ball linkage. Whichever handle is going the farther forward, lengthen the linkage on that side until the handles are straight across when mower is traveling in a straight line. If a lot of adjustment is needed, shorten the linkage on the opposite side for half of the adjusting.

# OVERVIEW OF DRIVE CONTROL LINKAGE

## RIGHT SIDE SHOWN

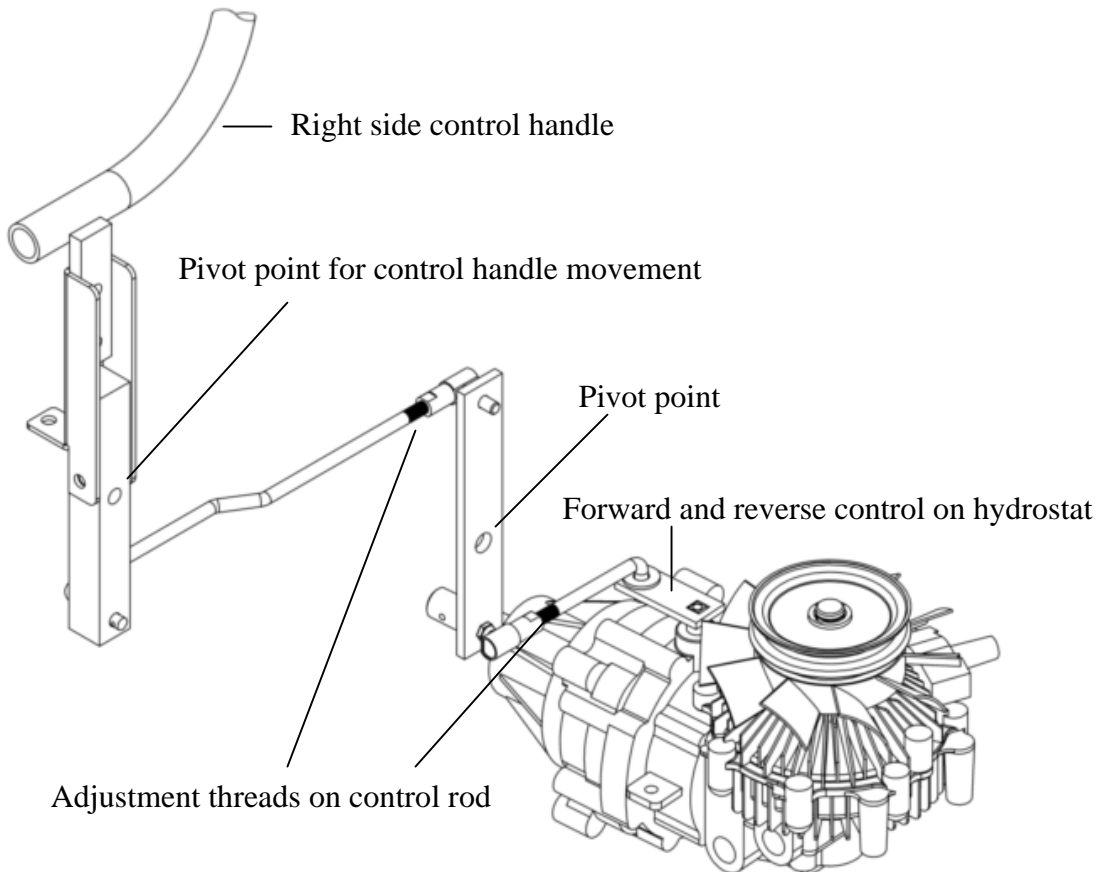


# PARKING BRAKE AND NEUTRAL SWITCH OPERATION

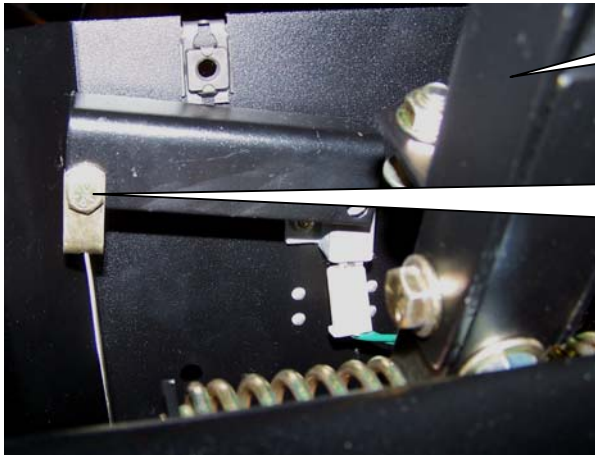

Right side drive control handle.


Parking brake cable attaches here. Right side is shown. Control panel has been removed for better view.

Parking brake is activated by this bolt as the drive control handle is swung outward in the neutral position. Tension on brake cable can be adjusted by raising or lowering this bolt, but the main adjustment is performed on the other end of the cable down by the rear wheels.

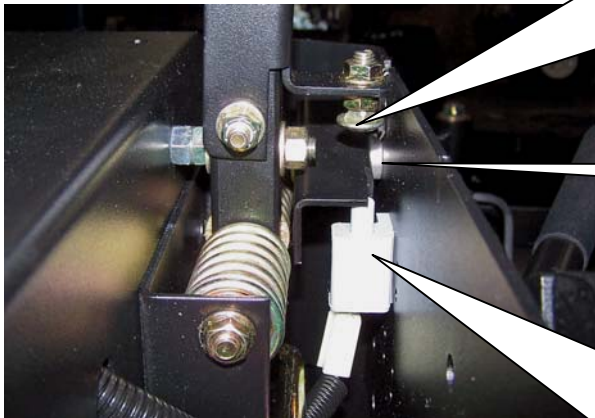

Safety switch rocker arm pivots on a bolt at this point.

This is the neutral safety switch that prevents the engine from cranking unless the drive controls are both swung outward in neutral position. The switch has a slotted mount bracket so the travel of the push button can be adjusted to depress about 3/8" to activate. Further information about checking this switch is found in the electrical diagnosing section

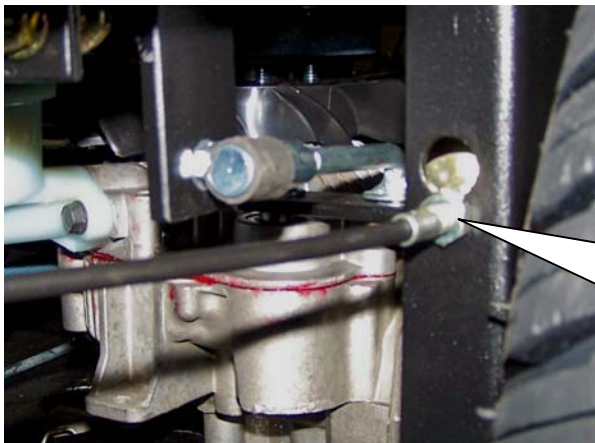


The parking brake can be adjusted by moving the nuts on this cable. A nut is located on each side of this frame. As the outer cable moves forward, the brake will become tighter.


# DECK LIFTING SYSTEM



Three rocker arms are activated by the deck lift handle. This is the right side control. Note the routing of the cable. It drops straight below to the deck.

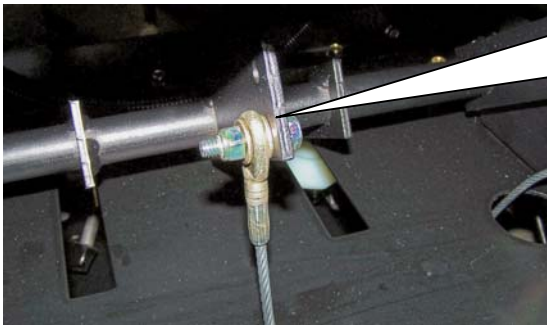


This center rocker arm lifts the front center of the deck. It also drops through the lower frame but is directed by two pulleys under the mower frame to the front of the deck.

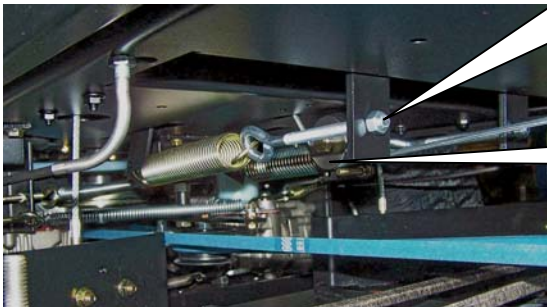

The deck lift system has two springs to assist in raising the deck. The ease of lifting the deck can be adjusted by tightening this nut equally on each spring.


The guide pulley for the front center deck lift cable.

Front guide pulley for the center lift cable.

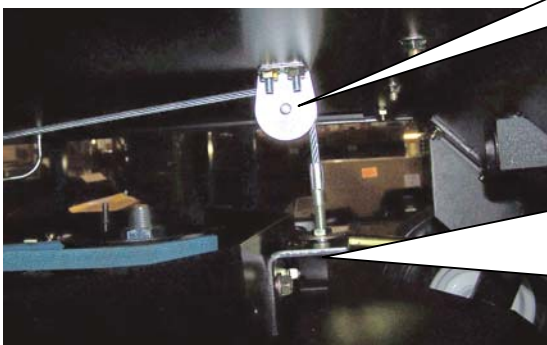


To level the deck, start by lowering the deck lift handle to its lowest position. If the deck is not setting on the ground, turn the nuts under these three brackets until it does. The left and right cables in the rear should then be tightened until the back end of the deck is level across and rides about 1/4 inch higher than the front end.

# DECK BELT REPLACEMENT

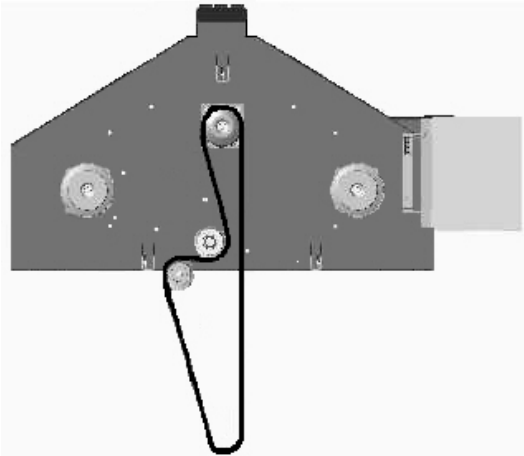


## ENGINE TO DECK BELT

- Lower the deck to lowest setting
- Loosen tension on tension idler
- Remove worn or damaged belt
- Using part# **10263** belt, route it around the engine pulley as shown in the diagram.
- Retighten the tension idler and check the operation

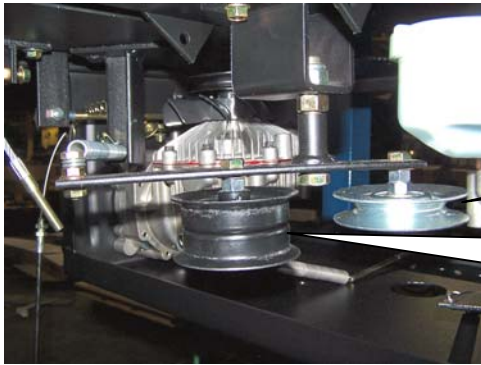

Belt coming from the electric clutch will be routed around this idler pulley on the outside.

As belt leaves the previous idler pulley it will be routed around this flat idler pulley to the inside and then forward to the deck.

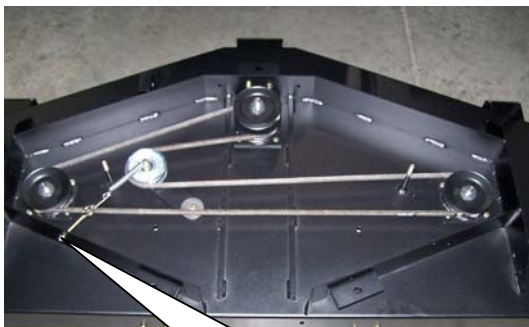


Tension on belt can be adjusted by tightening or loosening this nut.

## DECK CROSS BELT

- Remove the belt covers
- Remove the engine to deck belt from deck pulley
- Loosen the tension to the tension idler
- Remove the worn or damaged belt and replace with part# **5058** belt
- Reinstall the engine to deck belt and retighten both tension idlers

# REPAIRING OR REPLACING BLADE DRIVER

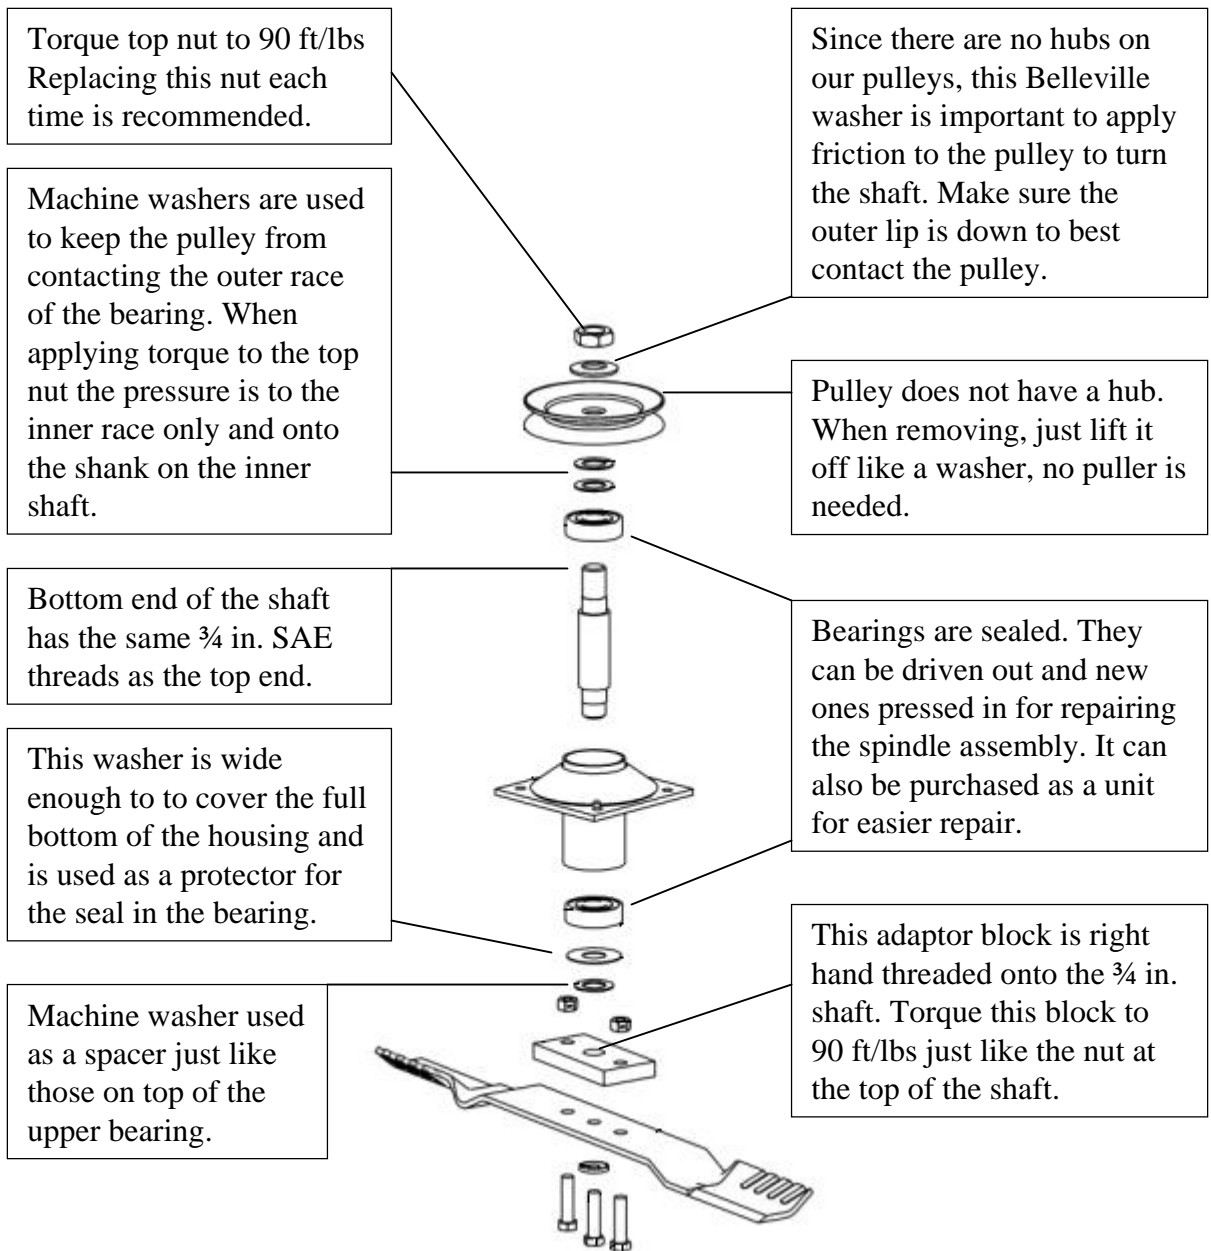

Install the blade adaptor block to the bottom of the shaft. Before applying torque, install the blade to the block using only the outer two bolts. Leave the center bolt out for now. Block the blade to outer deck edge by using a 4x4 or similar stop. Using a torque wrench on the top nut above the pulley, apply 90 ft/lbs. The top nut and the adaptor block will equally receive the tightening. Now put the washer on the center bolt and install into the shaft. Torque the three bolts to 35 ft/lbs. The center bolt will lock the block so it won't come off.

# Replacement Parts

## Quick Reference

Swisher Part #	Part Description
9947	Rear Deck Lift Cable
9948	Front Deck Lift Cable
AS069	Fuse 10 Amp
6046	47" Hydro Belt
3756	20 x 10 x 8 Rear Tire
5058	122" Deck Belt
3293	20.5 Mulching Blade
10263	83" Engine to Deck Belt
10540	Blade Driver Assembly (outside)
10541	Blade Driver Assembly (center)

For additional assistance on service

Contact Swisher Mower Co., Inc.

Phone 1-800-222-8183

Fax 1-660-747-3160

E-mail [cust.serv@swisherinc.com](mailto:cust.serv@swisherinc.com)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>