

*Sunbeam*

# Sunbeam EasyMeasure™

## Electronic food scales

Instruction Booklet  
FS7600

Please read these instructions carefully  
and retain for future reference.



# Contents

<b>Sunbeam's Safety Precautions</b>	<b>1</b>
<b>Features of your Food Scales</b>	<b>2</b>
<b>Using your Food Scales</b>	<b>4</b>
<b>Care and Cleaning</b>	<b>4</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM EASYMEASURE FOOD SCALES.

- Always lift your kitchen scales from the base.
- Always operate on a flat level surface.
- Use two AAA 1.5V batteries (included).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the scales.
- The supply terminals are not to be short-circuited.
- Do not throw batteries into a fire.
- Do not place objects on top of the scales when not in use or in storage.
- Remove the batteries if the scales are not being used for a prolonged period.
- Please safely dispose of used batteries. Contact your local government with regards to battery disposal practices in your area.
- Always wear gloves and eye protection when dealing with leaking batteries.


**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Features of your Food Scales

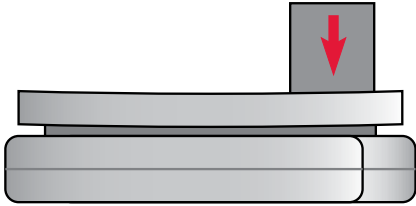

## Technology strain gauge

With Strain-Gauge technology, the Sunbeam Food Scales weigh ingredients accurately, regardless of where it is positioned on the weighing platform.


## Power saving LCD display


The large LCD display makes it easy to see weights and warnings.

## Unit measurements

The large LCD display will display either gram or ounce measurements for use with metric or imperial recipes. Fluid ounces and millilitres can be used when measuring water only.

**Note:** The maximum capacity the electronic kitchen scales will measure is 3kg.

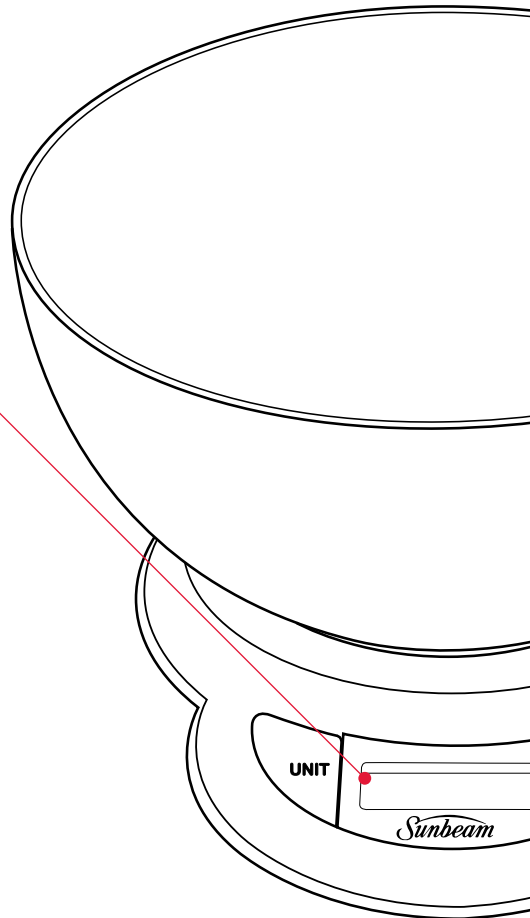

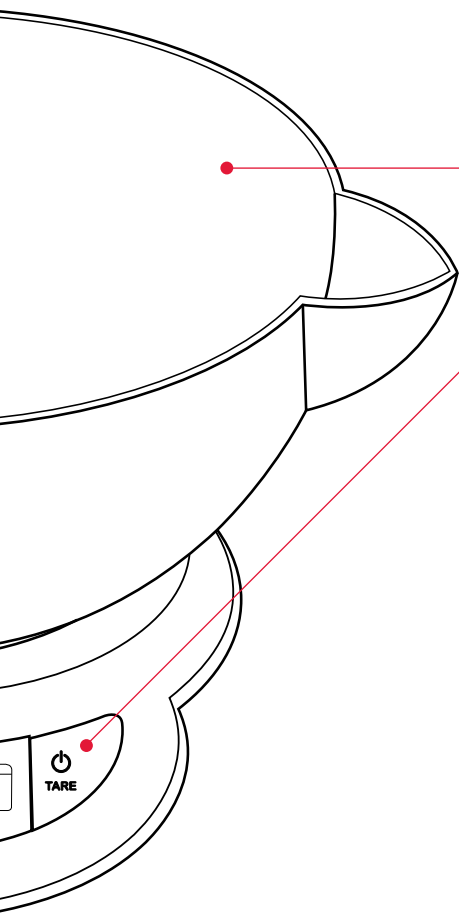

### **1.9L Measuring bowl**

Large 1.9L capacity bowl is ideal for measuring dry and wet ingredients.

### **Tare function**

'Tare' function allows you to zero the weight of any type of container to which consecutive ingredients can be added, yet weighed individually.

### **Sleep mode and Automatic power off function**

If the electronic kitchen scales measure 0g (or 0ml, 0fl oz, 1b0 0.0oz) for 30 seconds, it will enter sleep mode and the LCD light dims. If no button is pressed and no weight placed on the scales, the scales automatically switch off after 2 minutes and 30 seconds.


### **Low battery indicator**

When the life of the batteries is low the LCD display will show 'LO'.

# Using your Food Scales


1. Ensure two AAA 1.5V batteries are installed in the battery compartment with the correct polarity as indicated by the "+" and "-" symbols inside the compartment in the underneath of the unit. Check that the battery cover is in place. Place scales on a flat level surface.

**Note:** Rechargeable batteries are not suitable for the Electronic Kitchen Scales.

2. If using the bowl or any other container, place container on platform before turning on the scales.
3. Turn on the Electronic Kitchen Scales by pressing the  button. The LCD will display 'HI' as a greeting, then '0' g (or ml, fl oz, lb oz). The scales are now ready for use.
4. The electronic kitchen scales weigh in grams or ounces. Fluid ounces and millilitres can be used when measuring water only. To select your preference, simply press the **Unit** button.
5. Place ingredients either in the container or directly onto the weighing platform. The weight will be displayed on the LCD display. As more ingredients are added the weight displayed on the LCD will automatically increase.

## Tare function

Your electronic kitchen scales allow you to add consecutive items to the container, whilst weighing each item individually.

1. Follow steps 1 - 5 in using your electronic kitchen scales.
2. Press the  button and wait until the LCD displays 0. Then add your next ingredient to the

bowl. The LCD will display the weight only of the last item added.

3. Repeat step 2 for weighing any additional ingredients.

## Overloading function

When the electronic kitchen scales are overloaded, the LCD will display: '**OL**'

Remove the weight immediately, as the excess weight may damage the scales.

## Low battery indicator

When the battery is running low, the LCD will display: '**LO**'.

Replace the two AAA 1.5V batteries.

## Replacing your batteries

1. To replace your batteries, remove the battery cover on the underside of the scales.
2. Insert two new AAA 1.5V batteries into the battery compartment following polarity marked on the product and press firmly into place.
3. Replace the battery cover.

**Note:** Remove the batteries whenever the scales will be stored for a prolonged period of time. Exhausted batteries are to be removed from the scales. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity.

# Care and Cleaning

Turn the electronic kitchen scales off when not in use and remove the batteries if storing for prolonged periods.

**Note:** Never store with anything on top of your food scales, as the excess weight may damage them. Wipe the weighing platform with a soft, slightly

damp cloth and wipe dry. For stubborn dirt, wipe with a damp cloth and mild detergent and wipe dry.

**Do not place the food scales in the dishwasher.**

**Note:** Never immerse the food scales in water.

# 12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

## **Australia**

[www.sunbeam.com.au](http://www.sunbeam.com.au)

**1300 881 861**

Units 5 & 6, 13 Lord Street  
Botany NSW 2019 Australia

## **New Zealand**

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)

**0800 786 232**

26 Vestey Drive, Mt Wellington  
Auckland, New Zealand

## Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

### In Australia


Visit [www.sunbeam.com.au](http://www.sunbeam.com.au)

Or call 1300 881 861

### In New Zealand

Visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)

Or call 0800 786 232

 is a registered trademark.

'Sunbeam EasyMeasure' is a trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2011.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street  
Botany NSW 2019 Australia

Unit 3, Building D  
26 Vestey Drive  
Mt Wellington Auckland  
New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>