 


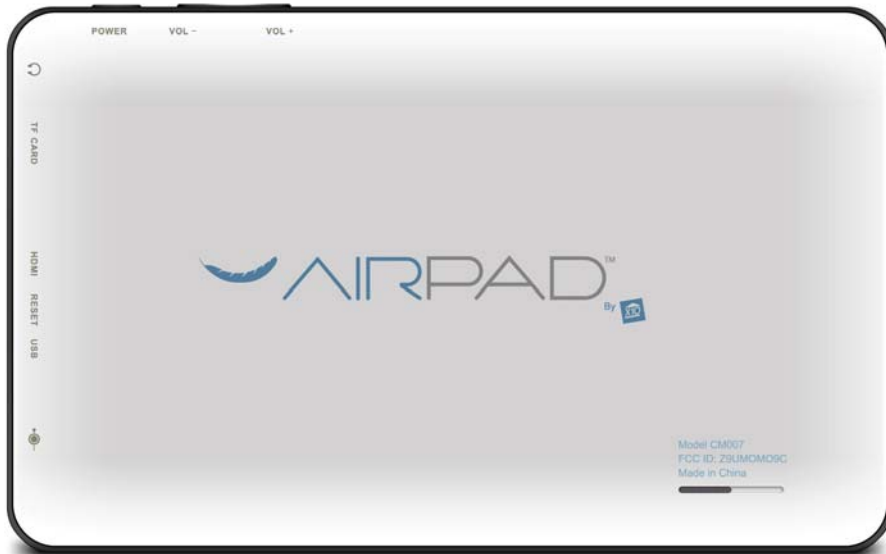

Owner's Manual



**X10.com, a Division of
X10 Wireless Technology, Inc.
400 Forge Way, Suite 409-412,
Rockaway, NJ 07866**

CM007-1/12

Model AirPad7p

Read First

FCC Caution

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, may cause interference to radio communications. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of *FCC Rules*, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio communications, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Modifications to this product will void the user's authority to operate this equipment.

WARRANTY & RETURN POLICY: You may return your AirPad for a full refund within 14 days of purchase. X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants your AirPad to be free from defective material and workmanship for a period of 90 days from the original date of purchase. X10 agrees to repair or replace with new or refurbished product, at its sole discretion, a defective AirPad if returned to X10 within the warranty period in like new condition, with all original packaging and accessories, a proof of purchase, and RMA. A 15% restocking fee will be charged for non-defective opened product. If service is required under this warranty or to request an RMA: Please call 1-800-442-5065, visit www.x10.com, or e-mail support@x10.com.

Contents

Introduction.....	4
Getting Started	6
Accessing the System Settings.....	7
Setting the Date and Time.....	8
How to use Wi-Fi on the AirPad.....	10
Installing Apps	11
Uninstalling Apps.....	13
Moving Apps between screens.....	14
Transferring files from your PC	16
How to listen to Music.....	17
How to watch Movies and Videos	18
Using Wallpaper.....	18
Using a Wi-Fi Hotspot	18
Recently used Apps.....	19
How to connect the AirPad to a TV	19
Using and external microSD card	20
How to move Apps to a microSD Card	20
Battery Performance	21
Resetting to Factory Settings	22

Introduction

Congratulations! You're now the proud owner of the newest technology in tablets. Powered by Android 4.0.1 (Ice Cream Sandwich), the X10 AirPad 7P is equipped with a powerful 1.2 GHz Allwinner A10 Cortex A8 processor, it has a brilliant color screen, 4 GB onboard memory (plus an additional 32 GB with microSD card, not included), a built-in camera/video recording device, and access to thousands of Apps in the Amazon Market. You'll find your AirPad 7P to be extremely fast, with a very responsive touch screen.

Your AirPad 7P has all of the features you could want. It's like you're fitting a movie screen, MP3 player, e-book reader, Internet, video game console and more into your pocket.

Now you don't have to buy a Kindle, you can download the App FREE from the Amazon Market.

Here's some of the many other things your AirPad can do:

Games

There are many free games available on the Amazon Market. Just a few examples are Angry Birds, Sudoku, Fruit Ninja, and Dragon Fly. Just go to the Amazon Market, search for the name and download it.

Productivity

You can get useful Apps like Facebook, Twitter, Skype, DropBox (file sharing), OpenTable (restaurant reservations), Mapquest, Wikipedia, Photoshop Mobile – all run very nicely on your AirPad and make life on the go easy and fun.

Introduction, cont.

Entertainment

You can get Pandora Radio, free from the Amazon Market. It lets you select different genres of music and stream them to your AirPad. Just go to Amazon Market, search for and download Pandora Internet Radio, then create and sign in to your account.

Shazam – just tap on the screen and Shazam listens to and identifies any song it hears. It even tells you who sang it, what album it's on, and gives you the opportunity to buy it on-line.

Play videos and movies – Download YouTube from Google, watch Flash content with your Browser.

Download the Netflix App and watch streaming videos on your AirPad (requires a Netflix account).

Install the RedBox App and rent movies that you pick up from any RedBox kiosk (requires a RedBox account).

Transfer movies from your laptop or PC to your AirPad via a mini USB cable (included with your AirPad).

Or purchase a microSD card that you can plug into your PC, transfer movies to, then plug into your AirPad.

You can connect your AirPad to a TV, via an HDMI cable (sold separately) so you can watch video on a big screen.

And of course e-mail. If you don't already have an account just go to mail.google.com and sign up for a free Gmail account, or get other e-mail such as Yahoo or AOL via your browser.

Getting Started

First charge the battery in your AirPad, connect the power supply to the POWER jack on the side of your AirPad (not the headphone jack) and plug the power supply into an AC outlet. It may take up to 4 hours to fully charge the unit.



The AirPad does NOT charge via the included USB cable.

For best battery performance leave your AirPad charging overnight or when not in use. See also page 21.

You can read various sections of this manual at any time to learn how to accomplish specific tasks. You can also visit X10's Wiki on-line at: <http://kbase.x10.com/wiki/airpad7p-ics>

Also see our AirPad Forums at: <http://forums.x10.com>

To turn your AirPad on

Press and hold the POWER button on the top of the unit until the Android logo appears on the screen. Release the button and wait while the unit "boots up." Then swipe the lock icon to the right with your finger to unlock it.

 
To suspend the AirPad (Sleep mode)

Note that this still uses power and can run the battery down quite quickly if Wi-Fi is turned on. The AirPad will go to sleep by itself if you do nothing for a while. To force it to go into sleep mode, press and release the round POWER button on the top of the unit.

To turn the AirPad completely off (shut it down)

Press and hold the round POWER button on the top of the unit until you see a screen that shows the option to Power off. Touch that button on the screen. Then touch OK. Next time you power on you will need to follow the steps above. If however the AirPad was just "asleep" then just pressing the POWER button displays a screen where you can swipe the lock icon with your finger to unlock it.

Getting Started, cont.

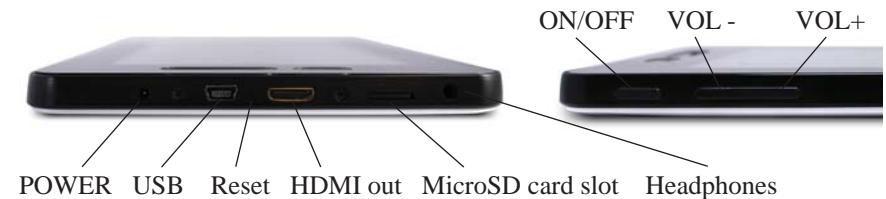

Accessing the System Settings

Throughout this owner's manual we'll use a couple of different methods for accessing the System Settings section. There are several ways to get to the System Settings, either way works fine, and it's up to you which method you prefer:

Method 1

1. On your Home screen, touch  (top right of the screen).
2. Touch on the Settings icon. 

Method 2

1. On your Home screen, touch the hard Menu key, to the bottom right of the screen, below the hard Home key.
2. A pop-up menu appears (at the bottom right of the screen). Touch **System Settings**.





Accessing the Settings section, cont.

Method 3

1. On your Home screen, Touch the time (bottom right of the screen).
2. Touch the Settings icon in the bottom right of the screen, under the time.



A pop-up menu appears where you can select Airplane Mode, WiFi Settings, Screen Brightness, Notifications, **System Settings**, etc.

 
The back symbol  at the bottom left hand corner of the screen takes you back one screen each time you touch it. (You can also press the hard key to the right of the screen).

The House symbol  takes you to your Home screen at any time. It is at the bottom left of the screen, next to the Back symbol. (You can also press the hard key to the right of the screen).

Setting the Date and Time

To Set the Date and Time


1. On your Home screen, touch  (top right of the screen)
2. Touch on the Settings icon. 

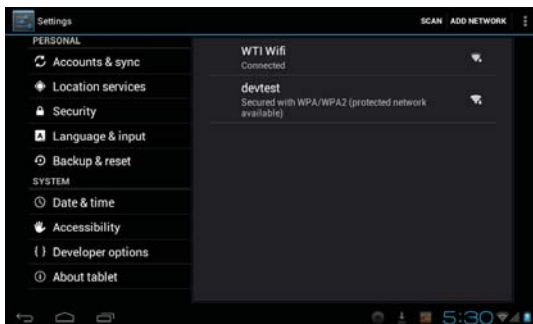


8

Setting the Date and Time, cont.

 3. Scroll down and touch Date & time.

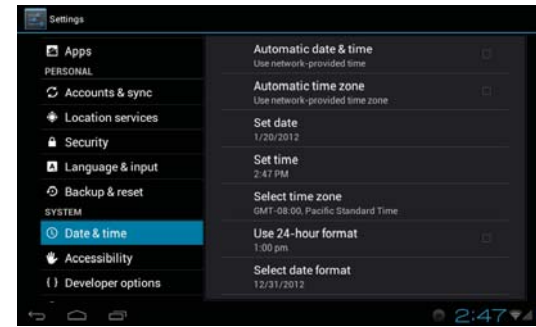

 
3. Uncheck Automatic date & time, and Automatic time zone.

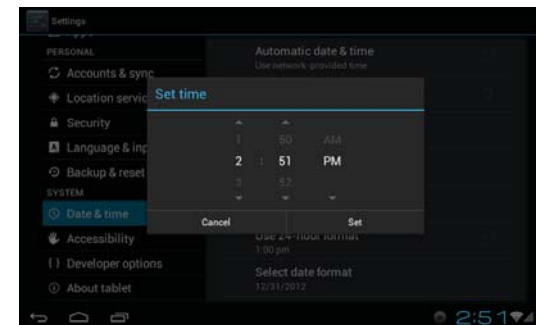

4. Touch Set time.
5. Set the correct time and touch Set.
6. Touch Set date. Select the correct date and touch Set.
7. Touch Select time zone. Scroll and select your time zone.
8. Similarly, set other options such as time and date format.
9. If desired, recheck Automatic date & time, and Automatic time zone.

Touch the Home icon  (bottom left of screen) or the hard key to the right of the screen to exit back to your Home screen.



You can also repeatedly touch the back  icon or hard key.

9

Using Wi-Fi

In order to connect to the Internet you'll need to turn on Wi-Fi. (See also Wi-Fi Hotspot on page 18.)


How to Use Wi-Fi

1. On your Home screen, touch  (top right of the screen).
2. Touch on the Settings icon. 
3. Touch WiFi OFF (it changes to ON). Available networks will be displayed.



4. Touch your network and enter your password.

 


5. After it shows “Connected”, touch the Home icon  or press the hard Home key to the right of the screen, to exit back to your Home screen.

Installing Apps

You'll want to install the Amazon Android Appstore so you can download FREE Apps, and purchase other ones. Note you will first need to go to amazon.com and set up a free account if you don't already have one.

1. On the Home screen touch the Browser icon to launch the Browser, and type in www.amazon.com/app-email. The Amazon Android Appstore app will download to your AirPad. You'll Download Started in the notifications bar near at the bottom right of the screen. When complete it will say downloaded.
2. Touch and pull up your notifications bar at the bottom of the screen and touch Amazon_Appstore-release.apk
3. Touch the INSTALL button.
4. After the installation finishes, touch the OPEN button and sign into your Amazon account. Below shows the Appstore.

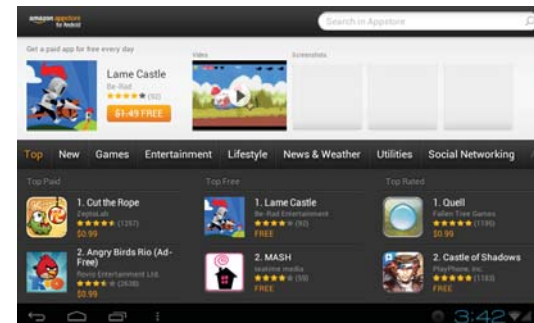


Your AirPad makes an excellent e-book reader. You can download and install FREE readers from the Amazon Android Appstore, including the popular Kindle.

Installing Apps, cont.

 
How to install a typical App from Amazon Android Appstore

We will use the Kindle App as an example. These basic procedures work for other Apps too.

1. On your Home screen, touch  (top right of the screen).

2. Touch the Amazon Appstore icon. 
The screen shown at the bottom of page 11 is displayed.

3. In the Search Market box, type: kindle for. As you type, various matches will be displayed. When you see **kindle for android tablet** displayed, touch it.

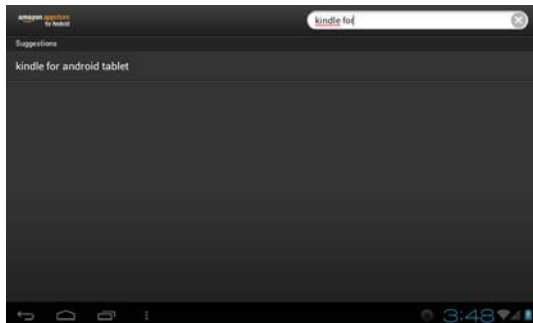

4. Touch the **Kindle for Android** icon.

5. Touch Install. Then touch OK. When “Application installed” is displayed, click Done.

Touch the Home icon  (bottom left of screen) or press the hard key to the right of the screen to exit back to your Home screen.

Touch the Amazon Kindle icon on the main Apps screen to launch Kindle.

 
Uninstalling Apps

Uninstalling Apps


1. On your Home screen, touch  (top right of the screen).

2. Touch on the Settings icon. 

3. Touch **Apps**.

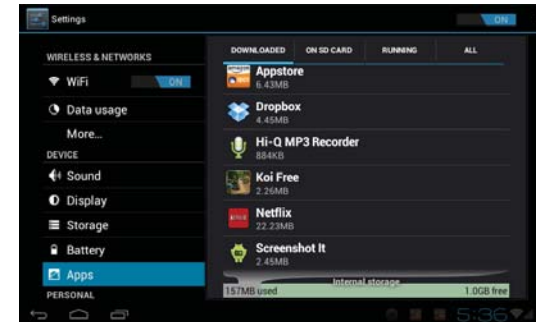

 4. Scroll to and then touch the application you want to uninstall. Here, we demonstrate the uninstallation of Netflix.

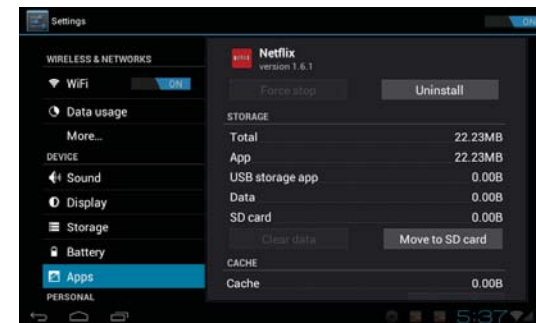

5. Touch Uninstall.

6. Touch OK.

7. When you see Uninstall Finished, touch OK.


Touch the Home icon  (bottom left of screen) or the hard key to the right of the screen to exit back to your Home screen.

Moving Apps between screens

The Home Screen.



Copying App icons from your main Apps screen to your Home Screen

1. On your Home screen, touch  (top right of the screen) to access the main Apps screen.
2. Find and touch the icon for the App you want to copy to your Home screen.
3. Hold your finger on the App icon until your Home screen appears.
4. Release your finger from the icon.
5. A copy of the icon for that App is now duplicated on your Home screen.

To remove an App icon from your Home Screen, touch and hold the icon until the trash can appears (at the top of the screen) and then drag the icon to the trash. When the trash can turns red, release your finger from the screen.

Note this does NOT remove the icon from your main Apps screen, nor does it uninstall the App. (See previous page to uninstall Apps).

Moving Apps between screens, cont.

Moving Apps between the 5 screens

There are 5 discrete Home screens on your AirPad 7P.

You can see the individual screens by swiping your finger from left to right. The Main Home screen is the screen in the middle of the 5 screens.

To move Apps around on a screen, or from one screen to another, touch and hold the icon for the App you want to move. You will notice that you can then drag the icon around the screen. Drag it to an open spot on that screen, or drag it off to the left or right of the screen and hold it until the screen you want to move it to is shown, then release your finger from the screen.

Some practice might be necessary to get the hang of how to hold your finger on an icon for an App, how to move your finger off the edge of the screen, and when to release your finger.

 
Note: There are also 5 “Main screens” where installed Apps and Widgets are shown. You can copy Widgets from the Main screens to your Home Screens in the same way as described on the previous page for copying Apps to your Home screens.

Transferring files from your PC

You will need the included USB A to Mini-B cable to do this:



1. Connect the cable to your PC and to the AirPad.
2. Hold the AirPad in a horizontal orientation. You will see a USB symbol in the notification bar at the bottom right of your AirPad's screen.
3. Touch the USB symbol and drag it up to bring up the notification menu.
4. Touch USB Connected.
5. In the window that appears, touch the Turn On USB storage button.

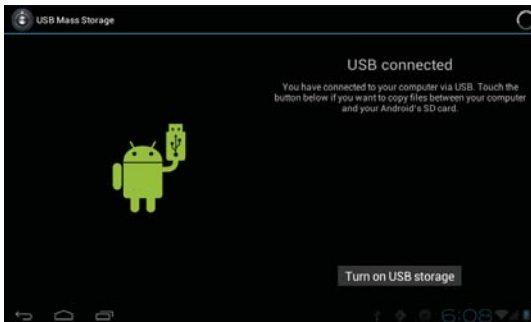

Transferring files from your PC, cont.

Your AirPad will now appear as two different Removable Storage Devices in “My Computer” on your PC - one for the main device memory, and one for the MicroSD card.

Transfer files like you would transfer from any drive to another.

Once you are finished transferring files, follow these steps:

1. Click on the Safely Remove Hardware icon in your PC's System Tray, next to the clock. Click on Eject, or Safely Remove USB Mass Storage Device.
2. On your AirPad, touch Turn off USB storage.



Touch the Home icon  (bottom left of screen) or press the hard key to the right of the screen to exit back to your Home screen.

How to listen to Music

1. Download music files from the Internet, or transfer them to your AirPad from your PC or laptop. (See Transferring files from your PC on pages 16 & 17).
2. On the main Apps screen, or on your Home screen if you copied the icon there, find and touch the Music icon.
3. Find and touch the music file you want to play.

How to watch Movies or Videos

1. Download video files from the Internet, or transfer them to your AirPad from your PC or laptop. (See Transferring files from your PC on pages 16 & 17).
2. On the main Apps screen, or on your Home screen if you copied the icon there, find and touch the Super-HD Player icon.
3. Find and touch the movie or video file you want to play.

Using Wallpaper


1. On your Home screen, touch the hard Menu key, to the bottom right of the screen, below the hard Home key.
2. A pop-up menu appears (at the bottom right of the screen). Touch **Wallpaper**.
3. Select the wallpaper you desire, and touch Set wallpaper.

 
Note that Live wallpaper consumes battery power.

Using a Wi-Fi Hotspot

You can connect to the Internet from your AirPad by Wi-Fi if you are near a Wi-Fi router, such as in your home or office. (See turning on Wi-Fi on page 9). Or by using a local Hotspot such as you can find at Airports, Hotels, and some coffee shops, for example. Some cell phones act as a Wi-Fi Hotspot, allowing you to connect your AirPad to your cell phone via Wi-Fi and then connect to the Internet via your cell phone. You can also purchase a stand-alone Wi-Fi Hotspot from many major cell phone service providers (contract required from your provider). The AirPad connects to the Hotspot via Wi-Fi and then the Hotspot connects to the Internet via 3G or 4G broadband.

Recently Used Apps

If you touch the  symbol in the bottom left of the screen, your most recently viewed Apps pop up. You can scroll through them and select an App to open it.

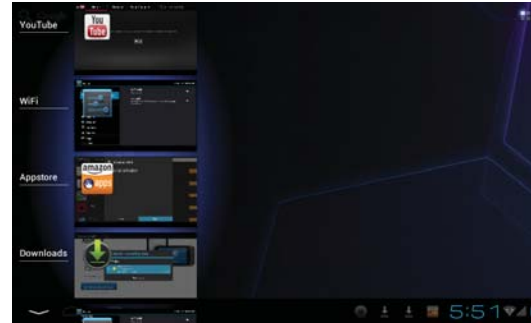

Connecting to a TV

How to connect the AirPad to a TV

First, make sure your TV has an HDMI input, you will also need a mini HDMI cable (sold separately). Connect the AirPad to your TV with the cable, then follow the instructions in your TV's manual to view the correct HDMI video input.

Notes:

When using the camera function while connected to a TV the camera image only appears on the AirPad's screen.

When watching a movie or video while connected to a TV the controls appear on both screens but the movie only appears on the TV screen.

Managing your AirPad

Using an external microSD card

You can add more memory to your AirPad by purchasing a microSD card, they come in various capacities. Hold the card parallel to the slot (not at an angle) and push it in. You will feel a slight resistance before it seats itself.

To remove the microSD card: Go to Settings, touch Storage, and scroll down the left panel until you see Unmount SD card. Touch Unmount and then touch OK.



Press on the card and it will pop out.

How to move Apps to a microSD Card

 
After you've installed a lot of Apps on your AirPad, you might get a message saying that there's not enough memory left to install another App. You can free up some memory by moving some Apps from the main memory to the microSD card:


1. On your Home screen, touch the hard Menu key, to the bottom right of the screen, below the hard Home key.
2. A pop-up menu appears (at the bottom right of the screen). Touch **Manage apps**.
3. Scroll to and touch the App you want to move.

Managing your AirPad, cont.

How to move Apps to a microSD Card, cont.

4. Touch Move to SD card, the button changes to Moving. After it's moved, or if the App is already on the SD card, you will see an option to Move to tablet.

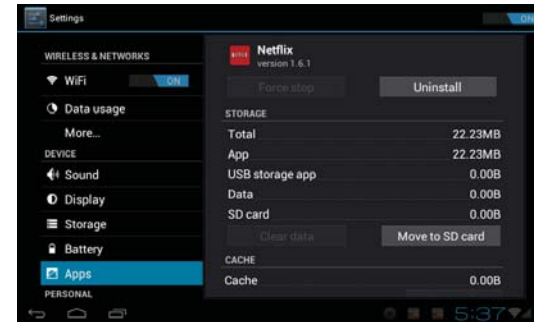

Touch the Home icon  (bottom left of screen) or the hard key to the right of the screen to exit back to your Home screen.

Battery Performance

For best battery performance leave your AirPad charging overnight or when not in use.

You can get longer battery life if you don't use active wallpaper. See how to change your wallpaper on page 18.

Turn off Wi-Fi when you don't need it.

 
Resetting to Factory Settings

If you play around and install a bunch of Apps to get familiar with your AirPad you might want to know how to put your AirPad back to its factory condition. Follow these instructions to do this:

1. On your Home screen, touch the hard Menu key, to the bottom right of the screen, below the hard Home key.
2. A pop-up menu appears (at the bottom right of the screen). Touch **System settings**.
3. Touch Backup and reset
4. Touch Factory data reset.



4. Check the box for Erase SD card if you also want to erase everything on the MicroSD card.

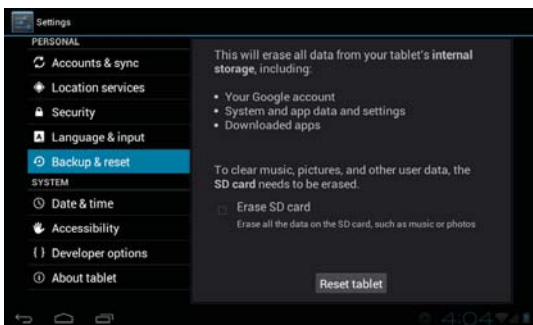

5. Touch Reset tablet (at the bottom of the screen).
6. If you really want to reset your AirPad, touch Erase everything.
Be careful since this is not reversible.
7. Wait a few minutes while your AirPad restarts.

Specifications

CPU: 1.2 GHz Allwinner A10 Cortex A8 processor + 396 MHz DSP.
Display: 7" 800 x 480 resolution TFT LCD screen.
Touch-screen: Capacitive multi-touch, 5 point touch.
OS: Android 4.0.1 (Ice Cream Sandwich), with Flash 10.3.
Camera: 1.3 Megapixel camera with video recording and playback.
Sensors: 3-axis accelerometer.
RAM: 512 MB.
Memory: 4 GB onboard, up to 32 GB with microSD card.
Battery Life: 8 hours movie, 30 hours music, 6 hours Wi-Fi Internet access.
Network: Wi-Fi (802.11b/g/n).
Ports: HDMI supporting 2160P (2 x 1080) output, USB.
Size: 197 mm x 122 mm x 12.5 mm, Weight 360g (12.7 oz).
Battery: 4500 mAh rechargeable lithium polymer.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>