



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMV53A00GB. You'll find the answers to all your questions on the BOSCH SMV53A00GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH SMV53A00GB
User guide BOSCH SMV53A00GB
Operating instructions BOSCH SMV53A00GB
Instructions for use BOSCH SMV53A00GB
Instruction manual BOSCH SMV53A00GB



en Operating instructions



[Your user manual](#)
[BOSCH SMV53A00GB](#)

Manual abstract:

Delivery – Check the packaging and dishwasher immediately for damage caused in transit. Do not switch on a damaged appliance, but contact your supplier. – Please dispose of the packaging material in an environmentally friendly manner. – Do not let children play with packaging and its parts. There is a risk of suffocation from collapsible boxes and film. Installation Read the “Installation” chapter to learn how to install and connect the appliance correctly.

⚠=Warning Knives and other utensils with sharp points must be placed in the cutlery basket with the points downwards or horizontally on the knife shelf. * depending on model 4 en Children in the household – If fitted, use the childproof lock. An exact description can be found in the back of the envelope. – Do not allow children to play with or operate the appliance.*

– Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. – Keep children away from open dishwasher. The water in the rinsing compartment is not drinking water and could contain detergent residue. Ensure that children do not place fingers in the tablet collecting tray 12.

*Small fingers could become caught in the slots. – If the appliance is installed at eye-level, ensure when opening and closing the door that children are not caught or crushed between the appliance door and the cupboard door situated below. Childproof lock (door lock) * oD lckr The description of the childproof lock is at the back in the envelope. * depending on model Damage – The appliance may be repaired and opened up by a technician only. To do this, disconnect the appliance from the power supply.*

Pull out the mains plug or switch off the fuse. Turn off the tap. Disposal – Make redundant appliances unusable to prevent subsequent accidents. – Dispose of the appliance in an environmentally friendly manner. ⚠=Warning Children could become locked in the appliance (risk of suffocation) or find themselves in other dangerous situations. Therefore: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. 5 en Getting to know your appliance Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front.

Individual positions are referred to in the text. Overview of menu The settings can be found in the individual chapters.

*Water Hardness : - : Intensive drying : - : Rinse aid : - : Hot water : - : End of programme buzzing sound : - : Automatic disconnection : - : Optical display while the programme is running : - : Control panel (0 8 @ H P X `h)" ON/OFF switch Programme buttons ** Display “Check water supply” Salt refill indicator Rinse aid refill indicator Timer programming * Additional options ** START button Digital display Door opener * depending on model ** Number depending on model Appliance interior 1" 1* 12 1: 1B 1J 1R 1Z 1b 1j 9" 9* 92 Top basket Knife shelf * Tablet collecting tray Top spray arm Bottom spray arm Dispenser for special salt Filters Cutlery basket Bottom basket Dispenser for rinse aid Detergent dispenser Lock for detergent dispenser Rating plate * depending on model 6 en Water softening system To ensure good washing results, the dishwasher requires soft water, i.e. containing low amounts of lime, otherwise white limescale will be deposited on the utensils and inner container. Tap water above 9° Clarke must be softened. The water is softened with salt (regeneration salt) in the water softening system of the dishwasher. The setting and therefore the required amount of salt depends on the degree of hardness of your tap water (see table). Water hardness table :DWHU KDUGQHVV YDOXH □&ODUNH +DUGQHVV UDQJH PPRO□□ 6HW YDOXH RQ WKH PDFKLOH □8□ □8□□ □□8□□ □□8□□ □□8□□ □□8□□ □□8□□ □□8□□ □□8□□ VRIW VRIW PHGLXP PHGLXP PHGLXP KDUG KDUG KDUG □8□□□ □□□8□□□ □□□8□□□ □□□8□□□ □□□8□□□ □□□8□□□ □□□8□□□ □□- □□-³ □□-□ □□-` □□-□ □□-□ □□± □□-Å Setting The amount of salt dispensed can be set from : to : . Salt is not required at the set value : . – Find out about the hardness value of your tap water. Your water utility company will help you with this.*



[Your user manual](#)
[BOSCH SMV53A00GB](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>