

Breville



BTA820 2 SLICE MOTORISED TOASTER
BTA840 4 SLICE MOTORISED TOASTER
Instructions

Professional
800 COLLECTION™

Breville



CONTENTS

6	Breville Recommends Safety First
7	Know Your Breville Professional 800 Collection™ 2 slice Toaster
8	Know Your Breville Professional 800 Collection™ 4 slice Toaster
9	Operating Your Breville Professional 800 Collection™ Toaster
18	Cleaning

Congratulations on the purchase of your new Breville Professional 800 Collection™ Toaster.

At Breville, we are proud of our innovations. Our Professional 800 Collection™ appliances are designed to be the best in their class. When we set out to design this collection we were determined to add an exceptional toaster, one that would stand proud in any kitchen.

Unique features, such as automatic one-press Lift and Look™ and A Bit More™ ensures that you can monitor and control the progress of your toast.

The toaster's outstanding craftsmanship, made from heavy duty die cast materials and intelligent controls, makes this not only a durable but versatile toaster.

This is why we are confident that you will find the Professional 800 Collection™ toaster to be the best of Breville.

Enjoy!



BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS FOR YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

- Carefully read all instructions before operating and save for future reference.
- Remove and safely discard any packaging material or promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance
- Do not place the toaster near the edge of a table, counter or bench top during operation. Ensure the surface is level, clean and free of water.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep appliance clear of walls and other heat sensitive materials such as cloths and curtains.
- Do not use the toaster on sink drainboard.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the toaster whilst it is plugged into the power outlet or while hot.
- Do not place toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not move the toaster whilst in operation or when hot.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.

BREVILLE RECOMMENDS SAFETY FIRST (CONTINUED)

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a table or counter, touch hot surfaces, or become knotted.
- To protect against electric shock, do not immerse power cord, power plug or appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors
- It is recommended to regularly inspect the appliance. Do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville service centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

NOTE: THIS BREVILLE TOASTER IS ELECTRONICALLY CONTROLLED AND WILL NOT OPERATE UNTIL THE TOASTER IS PLUGGED INTO A 230/240 VOLT POWER POINT AND SWITCHED ON.

WARNING: NEVER OPERATE TOASTER ON ITS SIDE.

NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

KNOW YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ 2 SLICE TOASTER

Intelligent auto lowering

CRUMPET

Back-lit chrome capped buttons

DEFROST

TOAST/CANCEL

Automatic LIFT & LOOK™

A BIT MORE™

Extra wide slots with self centring carriage

Toast ready sound alert

Brushed diecast body

LED toasting progress indicator

Slide out crumb tray

Variable browning control

Cord storage



KNOW YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ 4 SLICE TOASTER

Intelligent auto lowering

Back-lit chrome capped buttons

TOAST/CANCEL

A BIT MORE™

Toast ready sound alert

Independent LED toasting progress indicator

Independent slide out crumb tray



DEFROST

CRUMPET

Automatic LIFT & LOOK™

Extra wide slots with self centring carriage

Brushed diecast body

Independent variable browning control

Cord storage

Operating

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 230/240 volt power outlet then turn the power on. The TOAST/CANCEL button surround will illuminate in white. The LED toasting progress indicator will illuminate in red from left to right, then align to the selected browning setting (indicated by the position of the browning control slide). The toaster will revert to stand-by mode after 30 seconds if a button is not pressed or the browning control slide is not adjusted.

NOTE: WHEN USING THE TOASTER FOR THE FIRST TIME, WE SUGGEST TOASTING ON THE MAXIMUM SETTING WITHOUT BREAD. THE TOASTER MAY EMIT A THIN SMOKE OR DISTINCT ODOUR ON INITIAL USE. THIS IS NORMAL AND NOT DETRIMENTAL TO THE PERFORMANCE OF THE TOASTER.

2. Place 1 slice of bread, 1 crumpet or half an English muffin only, into each of the toasting slots.

Ensure items for toasting are not too large or too thick to fit in the toasting slots.

The BTA820 has a single browning control slide and row of function buttons that simultaneously control the two toasting slots.

The BTA840 has dual independent controls allowing each pair of slots to work independently so you can simultaneously toast to different preferences.

3. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest). The LED toasting progress indicator will illuminate in red and align to the selected browning setting (as indicated by the position of the browning control slide).

NOTE: WHEN USING THE TOASTER FOR THE FIRST TIME, IT IS SUGGESTED TO TOAST ON BROWNING SETTING '3'. VARIOUS TYPES OF BREAD AND PERSONAL PREFERENCE MAY REQUIRE A DIFFERENT BROWNING SETTING. FOR EXAMPLE, RAISIN TOAST AND WHITE LIGHT-TEXTURED BREADS MAY REQUIRE A LIGHTER SETTING, WHILST HEAVIER TEXTURED RYE BREADS MAY REQUIRE A DARKER SETTING.

4. To start the toasting process, press the TOAST/CANCEL button on top of the toaster. The TOAST/CANCEL button surround will illuminate in red and the carriage will automatically lower into the toasting slots which starts the toasting cycle. As the carriage automatically locks into position, the LIFT & LOOK™ button surround will illuminate in

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

- white and the LED toasting progress indicator (above the selected browning setting) will flash and start to gradually count down (towards the left) indicating the toasting progress.
- The LIFT & LOOK™ button can be pressed up until 10 seconds before the end of the toasting cycle to view the browning of the bread. When selected, the LIFT & LOOK™ button surround will flash and the LED toasting progress indicator will remain steady (indicating that the selected browning setting has not been interrupted by the carriage rising). The toasting recommences immediately as the carriage lowers and locks into position, and as indicated by the LIFT & LOOK™ button surround illuminating and the LED toasting progress indicator flashing.
 - Approximately 10 seconds before the end of the selected browning setting, the LIFT & LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
 - Once the toasting cycle has completed and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle.

NOTE: THE TOASTER WILL REVERT TO STAND-BY MODE AFTER 30 SECONDS IF A BUTTON IS NOT PRESSED OR THE SLIDE IS NOT ADJUSTED. THE TOAST/CANCEL BUTTON SURROUND AND LED TOASTING PROGRESS INDICATOR WILL CEASE ILLUMINATION.

NOTE: THE TOASTER WILL RE-ACTIVATE FROM STAND-BY MODE AND THE TOAST/CANCEL BUTTON SURROUND AND LED TOASTING PROGRESS INDICATOR WILL ILLUMINATE WHEN:

- ANY OF THE BUTTONS ARE PRESSED.
- THE BROWNING CONTROL SLIDE IS MOVED.
- THE POWER AT THE POWER OUTLET IS TURNED OFF THEN ON AGAIN.

WARNING: DO NOT LEAVE THE TOASTER UNATTENDED WHEN IN USE AS TOAST MAY JAM.

IN THE UNLIKELY EVENT THAT BREAD, CRUMPETS OR MUFFINS BECOME JAMMED IN THE TOASTING SLOTS, ALL THE BUTTONS AND THE LED TOASTING PROGRESS INDICATOR WILL FLASH AND THE ELEMENTS WILL TURN OFF. SWITCH THE TOASTER OFF AT THE POWER OUTLET, REMOVE THE POWER PLUG AND ALLOW THE TOASTER TO COOL COMPLETELY BEFORE CAREFULLY EASING THE BREAD OUT OF THE SLOTS. TAKE CARE NOT TO DAMAGE THE ELEMENTS.

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

TOAST/CANCEL BUTTON

The TOAST/CANCEL button surround will illuminate in white for up to 30 seconds when the appliance is turned on. The toaster will revert to stand-by mode after 30 seconds if a button is not pressed or the browning control slide is not adjusted.

- Press the TOAST/CANCEL button once to lower the carriage and start the toasting process. The TOAST/CANCEL button surround will then illuminate in red.
- Press the TOAST/CANCEL button during operation to cancel the toasting process or any other function. The TOAST/CANCEL button illumination will change from red to white and stay illuminated for up to 30 seconds.

NOTE: TOASTING CAN BE STOPPED AT ANY TIME BY PRESSING THE TOAST/CANCEL BUTTON LOCATED ON THE TOP OF THE TOASTER. THIS WILL CANCEL THE OPERATION AND THE CARRIAGE WILL MOVE TO THE RAISED POSITION.

NOTE: THE BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER FEATURES A LIFT & LOOK™ BUTTON. THIS AUTOMATICALLY RAISES THE CARRIAGE WITHOUT CANCELLING OR RESETTING THE SELECTED BROWNING SETTING. USE THE LIFT & LOOK™ BUTTON TO VIEW BROWNING PROGRESS DURING THE TOASTING AND, IF NECESSARY, CANCEL THE PROCESS WHEN THE DESIRED TOAST COLOUR IS ACHIEVED.

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

A BIT MORE™ BUTTON

This feature can be selected after or during the toasting cycle.

To use this feature during the toasting cycle:

- 1a. The A BIT MORE™ button surround will illuminate in white when selected. The toasting time will automatically increase but will not illuminate more of the LED toasting progress indicator. A BIT MORE™ function can be cancelled by pressing the A BIT MORE™ button again and the original toasting cycle will continue.

To use this feature after the toasting cycle has completed:

- 1b. The A BIT MORE™ button surround will illuminate in white when selected. The carriage will automatically lower and begin the additional toasting time. The LED toasting progress indicator will automatically align with the lowest browning setting then flash and count down for the additional browning time.

2. The TOAST/CANCEL button surround will also illuminate in red and the LIFT & LOOK™ button surround will illuminate in white allowing you to check on the toasting progress and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.
3. Approximately 10 seconds before the end of the additional browning, the LIFT & LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash, the LED toasting progress indicator will cease flashing and the A BIT MORE™ button surround will cease illumination. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.

4. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle.

NOTE: A BIT MORE BUTTON™ CAN BE USED WITH THE TOAST, CRUMPET AND DEFROST FUNCTIONS.

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

CRUMPET BUTTON

This feature activates additional heat to the middle heating elements to perfectly toast crumpet tops and lightly toast the crumpet bases.

To toast crumpets:

1. Place the crumpets into the toasting slots with crumpet tops facing inwards as per the crumpet markings above the middle elements of the toaster.
2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest).
3. Press the TOAST/CANCEL button and the surround will illuminate in red then press the CRUMPET button and the surround will illuminate in white. The crumpets will automatically lower into the toasting slots. The middle and side heating elements will automatically adjust.
4. The LIFT & LOOK™ button surround will also illuminate in white allowing the toasting progress to be checked and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.
5. Approximately 10 seconds before the end of the selected browning setting, the LIFT & LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the crumpets. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle. The CRUMPET button surround will remain illuminated and should be pressed once to cancel if a subsequent toasting function is required. The CRUMPET button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point

NOTE: PLACE THE CRUMPETS INTO THE TOASTING SLOTS WITH CRUMPET TOPS FACING INWARDS AS PER THE CRUMPET MARKINGS ABOVE THE MIDDLE ELEMENTS OF THE TOASTER.

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

DEFROST BUTTON

This feature activates additional toasting time required to toast frozen bread.

To toast frozen bread:

1. Place the bread into the toasting slots.
2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest).
3. Press the TOAST/CANCEL button and the surround will illuminate in red then press the DEFROST button and the surround will illuminate in white. The bread will automatically lower into the toasting slots. The toasting time will automatically increase.
4. The LIFT & LOOK™ button surround will illuminate in white allowing you to check on the toasting progress and, if necessary, cancel the cycle by pressing TOAST/CANCEL button when the desired toast colour is achieved.
5. Approximately 10 seconds before the end of the selected browning setting, the LIFT & LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle. The DEFROST button surround will remain illuminated and should be pressed once to cancel if a subsequent toasting function is required. The DEFROST button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ TOASTER

LIFT & LOOK™ BUTTON

This feature automatically raises and lowers the carriage so you can check progress without interrupting and/or cancelling the toasting cycle.

To select this feature:

1. The LIFT & LOOK™ button surround will illuminate in white during the toasting cycle and when using the A BIT MORE™, CRUMPET and DEFROST features. You can press the LIFT & LOOK™ button during toasting cycle to view the toasting progress. If selected, the LIFT & LOOK™ button surround will flash. The LED toasting progress indicator will cease to flash indicating that the selected toasting cycle time has not been interrupted. When the LIFT & LOOK™ cycle has finished, the toasting cycle will re-commence, indicated by the resumed flashing of LED toasting progress indicator.
2. Approximately 10 seconds before the end of the selected browning setting, the LIFT & LOOK™ button will cease illumination and cannot be activated in this time.

Cleaning

CARE, CLEANING AND STORAGE

CARE AND CLEANING

1. Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray, located under the control panel at the front of the toaster, by pulling it outwards. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs, turn the toaster upside down over a bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened soft cloth then polish with a soft dry cloth to dry completely.

NOTE: DO NOT CLEAN WITH METAL SCOURING PADS. PIECES CAN BREAK OFF THE PAD AND TOUCH ELECTRICAL PARTS CREATING AN ELECTRIC SHOCK HAZARD.

STORAGE

Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.

WARNING: DO NOT USE THE TOASTER WITHOUT THE SLIDE-OUT CRUMB TRAY IN POSITION. DO NOT ALLOW CRUMBS TO BUILD UP IN THE CRUMB TRAY. FAILURE TO CLEAN THE CRUMB TRAY REGULARLY MAY RESULT IN A FIRE HAZARD.

NOTES

A series of horizontal dotted lines for writing notes.

NOTES

A series of horizontal dotted lines for writing notes.

Breville

Australian Customers

Mail: Breville Customer
Service Centre
PO Box 22
Botany
NSW 2019
AUSTRALIA

Phone: Customer Service:
1300 139 798

Fax (02) 9384 9601

Email Customer Service
askus@breville.com.au

New Zealand Customers

Mail: Breville Customer
Service Centre
Private Bag 94411
Greenmount
Auckland
New Zealand

Phone: Customer Service:
0800 273 845

Fax 0800 288 513

Email Customer Service
askus@breville.com.au

www.breville.com.au

Breville is a registered trademark of Breville Pty Ltd. A.B.N. 98 000 092 928
Breville Professional 800 Collection is a trademark of Breville Pty Ltd.
Head Office Building 2, Port Air Industrial Estate,
1A Hale Street, Botany, NSW, 2019 Australia Tel 1300 139 798
20 Mono Place, Eilerslie, Auckland, New Zealand
Private Bag 94411, Greenmount, Auckland Tel 0800 273 845

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.

Professional

800 COLLECTION™

Model BTA820/BTA840

Issue 01/07

Download from www.SerManuals.com. All Manuals Search And Download.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>