

## COOKING TIPS

- The cooking times will depend on the type, thickness and volume of foods, whatever; you can increase the cooking times.
- Do not cook frozen food and do not attempt to defrost frozen food in the grill. All food must be fully and completely defrosted before cooking.

## CLEANING

- Disconnect your appliance from the mains supply and allow cooling completely before cleaning.
  - Use adjunct plastic scoop to remove stubborn stains.
  - Wipe all surfaces with a clean, damp cloth.
- NOTE: DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID**
- Lock the plates by gliding the clip.
  - Wash the drip tray in warm, soapy water or put this in the top rack of the dishwasher

## STORAGE

1. Wind the cord round the cord storage facility
2. The appliance can be stored in vertical or horizontal position.

Continental®  
Platinum

### INSTRUCTION MANUAL



PANINI GRILL

MODEL:  
CP43529

## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

## INSTRUCTIONS

Dear customer, congratulations on acquiring your new Panini Grill.

### BEFORE FIRST USE

- Wipe the non-stick cooking plate with a clean wet cloth, and wipe dry with a clean dry cloth. **DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID**
- Check the drip tray is clean, empty and in place under oil drip of bottom plate.
- Brush with a little cooking oil.
- The appliance may give off some smoke when you use it for the first time. This is normal.

## HOW TO USE YOUR PANINI GRILL

1. Unlock the plates by pushing the front section of the clip.
2. Connect the plug to the mains socket. The power on light (red) will come on.
3. Preheat the unit with plates closed, when the ready light (green) comes on the temperature is reached.
4. Use the handle to lift the upper plate and place food on the bottom cooking plate by using wooden or plastic (heat resistant) utensils.
5. Close the upper plate. Do not apply any pressure.
6. When finished, carefully open the unit and remove the food by using wooden or plastic (heat resistant) utensils.
8. Unplug the Panini Press and allow it to cool down when finished cooking.

**CAUTION:** Do not touch hot surfaces, always use the handle.

**NOTE:** Do not attempt to use the locking clip to lock the upper plate when there is food between the plates. Do not use metal utensils as they will scratch and damage the non-stick coating.

## INSTRUCTIONS FOR USE PANINI GRILL

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using
2. Do not touch hot surface. Use handles or knobs.
3. To protect against risk of electric shock do not immerse cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Never leave appliance unattended.
5. Unplug from outlet when not in use, and allow to cool before cleaning
6. Do not operate any appliance with damaged cord or plug or after appliance has been damaged in any manner. Call Consumer Service
7. The use of accessory attachments not recommended by us may cause fire, electrical shock or personal injury
8. Do not use let cord hang over edge of table or countertop, or touch hot surface, including the stove.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Always use appliance on a dry, smooth flat surface.
11. To use plug into 120Volt, AC outlet. To disconnect, grasp plug and remove from outlet. Do not pull on cord.
12. Do not use appliance for other than its intended purpose.
13. Do not use outdoors.
14. When using the appliance, be sure to allow at least 4 inches (10cm) of space on all sides of the unit to allow for adequate air circulation. Never place anything on top of the unit.

### SAVE THESE INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY. No use-serviceable parts inside. Do not attempt to service this product. A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. An extension cord may be used with care; however, the marked electrical rating should be at least as great as the electrical rating of the appliance. The extension cord should not be allowed to drape over the counter or tabletop whether children can pull it on or tripped over.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>