



# Hedge Clipper

## *Operator's Manual*

### MODELS:

HC-1500	Serial Number 001001 - 999999
HC-1500 - Type 2E	Serial Number 001001 - 672900
HC-1600	Serial Number 001001 - 999999
HC-1600 - Type 1E	Serial Number 001001 - 526700
HC-2000	Serial Number 001001 - 999999
HC-2000 - Type 1E	Serial Number 001001 - 523200
HC-2400	Serial Number 001001 - 999999
HC-2410	Serial Number 001001 - 999999

### WARNING DANGER



The muffler or catalytic muffler and surrounding cover may become extremely hot.  
Always keep clear of exhaust and muffler area, otherwise serious personal injury may occur.

### WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



### WARNING DANGER

Read rules for safe operation and all instructions carefully. ECHO provides this Operator's Manual and a Safety Manual. Both must be read and understood for proper and safe operation.

## INTRODUCTION

Welcome to the ECHO family. This ECHO product was designed and manufactured to provide long life and on-the-job dependability. Read and understand this manual and the SAFETY MANUAL you found in the same package. You will find both easy to use and full of helpful operations tips and SAFETY messages.

### WARNING DANGER


Read rules for safe operation and instructions carefully. ECHO provides an Operator's Manual and a Safety Manual. Both must be read and understood for proper and safe operation.

## THE OPERATOR'S MANUAL

contains specifications and information for operation, starting, stopping, maintenance, storage and assembly specific to this product.

## THE SAFETY MANUAL

explains possible hazards involved with the use of Hedge Clippers and what measures you should take to make their use safer.

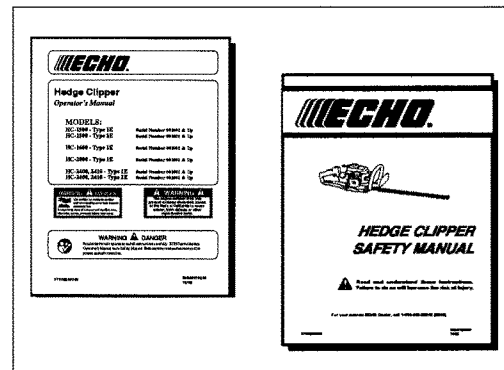

## TABLE OF CONTENTS


Introduction .....	2	- Stopping Engine .....	18
- The Operator's Manual .....	2	Maintenance .....	18
- The Safety Manual .....	2	- Skill Levels .....	18
Manual Safety Symbols and Important Information .....	3	- Maintenance Intervals .....	19
Safety .....	3	- Air Filter .....	20
- Decals .....	3	- Fuel Filter .....	20
- International Symbols .....	4	- Spark Plug .....	21
- Equipment .....	4	- Cooling System .....	21
- Fuel .....	5	- Exhaust System .....	22
- Personal Condition and Safety Equipment .....	5	- Carburetor Adjustment Emission .....	23
- Safe Operation .....	7	- Carburetor Adjustment Non Emission .....	24
- Extended Operation/Extreme Conditions .....	8	- Lubrication .....	25
Description .....	9	- Blade Stiffener Remove/Install .....	27
- Contents .....	9*	- Sharpening Blades .....	28
- Emissions Control .....	9*	Troubleshooting .....	29
Specifications .....	12	Storage .....	30
- Models HC-1500/1600/2000/2400/2410 .....	12	Servicing Information .....	32
Assembly .....	12	- Parts .....	32
Pre-Operation .....	13	- Service .....	32
- Fuel .....	13	- Warranty Card .....	32
- Equipment Check .....	15	- Additional or Replacement Manuals .....	32
- Determine Operation Area .....	15	- Manual Ordering Instructions .....	32
Operation .....	16	*Supplement Instructions .....	33
- Starting Cold Engine .....	16	*Page 9 Supplement .....	34
- Starting Warm Engine .....	17		


CopyRight© 2000 By Echo, Incorporated  
All Rights Reserved.

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.


## MANUAL SAFETY SYMBOLS AND IMPORTANT INFORMATION

Throughout this manual and on the product itself, you will find safety alerts and helpful, information messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

 This symbol accompanied by the words **WARNING** and **DANGER** calls attention to an act or condition that can lead to serious personal injury to operator and bystanders.

 The circle with the slash symbol means whatever is shown within the circle is prohibited.

 **IMPORTANT**

 **NOTE**

**IMPORTANT**  
The enclosed message provides information necessary for the protection of the unit.


**NOTE**  
This enclosed message provides tips for use, care and maintenance of the unit.

## SAFETY

### DECALS


Locate these safety decals on your unit. The complete unit illustration found in the "DESCRIPTION" section, will help you locate them. Make sure the decals are legible and that you understand and follow the instructions on them. If a decal cannot be read, a new one can be ordered from your ECHO dealer. See PARTS ORDERING instructions for specific information.

#### ALL HEDGE CLIPPER MODELS

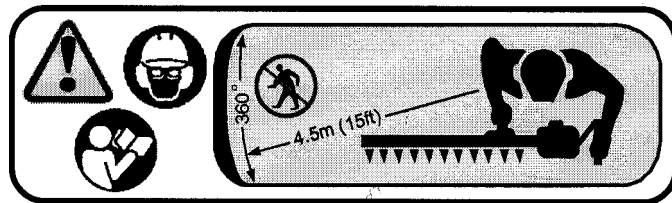


P/N X505000270

#### HC-2000, HC-2400, HC-2410 ONLY

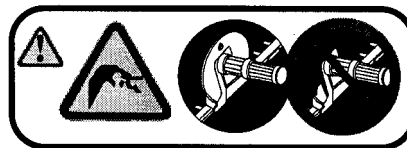

#### HC-1500, HC-1600 ONLY

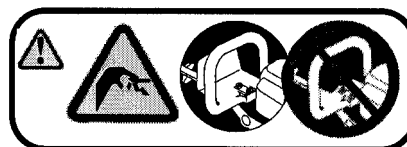

P/N X505000290

## INTERNATIONAL SYMBOLS



Symbol form/shape	Symbol description/application	Symbol form/shape	Symbol description/application
	Read and understand owners manual.		Fuel and oil mixture
	Wear eyes, ears and head protection		Finger Severing
	Emergency stop		Hot Surface
	Wear hand protection. Use two handed.		DO NOT smoke near fuel.
	Engine choke control.	Ignition 	Ignition ON/OFF
	Chain lubrication		Do not operate without guards in place.

Symbol form/shape	Symbol description/application	Symbol form/shape	Symbol description/application
	Carburetor adjustment - Low speed mixture		Carburetor adjustment - High speed mixture
	Safety/Alert		Carburetor adjustment - Idle speed
	Avoid all power lines. This unit is not insulated against electrical current.		Do not operate closer than 15 M (50 ft.) from electrical hazards.
	Plan retreat path from falling objects.		Primer bulb
	DO NOT allow flames or sparks near fuel.		Wear slip resistant foot wear.
		Keep bystanders at least 4.5 meters (15 feet) away.	


## EQUIPMENT

Before operation a complete check of the unit must be performed;

- Check unit for loose/missing nuts, bolts and screws. Tighten and/or replace as needed.
- Inspect fuel lines, tank and area around carburetor for fuel leaks. DO NOT operate unit if leaks are found.
- Never adjust blades when the engine is operating.
- Inspect hand guard for damage. Replace if damaged or missing.
- Check that the blade assembly is firmly attached and in safe operating condition. Dull, loose or damaged blades should not be used.
- ECHO, INC. will not be responsible for the failure of cutting devices or accessories which have not been tested and approved by ECHO for use with this unit.

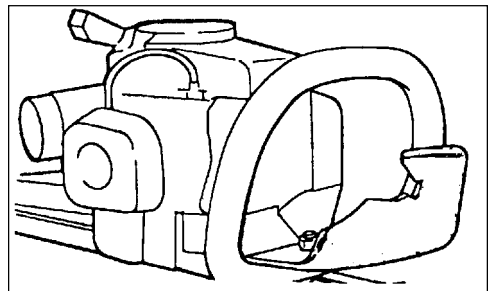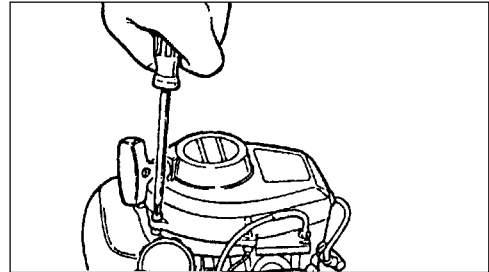

**FUEL**

**WARNING**  **DANGER**

Fuel is **VERY** flammable. Use extreme care when mixing, storing or handling or serious personal injury may result.

- Use an approved fuel container.
- **DO NOT** smoke near fuel.
- **DO NOT** allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- **NEVER** refuel a unit when the engine is **HOT!**
- **NEVER** refuel a unit with the engine running.
- **DO NOT** fill fuel tanks indoors. **ALWAYS** fill fuel tanks outdoors over bare ground.
- Securely tighten fuel cap after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.



**IMPORTANT**

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage. Contact your ECHO dealer for ordering information.




***After Refueling;***


- Wipe any spilled fuel from the unit.
- Move at least 3 m (10 ft.) from refueling location before starting the engine.

***After use;***

- **DO NOT** store a unit with fuel in its tank. Leaks can occur. Return unused fuel to an approved fuel storage container.

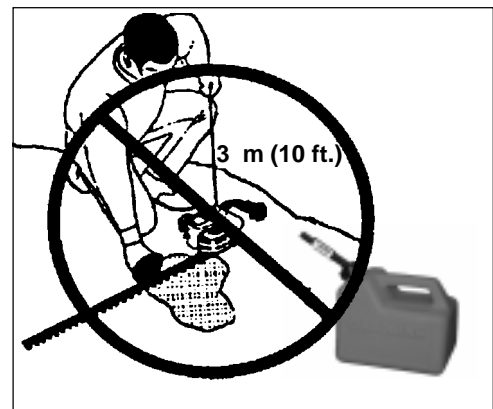

**PERSONAL CONDITION AND SAFETY EQUIPMENT**

**WARNING**  **DANGER**

Hedge Clipper users risk injury to themselves and others if the hedge clipper is used improperly and or safety precautions are not followed. Proper clothing and safety gear must be worn when operating a hedge clipper.

## ***Physical Condition --***

Your judgment and physical dexterity may not be good:

- if you are tired or sick,
- if you are taking medication,
- if you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.




## ***Eye Protection --***

Eye protection that meet ANSI Z87.1 or CE requirements must be worn whenever you operate the Hedge Clipper.



## ***Hand Protection --***

Wear no-slip, heavy duty work gloves to improve your grip on the handles. Gloves also reduce the transmission of machine vibration to your hands.

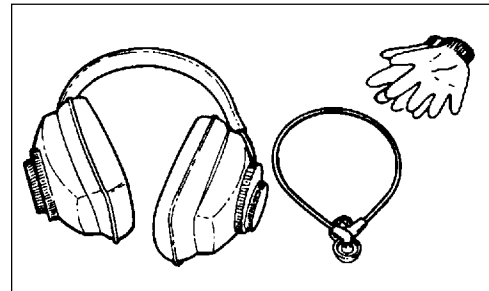

## ***Hearing Protection --***

Wear hearing protection. ECHO recommends wearing hearing protection whenever unit is used.



## ***Proper Clothing --***

Wear snug fitting, durable clothing;

- Pants should have long legs, shirts with long sleeves.
- DONOT WEAR SHORTS,
- DONOT WEAR TIES, SCARFS, JEWELRY.

Wear protective hair covering to contain long hair.


Wear sturdy work shoes with nonskid soles;

- DONOT WEAR OPENTOED SHOES,
- DONOT OPERATE UNIT BAREFOOTED.

Wear no-slip, heavy duty work gloves.

## ***Hot Humid Weather --***


Heavy protective clothing can increase operator fatigue which may lead to heat stroke. Delay heavy work until temperature drops.

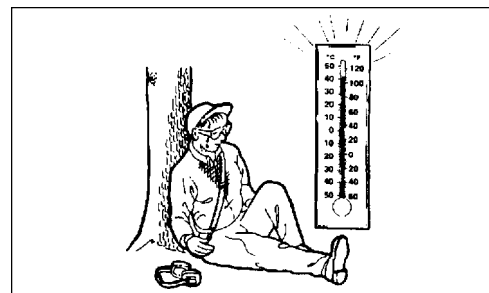

## SAFE OPERATION

### *Determine Operation Area*

- Do not operate this product indoors or in inadequately ventilated areas.
- Review the area to be trimmed. Look for hazards that could contribute to unsafe conditions.
- Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 4.5 m (15 ft.) while the Hedge Clipper is in use.
- Provide all users of this equipment with the Operator's Manual and instructions for Safe Operation.

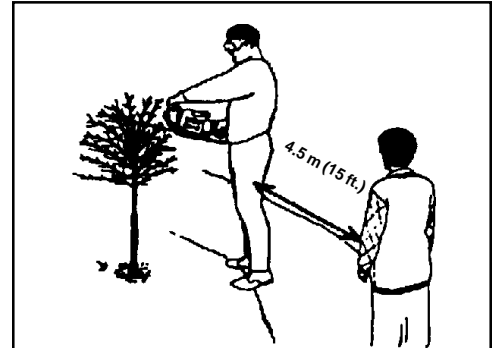


### *Operation*

#### **Use Proper Clothing & Equipment**

- Before starting the unit, equip yourself and any other person working within the 4.5 m (15 ft.) Safety Zone with the required Protective Equipment and clothing.


#### **Keep a Solid Stance**

- Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

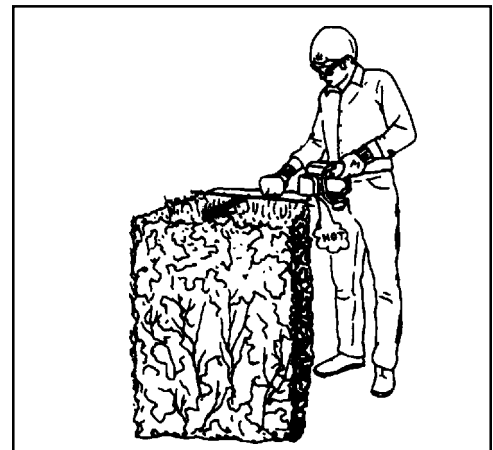


#### **Keep a Firm Grip**

- Hold the front and rear handles with both hands, with thumbs and fingers encircling the handles.

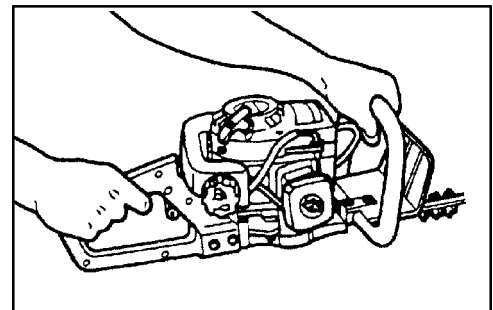

#### **Avoid Hot Surfaces**

- During operation, the complete unit, especially the power head, muffler area and cutting attachment may become very hot, too hot to touch. Avoid contact during and immediately after operation.


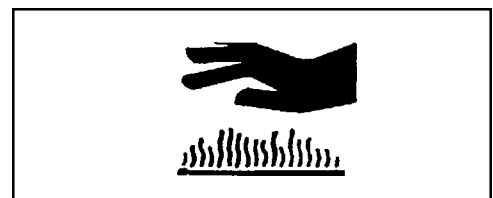


## EXTENDED OPERATION/EXTREME CONDITIONS

### *Vibration and Cold*

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations followed by loss of color and numbness in the fingers. The following precautions are strongly recommended because the minimum exposure which might trigger the ailment is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the trimmer or other hand-held power equipment is not required.
- If you experience discomfort, redness and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.

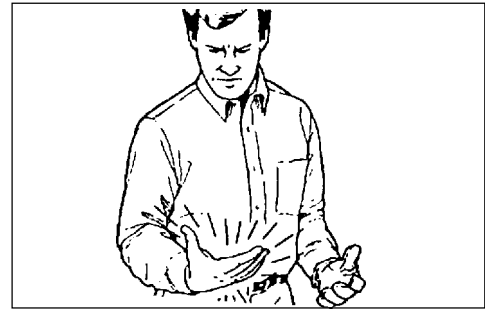
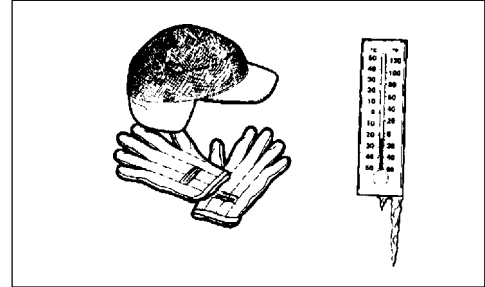


### *Repetitive Stress Injuries*

It is believed that overusing the muscles and tendons of the fingers, hands, arms and shoulders may cause soreness, swelling, numbness, weakness and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness or pain in the fingers, hands, wrists or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

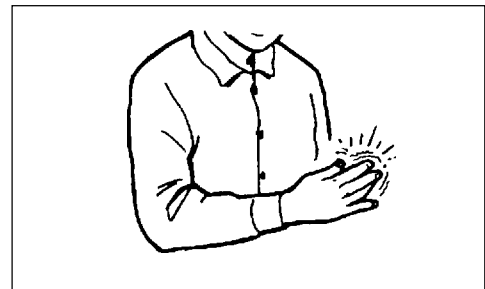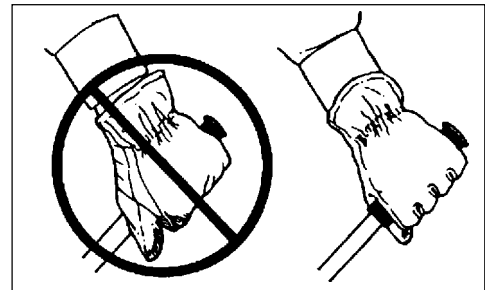







## DESCRIPTION

The ECHO product you purchased has been factory pre-assembled for your convenience.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

## CONTENTS

 - \_\_\_ 1 - Hedge Clipper Assembly
- \_\_\_ 1 - Operators Manual
- \_\_\_ 1 - Safety Manual
- \_\_\_ 1 - Warranty Statement
- \_\_\_ 1 - Warranty Registration Card
- \_\_\_ 1 - Plastic Bag
- \_\_\_ - T-Wrench
- \_\_\_ - 8 mm x 10 mm Open end Wrench
- \_\_\_ - Bottle 2.6 oz. 2-Cycle Oil
- \_\_\_ 1 - Blade Cover

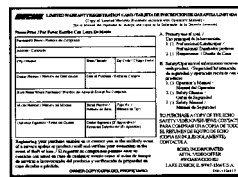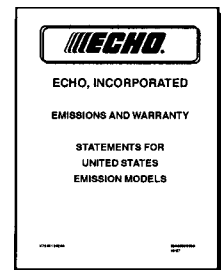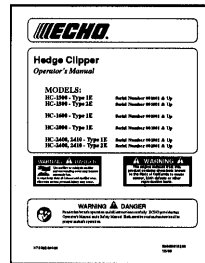



## EMISSION CONTROL - Emissions Models

The emission control system for this engine is EM (Engine Modification).

**IMPORTANT ENGINE INFORMATION**  
 ENGINE FAMILY : TEH021UB24RA  
 DISPLACEMENT : 21.2cc  
 THIS ENGINE MEETS U.S. EPA PHI AND 1995 - 1999 CALIFORNIA EMISSION REGULATIONS FOR ULGE ENGINES. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.



**Emission Control Label** (located on Engine) (EXAMPLE ONLY, information on label varies by FAMILY).

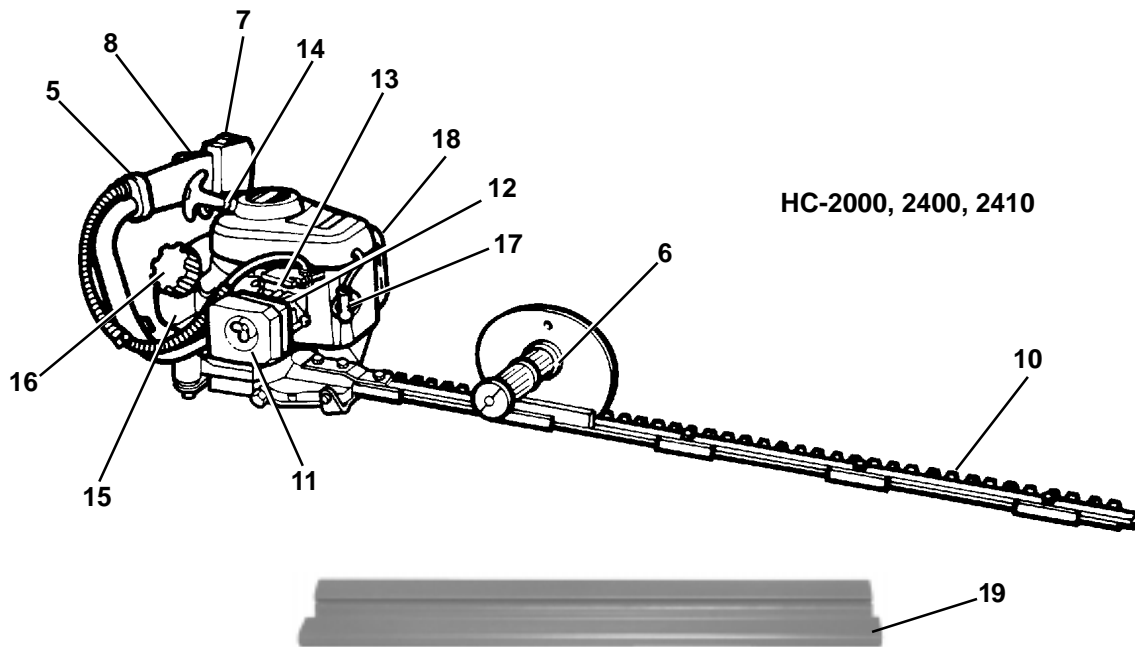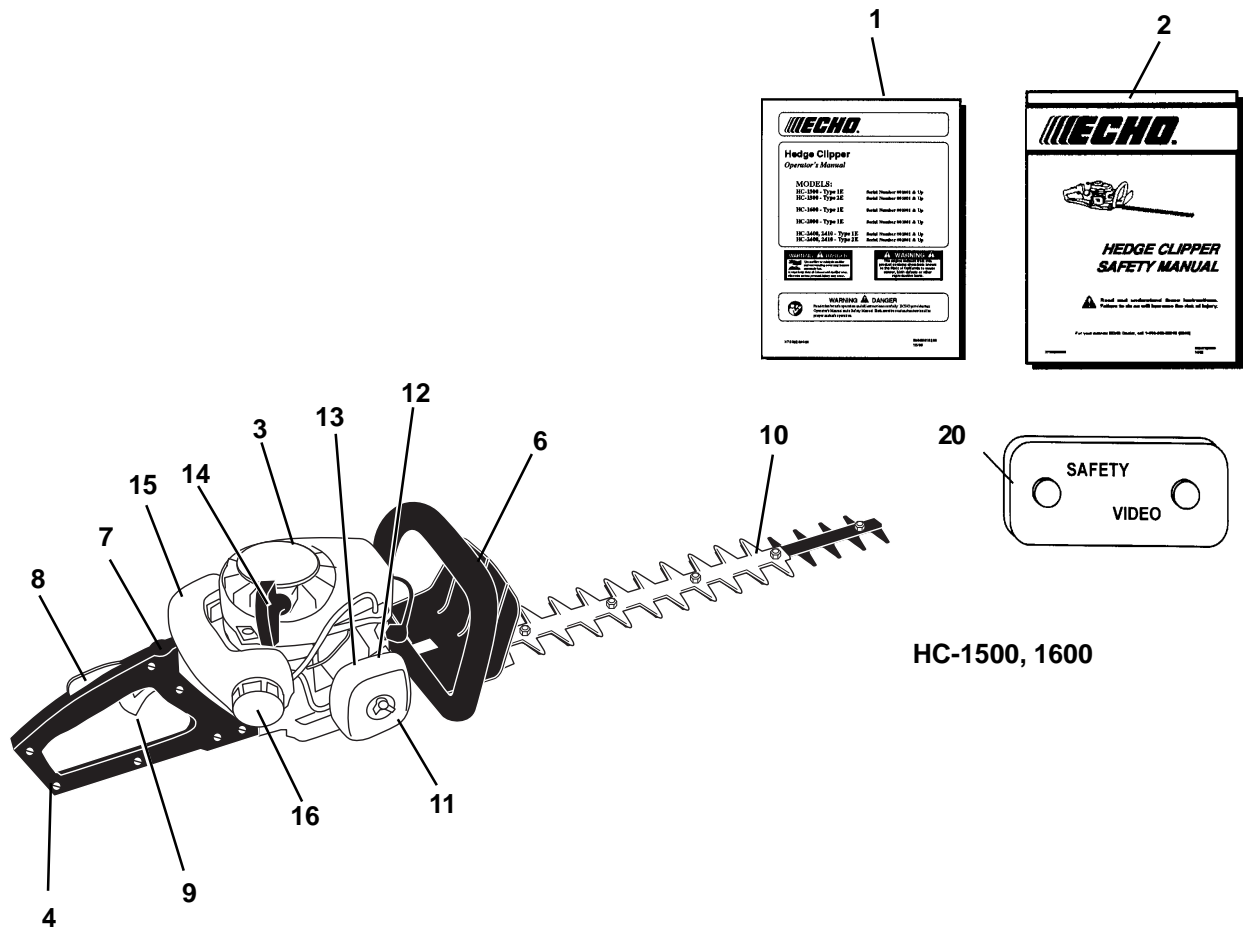

1. **OPERATOR'S MANUAL** - Read and understand this manual before operation. Keep manual in a safe location for future reference, i.e., operation, maintenance, storage and specifications.
2. **SAFETY MANUAL** - Read and understand this manual before operation. Keep manual in a safe location of safe operating techniques.
3. **POWER HEAD** - Factory Assembled to the gear housing assembly. Includes the Engine, Clutch, Fuel System, Ignition System and Recoil Starter.
4. **REAR HANDLE** - HC-1500, 1600. Contains the Stop Switch, Throttle Lockout and Throttle Trigger.
5. **LEFT HAND REAR HANDLE** - HC-2000, 2400, 2410. Contains the Stop Switch, Throttle Lockout and Throttle Trigger.
6. **FRONTHANDLE/GUARD** -  
HC-1500, 1600. Comfortable, textured finish provides anti-slip grip for front hand. Guard protects hand from the blades. Warning decals are located on guard.  
HC-2000, 2400 and HC-2410. Right Hand Handle, Rubber anti-slip grip, guard protects hand from the blades. Warning decals are located on guard.
7. **STOP SWITCH** -  
HC-1500. "TOGGLE SWITCH" located on the left side of the rear handle. Move switch UP to RUN, DOWN to STOP.  
HC-1600, HC-2000, 2400, 2410 "SLIDE SWITCH" mounted on top of the left hand rear handle. Move switch FORWARD to RUN, BACK to STOP.
8. **THROTTLE TRIGGER LOCKOUT** - This lever must be depressed before Throttle Trigger can be activated.
9. **THROTTLE TRIGGER** - Spring loaded to return to idle when released. Trigger Lockout must be depressed fully before Throttle Trigger will move. During acceleration, depress gradually for best operating technique.
10. **BLADES** - Double reciprocating blades mounted to a blade support bar. Models HC-1500, HC-1600 are double sided blades, meaning they are capable of cutting on either side of the blade. All other models are single sided.
11. **AIR CLEANER** - Contains replaceable filter element.
12. **PRIMER BULB** - Pumping primer bulb before starting engine draws fresh fuel from the fuel tank priming the carburetor for starting. Pump primer bulb until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.
13. **CHOKE** - The choke control lever is located on the top of the choke case. Move to "COLD START" to close the choke for Cold Starting. Move to "RUN" position to open choke.
14. **RECOIL STARTER HANDLE** - Pull handle slowly until recoil starter engages, then quickly and firmly. DO NOT pull rope all the way out or allow the handle to snap back, damage to the starter will occur.
15. **FUEL TANK** - Contains fuel and fuel filter.
16. **FUEL TANK CAP** - Covers and seals fuel tank opening.
17. **SPARK PLUG** - Provides spark to ignite fuel mixture.
18. **MUFFLER/SPARK ARRESTOR** - The muffler controls the exhaust noise while the spark arrestor prevents hot, glowing particles of carbon from leaving the muffler where they could possibly start a fire.
19. **BLADE COVER** - Used to cover blades during transportation or storage. Remove blade cover before using unit.
20. **SAFETY VIDEO** - (Not included with unit) P/N 99922202800 English version only is available at a cost of \$5.00 from ECHO, INC. or any authorized ECHO dealer. The video overviews safety precautions and proper operating techniques and is supplemental to the Safety Manual. Read and understand the Safety Manual for complete information on safe operation.

## SPECIFICATIONS

MODEL	HC-1500 1E HC-1500 2E	HC-1600 1E	HC-2000 1E	HC-2400 1E HC-2400 2E	HC-2410 1E HC-2410 2E
Length	960mm (37.8 in.)	1133mm (44.6 in.)	990mm (39.0 in.)	1030mm (40.6 in.)	1280mm (50.4 in.)
Width	225mm (8.9 in.)	240mm (9.4 in.)	240mm (9.4 in.)	240mm (9.4 in.)	240mm (9.4 in.)
Height	190mm (7.5 in.)	200mm (7.9 in.)	230mm (9.1 in.)	210mm (8.3 in.)	210mm (8.3 in.)
Weight, dry	4.4 kg (9.7 lb.)	5.3 kg (11.7 lb.)	5.2 kg (11.4 lb.)	5.2 kg (11.4 lb.)	5.2 kg (11.4 lb.)
Type of Engine	Air cooled, two-stroke, single cylinder, gasoline engine				
Displacement	21.2 cc (1.29 cu.in.)	21.2 cc (1.29 cu.in.)	21.2 cc (1.29 cu.in.)	23.6 cc (1.44 cu.in.)	23.6 cc (1.44 cu.in.)
Bore	32.2 mm (1.27 in.)	32.2 mm (1.27 in.)	32.2 mm (1.27 in.)	34.0 mm (1.34 in.)	34.0 mm (1.34 in.)
Stroke	26.0 mm (1.02 in.)	26.0 mm (1.02 in.)	26.0 mm (1.02 in.)	26.0 mm (1.02 in.)	26.0 mm (1.02 in.)
Exhaust System	Spark Arrestor Muffler				
Carburetor	Zama C1U				
Ignition System	Flywheel Magneto, Capacitor discharge ignition				
Spark Plug	BPM-7A (Gap 0.65 mm (0.026 in.))				
Fuel	Mixed Fuel - gasoline and oil				
Fuel/Oil Ratio	50:1 Ratio using ECHO Hi-Performance, two-stroke air cooled engine oil				
Gasoline	89 Octane Unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE.				
Oil	ECHO Hi-Performance, two-stroke air cooled engine oil				
Fuel Tank Capacity	0.3 lit. (10.1 fl. oz)	0.5 lit. (17.0 fl. oz)	0.5 lit. (17.0 fl. oz)	0.5 lit. (17.0 fl. oz)	0.5 lit. (17.0 fl. oz)
Starter System	Automatic Recoil Starter				
Clutch	Centrifugal Type				
Gear Case Ratio	1:5.88	1:5.88	1:5.88	1:5.13 1E 1:3.9 2E	1:5.13 1E 1:3.9 2E
Cutter (Double Reciprocating Blade)	Double Edge	Double Edge	Single Edge	Single Edge	Single Edge
Length	573mm (22.6 in.)	721mm (28.4 in.)	750mm (29.5 in.)	750mm (29.5 in.)	994mm (39.1 in.)
Pitch	35mm (1.4 in.)				
Height	21mm (0.83 in.)	21mm (0.83 in.)	24mm (0.94 in.)	24mm (0.94 in.)	24mm (0.94 in.)
Idle Speed (RPM)	3000				
Wide Open Throttle (RPM)	11,000 - 12,000				

**ASSEMBLY HC MODELS ARE PRE-ASSEMBLED IN THE BOX.**

*Tools Required:* None

*Parts Required:* None


**PRE-OPERATION**

**FUEL**

***Fuel Requirements***

**Gasoline** - Use 89 Octane [ $\frac{R+M}{2}$ ] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 15% MTBE (methyl tertiary-butyl ether). Gasohol containing methyl (wood) alcohol is **NOT** approved.

**Two Stroke Oil** - A two-stroke engine oil meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FC Standards, must be used. Echo brand Premium 50:1 oil meets these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD and J.A.S.O. FC certified oil, such as Echo Premium 50:1 Two-stroke Oil, will void the two-stroke engine warranty. (Emission related parts only are covered for two years, regardless of two-stroke oil used, per the statement listed in the EPA Phase I/ California Emission Defect Warranty Explanation.)

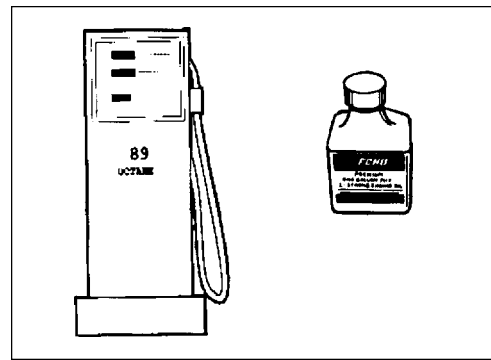

**IMPORTANT**

Echo Premium 2-Stroke Oil may be mixed at 50:1 ratio for application in all Echo engines sold in the past regardless of ratio specified in those manuals.

**Mixing Instructions**

1. Fill an approved fuel container with half of the required amount of gasoline.
2. Add 2-stroke oil to gasoline.
3. Close container and shake to mix oil with gasoline.
4. Add remaining gasoline and remix.
5. Install fuel container cap and wipe any spilled fuel from container and surrounding area.

## Handling Fuel

### WARNING DANGER

Fuel is **VERY** flammable. Use extreme care when mixing, storing or handling or serious personal injury may result.

- Use an approved fuel container.
- DO NOT smoke near fuel.
- DO NOT allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- NEVER refuel a unit when the engine is HOT!
- NEVER refuel a unit with the engine running.
- DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- Securely tighten fuel cap after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.

### IMPORTANT

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage. Contact your ECHO dealer for ordering information.

### After Refueling;

- Wipe any spilled fuel from the unit.
- Move at least 3 m (10 ft.) from refueling location before starting the engine.

### After use;

- DO NOT store a unit with fuel in its tank. Leaks can occur. Return unused fuel to an approved fuel storage container.


**Storage** - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, air tight container. Store in a well ventilated, unoccupied building, away from sparks and flames. Do not store fuel longer than 30 days.

### IMPORTANT

Stored fuel ages. Do not mix more fuel than you expect to use in thirty (30) days, ninety (90) days when a fuel stabilizer is added.

### IMPORTANT

Stored two-stroke fuel may separate. ALWAYS shake fuel container thoroughly before each use.


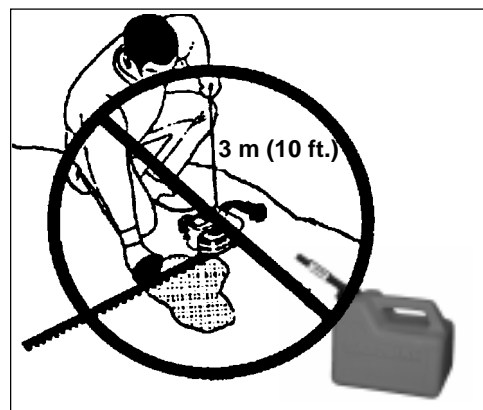


S	M	T	W	T	F	S
1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

## EQUIPMENT CHECK


Before operation a complete check of the unit must be performed;

- Check unit for loose/missing nuts, bolts and screws. Tighten and/or replace as needed.
- Inspect fuel lines, tank and area around carburetor for fuel leaks. DO NOT operate unit if leaks are found.
- Never adjust blades when the engine is operating.
- Inspect hand guard for damage. Replace if damaged or missing.
- Check that the blade assembly is firmly attached and in safe operating condition. Dull, loose or damaged blades should not be used.

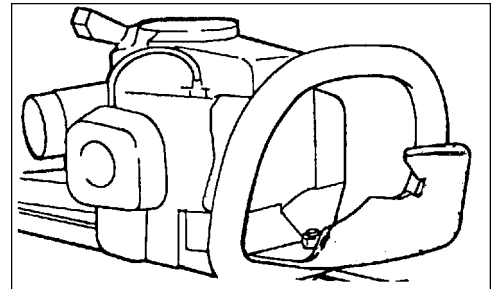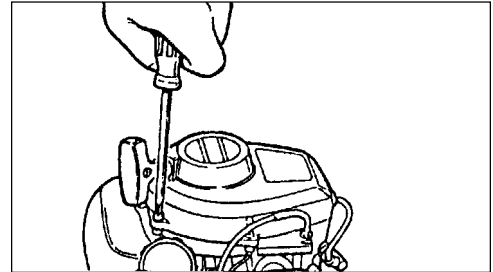



## DETERMINE OPERATION AREA

- Before starting the unit, equip yourself and fellow workers in the 4.5 m (15 ft.) safety zone with the required protective equipment and clothing.
- Review the area to be trimmed. Look for hazards that could contribute to unsafe conditions.
- Spectators, children and animals must be prevented from coming nearer than 4.5 m (15 Ft.) while the Hedge Clipper is in use.

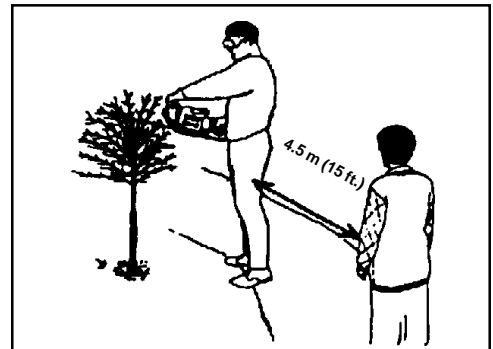




## OPERATION

- Provide all users of this equipment with the Operator's Manual and instructions for Safe Operation.
- Before starting the unit, equip yourself and any other person working within the 4.5 m (15 ft.) Safety Zone with the required Protective Equipment and clothing.
- During operation, the complete unit, especially the gear box may become very hot, too hot to touch. Avoid contact during and immediately after operation.
- Do not operate this product indoors or in inadequately ventilated areas.

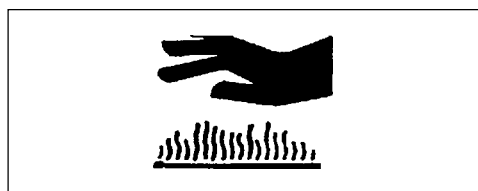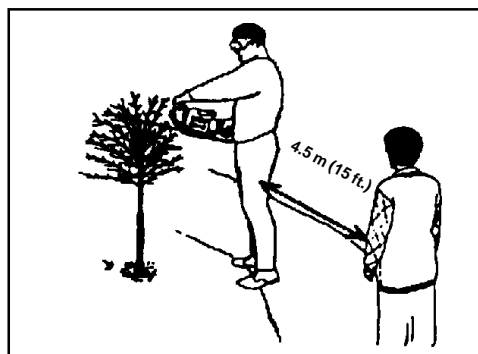


## STARTING COLD ENGINE

1. **STOPSWITCH - START/RUN.**  
Move stop switch (A) away from the STOP position.
2. **CHOKE - COLDSTART.**  
Move choke (B) to the Cold Start (CLOSED) position.
3. **PRIMER - PUMPBULB.**  
Pump primer bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.

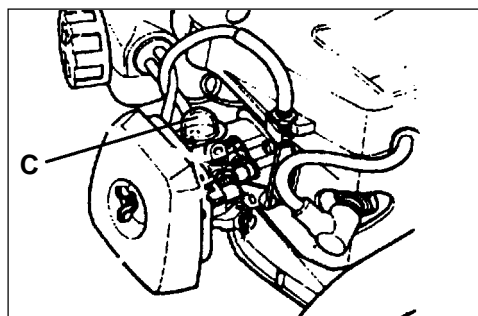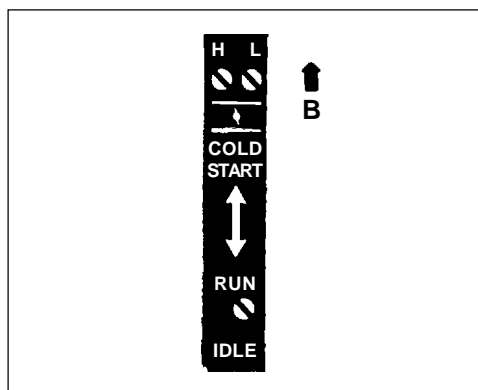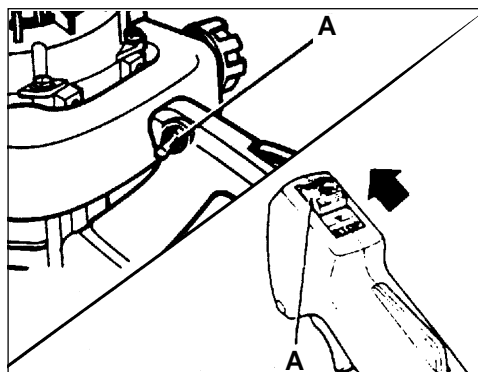




4. **START - PULL ROPE**  
Lay the hedge clipper on a flat clear area and pull the recoil starter handle (D) until engine fires.
5. **OPEN CHOKE - RUN.**  
Move choke (B) to the RUN (OPEN) position. Restart engine if necessary and allow unit to warm up at idle for several minutes.

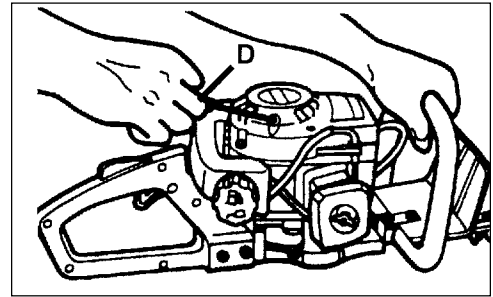

**WARNING** **DANGER**

The blades should not move at idle. If blades move, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer, otherwise serious personal injury may result.

6. After engine warm up, gradually depress throttle trigger to increase engine RPM to operating speed.

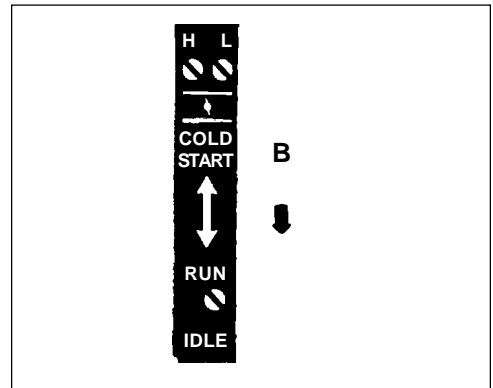


## STARTING WARM ENGINE

The starting procedure is the same as Cold Start except DO NOT close the choke.


**WARNING** **DANGER**

The blades should not move at idle. If blades move, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer, otherwise serious personal injury may result.

1. **STOP SWITCH - START/RUN**  
Move stop switch (A) away from the STOP position.

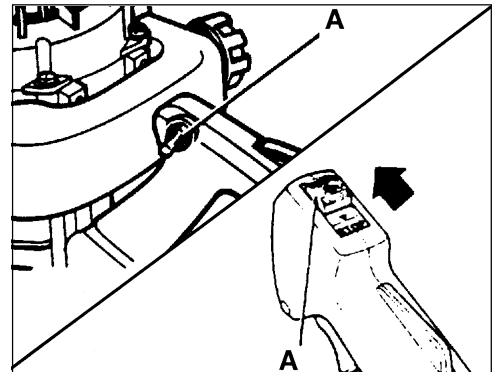

2. **START - Pull Rope**  
Lay the hedge clipper on a flat clear area and pull the recoil starter handle (D) until the engine fires.

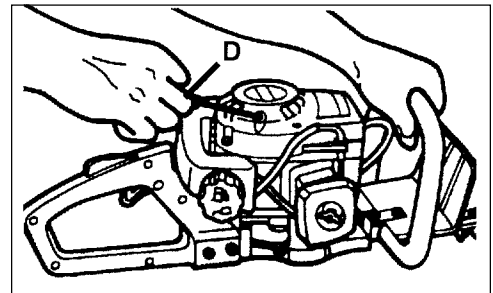


**NOTE**

If engine does not start after 5 pulls, use Cold Start Procedure.


## STOPPING ENGINE

1. RELEASE THROTTLE. Allow engine to idle for a minute.
2. STOP SWITCH - STOP. Move stop switch (A) to STOP position.

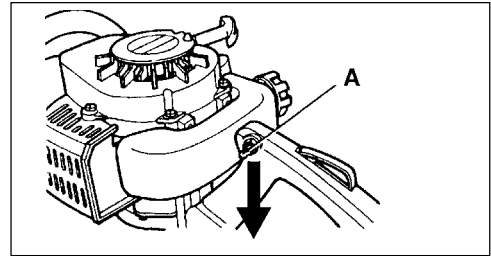

### WARNING DANGER

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your ECHO dealer repair stop switch before using hedge clipper again.

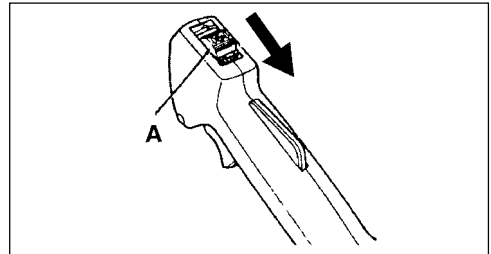

## MAINTENANCE

Your ECHO Hedge Clipper is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your Hedge Clipper achieve that goal. If you are unsure or are not equipped with the necessary tools, you may want to take your unit to an ECHO Service Dealer for maintenance. To help you decide whether you want to DO-IT-YOUR-SELF or have the ECHO Dealer do it, each maintenance task has been graded. If the task is not listed, see your ECHO Service Dealer for repairs.

### SKILL LEVEL

- Level 1** = Easy to do. Most required tools come with unit.
- Level 2** = Moderate difficulty. Some specialized tools may be required.
- Level 3** = Experience required. Specialized tools are required. ECHO recommends the unit be returned to your ECHO dealer for servicing.

ECHO offers **REPOWER™** Maintenance Kits and Parts to make your maintenance job easier. Just below each task heading are listed the various part numbers required for that task. See your ECHO dealer for these parts.

## MAINTENANCE INTERVALS

Component/System	Maintenance Procedure	Before Use	Every Refuel	Daily or Every 4 Hours	3 Months or 100 Hours	6 Months or 300 Hours	Yearly or 600 Hours
Air Filter	Inspect/Replace	I / C		I / C	R *		
Fuel Strainer	Inspect/Replace				I		R
Fuel Line	Inspect/Replace	I			I *		R
Carburetor	Inspect/Replace					C	R(1)
Choke System	Inspect/Replace		I				
Cooling System	Inspect/Clean	I / C		I / C			
Muffler Spark Arrestor	Inspect/Clean/Replace				I / C		R
Gear Housing	Grease	I (2)					
Recoil Starter Rope	Inspect/Clean	I					I *
Fuel Leaks	Inspect/Repair	I	I				I *
Spark Plug	Clean				I / C	R *	
Ignition System	Clean/Replace	<b>No Maintenance required for coil and flywheel</b>					
Screws/Nuts/Bolts	Inspect/Tighten/Replace	I*					

**I = INSPECT, R = REPLACE, C = CLEAN**

**IMPORTANT** Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

\* All recommendations to replace are based on the finding of damage or wear during inspection.

(1) Replacement will be required for Commercial use after 600 hours. For Consumer use, cleaning every 6 months is required.

(2) Apply 1~2 pumps of ECHO® LUBE™ every 10 hours.

## AIR FILTER

### Level 1.




*Tools required:* 25 or 50 mm (1 or 2 in.) medium bristle paint brush

*Parts required:* 90008REPOWER™ AIR & FUEL FILTER KIT

1. Close choke (Cold Start Position). This prevents dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from the air cleaner area.
2. Remove the air cleaner cover. Clean and inspect the element for damage. If element is fuel soaked and very dirty, replace.
3. If element can be cleaned and reused, be certain it:
  - still fits the cavity in the air cleaner cover.
  - is installed with the original side out.

#### NOTE

Carburetor adjustment may be needed after air filter cleaning/replacement.

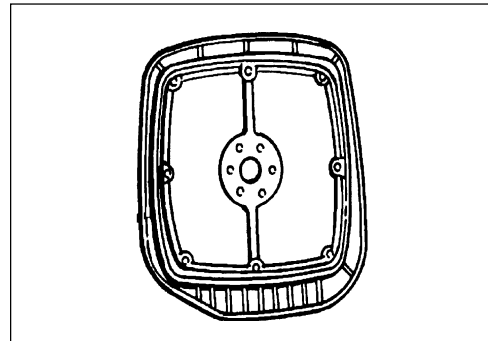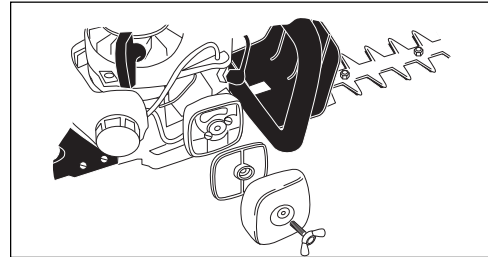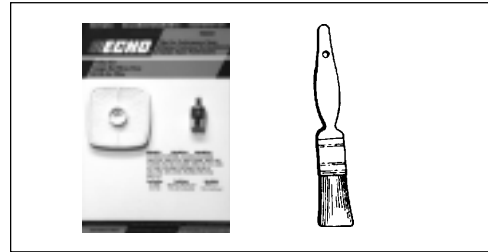

## FUEL FILTER

### Level 1.



*Tools required:* 203-254 mm (8-10 in.) length of wire with one end bent into a hook. Clean rag, funnel, and an approved fuel container

*Parts required:* 90008REPOWER™ AIR & FUEL FILTER KIT

### WARNING DANGER

Fuel is **VERY** flammable. Use extreme care when mixing, storing or handling.

1. Use a clean rag to remove loose dirt from around fuel cap and empty fuel tank.
2. Use the “fuel line hook” to pull the fuel line and filter from the tank.
3. Remove the filter from the line and install the new filter.

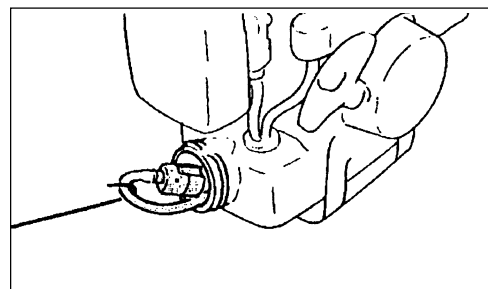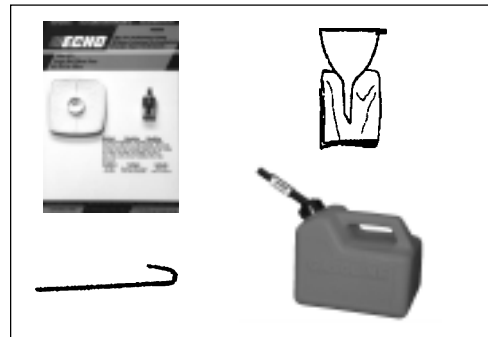



## SPARK PLUG

### Level 2.

*Tools required:* T-wrench, Feeler gauge, Soft metal brush

*Parts required:* 90064REPOWER™ Tune-Up Kit

1. Remove spark plug and check for fouling, worn and rounded center electrode.
2. Clean the plug or replace with a new one. DO NOT sand blast to clean. Remaining sand will damage engine.
3. Adjust spark plug gap by bending outer electrode.
4. Tighten spark plug to 145-155 kg/cm (125-135 in. lb.).

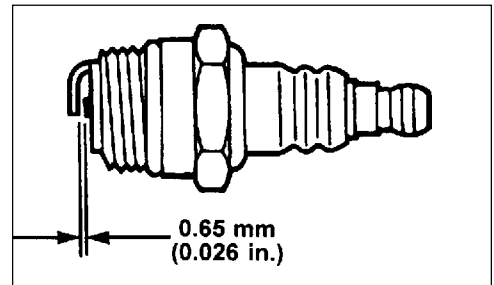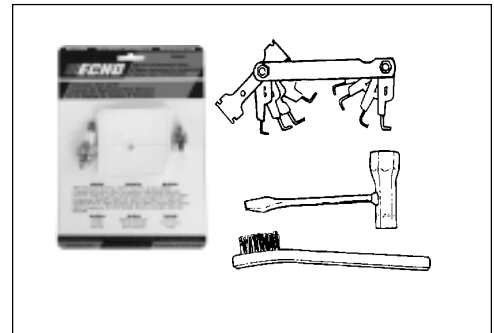

## COOLING SYSTEM CLEANING

### Level 2.

*Tools required:* 3 mm Allen wrench, 4 mm Allen wrench, Pointed Wood Stick, Cross head Screwdriver

*Parts required:* None if you are careful.



#### **IMPORTANT**

To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.

Overheating and engine seizure can occur when:

- Air intakes in the crankcase are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of crankcase cooling passage blockages or cleaning of cooling fins is considered “Normal Maintenance”. Any failure attributed to lack of maintenance is not warranted.

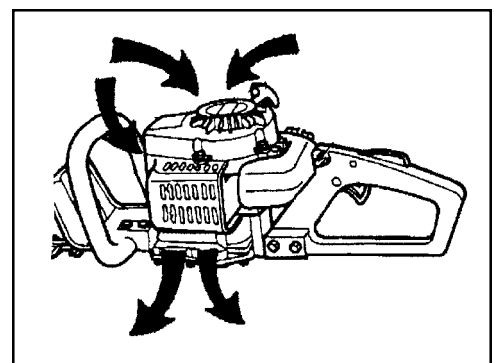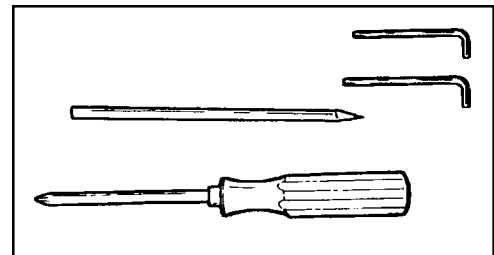

1. Remove starter and disconnect the throttle cable end from the carburetor.
2. Remove the two screws that retain the engine cover. Lift the engine cover (A) from the engine and lay aside.

**NOTE**

The throttle cable remains assembled to the engine cover (A) and the spark plug lead and grommet remain installed.




**IMPORTANT**

DO NOT use a metal scraper to remove dirt from the cylinder fins.

3. Use the wooden stick or brush to remove dirt from the cylinder fins.
4. Remove grass and leaves from the starter air intake grid.

**NOTE**

When installing the engine cover (A), be certain the tab of the metal deflector shield is in the slot of the cover.

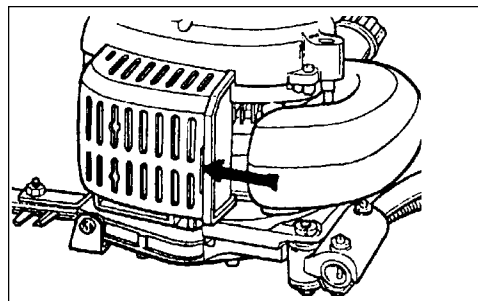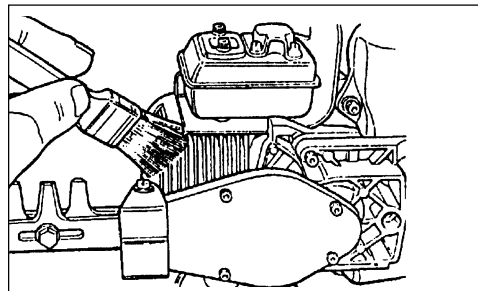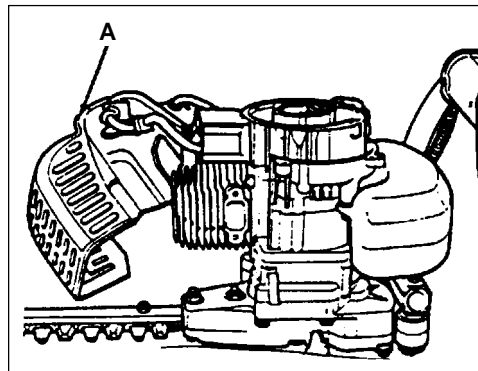

## EXHAUST SYSTEM

### Spark Arrestor Screen

#### Level 2.



*Tools required:* 3 mm Allen wrench, Soft metal brush

*Parts Required:* Screen P/N 14586240630, Gasket Lid P/N 14586642031

1. Remove engine cover (A). See "Cleaning Cooling System" pages 20 & 21 for step by step instructions.
2. Place piston at Top Dead Center (TDC) to prevent carbon/dirt from entering cylinder.
3. Remove spark arrestor screen cover (B), screen holder (C), gasket (D) and screen (E) from muffler body.
4. Clean carbon deposits from screen and muffler components.
5. Replace screen if it is cracked, plugged or has holes burned through.
6. Assemble components in reverse order.

**NOTE**

When installing the engine cover, be certain the tab of the metal deflector shield is in the slot of the cover.

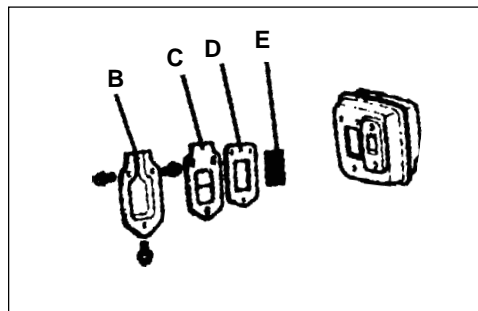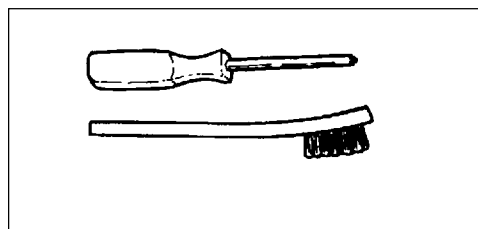


## CARBURETOR ADJUSTMENT

### *Emission Models*

#### Level 2.

*Tools required:* Screwdriver with 2mm blade width, Tachometer (ECHOP/N99051130017)



*Parts required:* None.

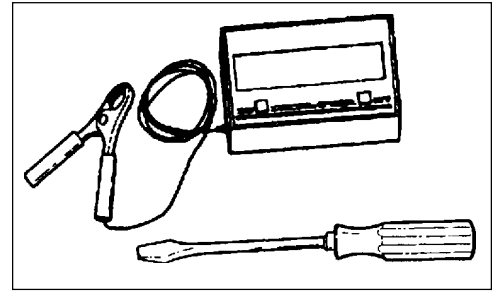

#### **NOTE**

Every unit is run at the factory and the carburetor is set in compliance with EPA Phase 1 and California Emission Regulations. In addition, the carburetor is equipped with HI (A) and LO (B) needle adjustment limiters that prevent settings outside acceptable limits.

1. Before adjusting the carburetor, clean or replace the air filter and spark arrester screen.
2. Start engine and run for several minutes to reach operating temperature.
3. Stop engine. Turn HI (A) speed needle CCW (counter clockwise) to stop. Turn LO (B) speed needle midway between full CCW and CW (clockwise) stops.
4. Idle Speed Adjustment.  
-Start engine and turn idle (C) speed adjustment screw CW until the blades begin to move, then turn the screw CCW until blades stop moving. Turn screw CCW an additional 1/4 turn.
5. Accelerate to full throttle for 2-3 seconds to clear excess fuel from engine then return to idle. Accelerate to full throttle to check for smooth transition from idle to full throttle. If engine hesitates, turn LO (B) needle CCW an additional 1/8 turn and repeat acceleration. Continue adjusting until smooth acceleration results.
6. Check HI speed RPM at W.O.T. (Wide Open Throttle). HI speed RPM should be set to specifications found on page 12 "Specifications" of this manual.
7. Check idle speed and reset if necessary. If a tachometer is available, idle speed should be set to the specifications found on page 12 "Specifications" of this manual.

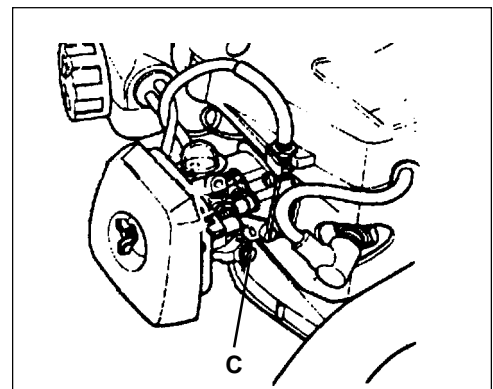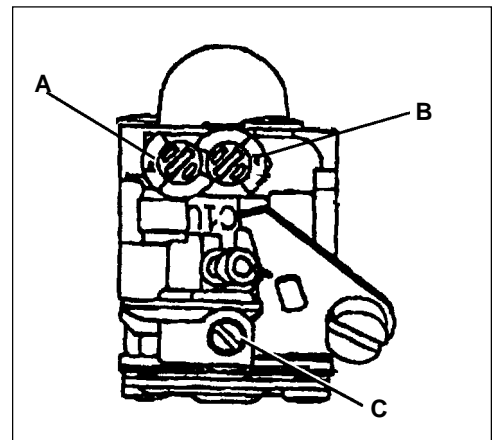

### **WARNING** **DANGER**

When carburetor adjustment is completed, blades should not move at idle, otherwise serious personal injury may result.

## CARBURETOR ADJUSTMENT

### *Non Emissions Models*

#### Level 2

*Tools required:* Screwdriver with 2mm blade width, Tachometer (ECHO P/N 99051130017)

*Parts Required:* None

#### NOTE

If carburetor has limiter caps follow "Carburetor Adjustment" procedures for Emission models on previous page.

### *Idle Speed Adjustment*

Turn "idle" speed adjustment screw (C) CW (clockwise) until blades begin to move, then turn screw out CCW (counter clockwise) until blades stop moving. Turn screw out, CCW an additional 1/4 turn.

## WARNING DANGER

Blades must not move when unit is idling, otherwise serious personal injury may result.

### *Basic Setting*

1. Stop engine and turn both LO (B) and HI (A) needles in, CW until they stop and are lightly seated.



#### IMPORTANT

**DO NOT** over tighten needles. Forcing them to tighten will damage the carburetor.

2. Turn needles out CCW:  
HC-1500 LO (B) 1-1/4 turns; HI (A) 1-1/2 turns  
Others (LO) (B) 1-1/4 turns; HI (A) 1-3/8 turns

### *Fine Tuning (Requires Accurate Tachometer)*

1. Start engine and allow to warm to operating temperature (minimum 2 - 3 minutes) while varying engine speed from idle to full throttle.
2. Always begin fine tuning with LO (B) needle.
  - a. Lean drop-off - With engine idling, turn LO (B) needle slowly CW (in) to lean drop-off point. RPM will increase, then abruptly drop-off. Note this position. (1)
  - b. Rich drop-off - With engine idling, slowly turn LO (B) needle CCW (out) to rich drop-off point. RPM will increase then gradually slow and drop-off. Note this position. (2)
  - c. Final setting - Set needle at mid point between lean rich drop-off points. (3)
  - d. Turn needle 1/8 turn CCW (out) making mixture slightly richer. (4)

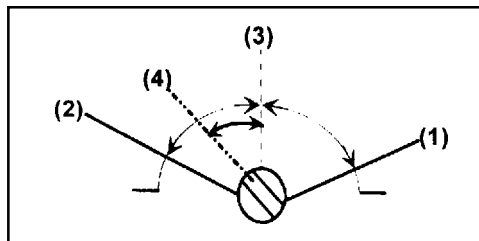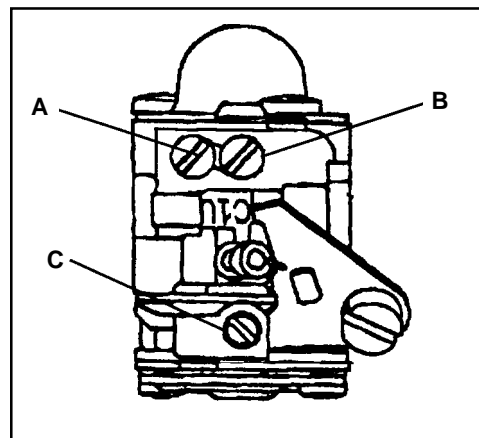



3. HI speed adjustment.  
Adjust HI (A) needle with tachometer. Refer to Wide Open Throttle RPM settings listed in "Specifications" on page 12.
4. Check idle speed and reset if necessary. If tachometer is available, idle speed should be set to the specifications found on page 12 "Specifications" of this manual.

## WARNING DANGER

When carburetor adjustment is completed, blades should not move at idle, otherwise serious personal injury may result.


## LUBRICATION

### Blades

#### Level 1.

*Tools required:* Clean rag, 25 or 50 mm (1 or 2 in.) medium bristle paint brush



*Parts Required:* 20W Engine Oil (lubrication), 50-50 mixture of kerosene and 20W oil (cleaning).

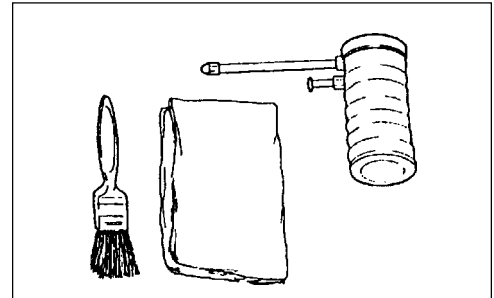

## WARNING DANGER

Hedge Clipper Blades are very sharp. Wear gloves to protect hands.

1. Disconnect spark plug wire from spark plug.
2. Brush loose debris from blade and coat both sides of blade with the 50-50 cleaning mixture.
3. Allow cleaning mixture to soften the remaining gummy residue then wipe it from the blade.
4. Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated.
5. Wipe excess oil from the blade before putting the unit back in service.

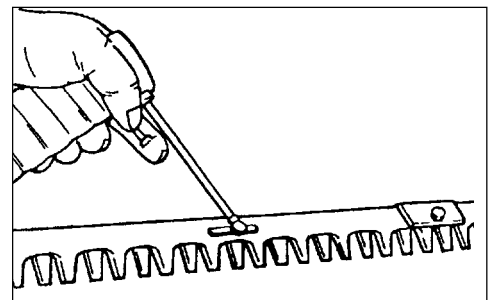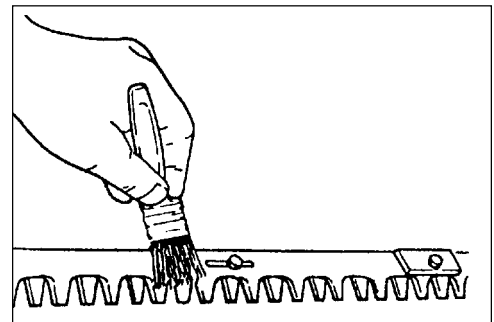


## Gear Box Assembly

### Level 2.


*Tools required:* 3 mm Hexagon wrench, Grease Gun

*Parts Required:* Gear Box Gasket, HC-2400 P/N 61041401260,  
HC-15002EP/N 61041406560,  
Others P/N 61041405360,  
ECHO® LUBE™ 8 oz. (P/N 91014) or Lithium Based Grease.

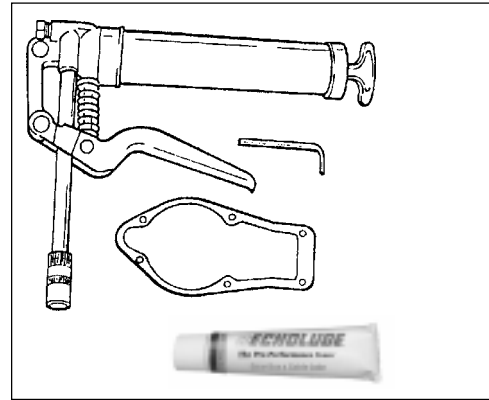


### HC-1500 Type 1, Type 1E

1. Clean debris and dirt from gear box area. Remove the six (6) socket head cap screws retaining the gear box cover plate.
2. Remove cover plate and discard gasket.

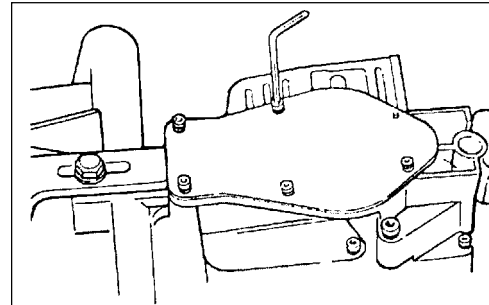

3. Add grease as required, **DO NOT** over fill. Leave room for the grease to expand during operation.

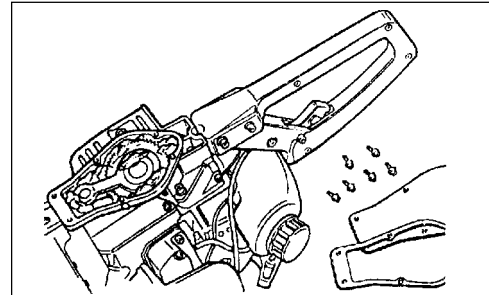



### HC-1600, 2000 (All)

### Level 1.

*Tools required:* 13mm Open End, Grease Gun

*Parts required:* ECHO® LUBE™ 8 oz. (P/N 91014) or Lithium Based Grease.

1. Clean dirt from filler plug area and remove plug.
2. Carefully pump grease into hole. **DO NOT** force grease. Too much pressure will force grease past seals and cause damage.
3. Wipe excess grease from gear box and replace the filler plug.

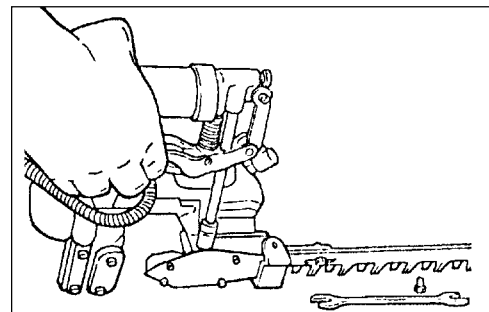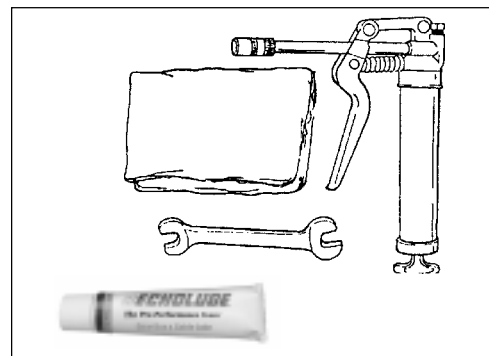



## HC-1500, Type 2E, HC-2400, 2410 (All)

### Level 1.

*Tools required:* Grease Gun, Clean rag

*Parts required:* ECHO<sup>®</sup> LUBE™ 8 oz. (P/N91014) or Lithium Based Grease.

1. Clean dirt from the grease fitting.
  
2. Carefully pump grease into fitting. **DO NOT** force grease. Too much pressure will force grease past seals and cause damage.

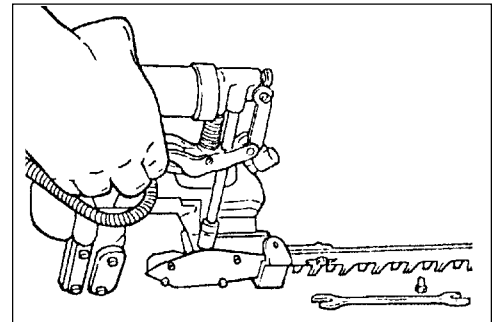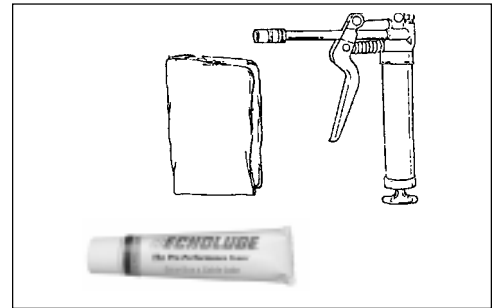

## BLADE STIFFENER REMOVE/INSTALL

### Level 2.

*Tools required:* (2) 13mm Open End

*Parts Required:* None



**WARNING** **DANGER**

Hedge Clipper blades are very sharp. Wear gloves to protect hands.

1. Disconnect spark plug wire from spark plug.
  
2. Hold blade bolt head under blade assembly. Remove blade locknut from top side turning counter clockwise.
  
3. Repeat step 2 for remaining blade nuts.

**NOTE**

Locking ability of Hedge Clipper blade nuts will diminish each time they are removed. Replace blade nuts if threading resistance is not felt when installing locknuts.

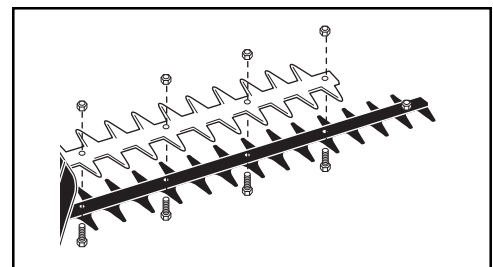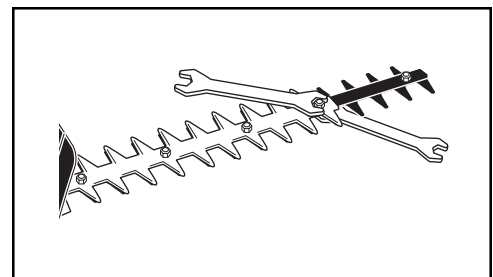

## SHARPENING BLADES

### Level 3.

*Tools required:* Flat file, Screwdriver

*Parts required:* None

### WARNING DANGER

Hedge Clipper Blades are very sharp. Wear gloves to protect hands.

1. Disconnect spark plug wire from spark plug.
2. (Models HC-1500, HC-1600) Remove blade stiffener (See "Blade Stiffener Remove/Install" on page 26).
3. File each edge carefully. Follow the original shape of the blade.





#### IMPORTANT

If a power grinder is used **DO NOT** allow blade to over heat.

4. (Models HC-1500, HC-1600) Assemble blade stiffener using new blade nuts if required. Tighten bolts and nuts then loosen bolt 1/2 turn to allow free blade movement.
5. Lubricate blades. See "Blade Lubrication Instructions," on page 24.

#### IMPORTANT

Blades should only be removed and reinstalled by an Authorized ECHO Servicing Dealer, otherwise premature wear or internal damage may occur.

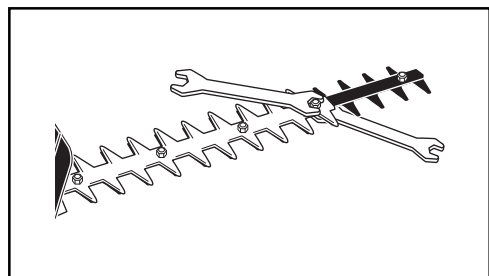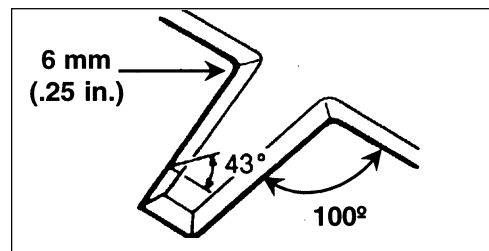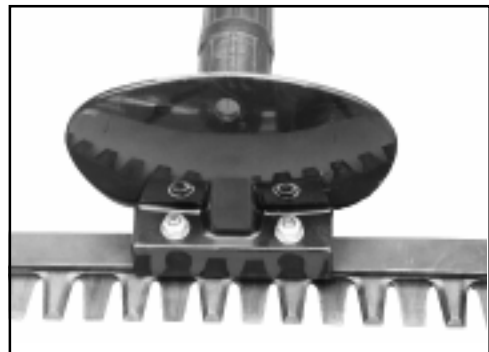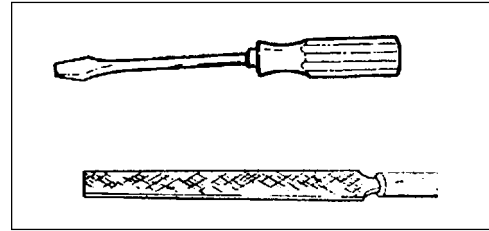

## TROUBLESHOOTING

Problem				
Engine -- starts hard				
Engine -- does not start			Cause	Remedy
Engine Cranks	Fuel at carburetor ↓	No fuel at carburetor	Fuel strainer clogged Fuel line clogged Carburetor	Clean Clean See your ECHO dealer
↓	Fuel at cylinder ↓	No fuel at cylinder	Carburetor	See your ECHO dealer
↓		Muffler wet with fuel	Fuel Mixture is too rich	Open choke Clean/replace air filter Adjust carburetor See your ECHO dealer
↓	Spark at end of plug wire ↓	No spark at end of plug wire	Stop switch off Electrical problem Interlock switch	Turn switch on See your ECHO dealer See your ECHO dealer
↓	Spark at plug	No spark at plug	Spark gap incorrect Covered with carbon Fouled with fuel Spark plug defective	Adjust 0.65mm (0.026in.) Clean or replace Clean or replace Replace plug
Engine does not crank			Internal engine problem	See your ECHO dealer
Engine runs ↓	Dies or accelerates poorly ↓		Air filter dirty Fuel filter dirty Fuel vent plugged Spark plug Carburetor Cooling system plugged Spark arrestor screen plugged	Clean or replace Replace Replace Clean and adjust/replace Adjust Clean Clean

### WARNING DANGER

Fuel vapors are **extremely** flammable and may cause fire and/or explosion. **Never** test for ignition spark by grounding spark plug against cylinder, otherwise serious personal injury may result.

## STORAGE

### *Long Term Storage (over 30 days)*




Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

1. Store unit in a dry, dust free place, out of the reach of children.

### **WARNING** **DANGER**

Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark.

2. Place the stop switch (A) in the "OFF" position.
3. Remove accumulation of grease, oil, dirt and debris from exterior of unit.
4. Perform all periodic lubrication and services that are required.
5. Tighten all the screws and nuts.
6. **Drain** the fuel tank **completely** and pull the recoil starter handle several times to remove fuel from the carburetor.
7. Remove the spark plug and pour 1/4 oz. (1/2 tablespoon) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
  - A. Place a clean cloth over the spark plug hole.
  - B. Pull the recoil starter handle 2-3 times to distribute the oil inside the engine.
  - C. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
8. Install the spark plug (do not connect ignition cable).

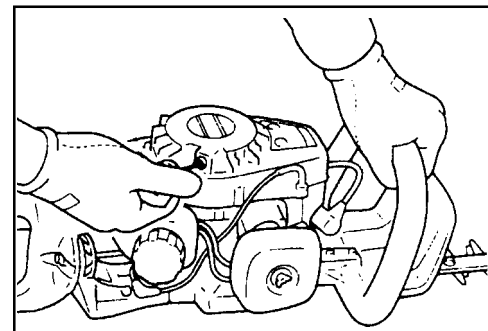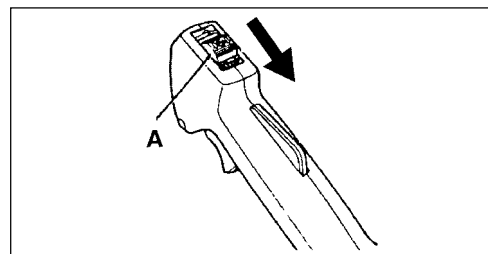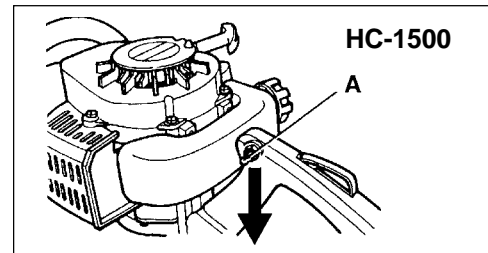

**NOTES**

# SERVICING INFORMATION

## PARTS

Genuine ECHO Parts and ECHO REPOWER™ Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts **always** have the Model Number and Serial Number of the unit with you. You can find these numbers on the engine housing. For future reference, write them in the space provided below.

Model No. \_\_\_\_\_ SN. \_\_\_\_\_

## SERVICE

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site. When presenting your unit for Warranty service/repairs, proof of purchase is required.

## ECHO CONSUMER PRODUCT SUPPORT

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit to help your Consumer Product Support Representative.

## WARRANTY REGISTRATION

You may register your Echo equipment using the warranty registration card or register on-line at [www.echo-usa.com](http://www.echo-usa.com). Registering provides a direct link between you and ECHO if we find it necessary to contact you.

## ADDITIONAL OR REPLACEMENT MANUALS

**Safety Manuals** in English/Spanish or English/French are available, free of charge, from your ECHO dealer or at [www.echo-usa.com](http://www.echo-usa.com).


**Operator's and Parts Manuals** are available by:

- Downloading free from [www.echo-usa.com](http://www.echo-usa.com)
- Purchasing from your Echo Dealer.
- Sending a check or money order for \$2.00 per Parts Catalog or \$1.50 per Operator's Manual made payable to ECHO, INCORPORATED. State on a sheet of paper the model number and serial number of the ECHO unit you have, part number of the manual (if known), your name and address and mail to address above.

**Safety Videos** are available from your Echo dealer. A \$5.00 shipping charge will be required for each video.

### *Available Parts Catalog Parts Lists*

HC-1500 Type 1E	Serial Number 001001 UP	P/N 99922202758
HC-1500 Type 2E	Serial Number 001001 UP	P/N 99922202898
HC-1600 Type 1E	Serial Number 001001 UP	P/N 99922202759
HC-2000 Type 1E	Serial Number 001001 UP	P/N 99922202760
HC-2400/2410 Type 1E	Serial Number 001001 UP	P/N 99922202761
HC-2400/2410 Type 2E	Serial Number 001001 UP	P/N 99922202762

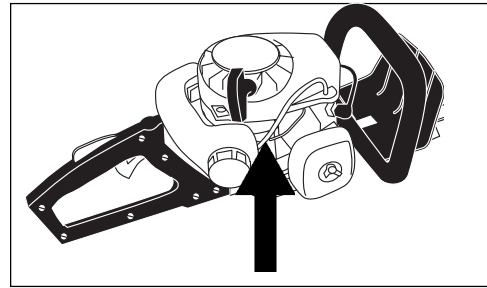

## DEALER?

Call

**1-800-432-ECHO**

**1-800-432-3246**

**[www.echo-usa.com](http://www.echo-usa.com)**

## CONSUMER PRODUCT SUPPORT

**1-800-673-1558**

**8 - 5 Mon - Fri C.S.T.**



# **ECHO**®

**ECHO, INCORPORATED**

400 OAKWOOD ROAD  
LAKE ZURICH, IL 60047-1564

**[www.echo-usa.com](http://www.echo-usa.com)**





SUPPLEMENT TO OPERATOR'S MANUAL  
PART NUMBER X7532248103 (89861105635)  
FOR MODEL: HC-1500, -1600, -2000, -2400, -2410  
SUPLEMENTO DEL MANUAL DEL OPERADOR  
NUMERO DE PIEZA X7532248103 (89861105635)  
PARA LOS MODELO: HC-1500, -1600, -2000, -2400, -2410

*This supplement applies to the models and serial numbers shown below:*

## Hedge Clipper

### *Operator's Manual*

#### *Models:*

HC-1500 - Type 1E	Serial Number 001001 & Up
HC-1500 - Type 2E	Serial Number 672901 & Up
HC-1600 - Type 1E	Serial Number 526701 & Up
HC-2000 - Type 1E	Serial Number 523201 & Up
HC-2400, 2410 - Type 1E	Serial Number 001001 & Up
HC-2400, 2410 - Type 2E	Serial Number 001001 & Up

*Este suplemento se aplica a los modelos y a los números de serie mostrados abajo:*

## Recortador De Cerca De Arbustos

### *Manual del Operador*



#### *Modelos:*

HC-1500 - Tipo 1E	Números de serie 001001 y siguientes
HC-1500 - Tipo 2E	Números de serie 672901 y siguientes
HC-1600 - Tipo 1E	Números de serie 526701 y siguientes
HC-2000 - Tipo 1E	Números de serie 523201 y siguientes
HC-2400, 2410 - Tipo 1E	Números de serie 001001 y siguientes
HC-2400, 2410 - Tipo 2E	Números de serie 001001 y siguientes

**Your unit now includes the following package contents:**

## CONTENTS

- 1 - Hedge Clipper Assembly
- 1 - Operators Manual
- 1 - Safety Manual
- 1 - Warranty Statement
- 1 - Warranty Registration Card
- 1 - Plastic Bag
- - T-Wrench
- - Bottle 2.6 oz. 2-Cycle Oil
- 1 - Blade Cover

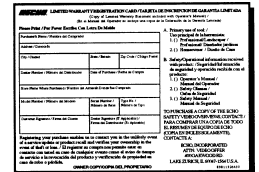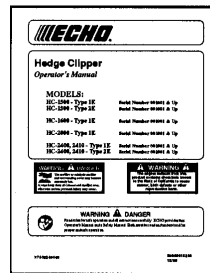

**The updated emissions information for your unit is:**

## EMISSION CONTROL

### EPA Phase 2

An **Emission Control Label** is located on the engine. The emission control system for these engines is EM (Engine Modification).

**IMPORTANT ENGINE INFORMATION**  
**ENGINE FAMILY : 2EHXS.0214RA DISPLACEMENT : 21.2cc**  
**ENGINE COMPLIANCE PERIOD: 300 Hours**  
**THIS ENGINE MEETS U.S. EPA PH2 EMISSION REGULATIONS FOR SMALL NONROAD ENGINES. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.**



**KOERTZ CORP.**



(This is an EXAMPLE ONLY, information on label varies by engine family).

## ECHO CONSUMER PRODUCT SUPPORT

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:30 am to 4:30 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit to help your Consumer Product Support Representative.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>