



Wireless-G Router

Rev. R

Users Manual

Table of Contents

INTRODUCTION.....	3
Wireless Router Features.....	3
Package Contents.....	5
Physical Details.....	7
INSTALLATION	9
Requirements.....	9
Procedure	9
SETUP	11
Overview.....	11
Configuration Program	12
Setup Wizard	14
Configuration via Web	19
PC CONFIGURATION.....	35
Overview.....	35
Windows Clients	35
Macintosh Clients.....	48
Linux Clients.....	48
Other Unix Systems.....	48
Wireless Station Configuration	49
APPENDIX A TROUBLESHOOTING	50
Overview.....	50
General Problems.....	50
Internet Access.....	50
Wireless Access	51
APPENDIX B ABOUT WIRELESS LANS.....	53
Modes	53
BSS/ESS	53
Channels.....	53
WEP	54
Wireless LAN Configuration	54
APPENDIX C SPECIFICATIONS	55
Multi-Function Wireless Router	55
Wireless Interface	55
Regulatory Approvals.....	56


Introduction

This Chapter provides an overview of the Hawking Technologies' Hi-Speed Wireless-G Router's features and capabilities.

Congratulations on the purchase of your new Hi-Speed, 54Mbps, Hawking Technologies Wireless-G Router. The Wireless-G Router is a multi-function device providing the following services:

- **Shared Broadband Internet Access** for all LAN users.
- **4-Port Switching Hub** for 10BaseT or 100BaseT connections.
- **Wireless Access Point** for 802.11b and 802.11g Wireless Stations.

Wireless LAN

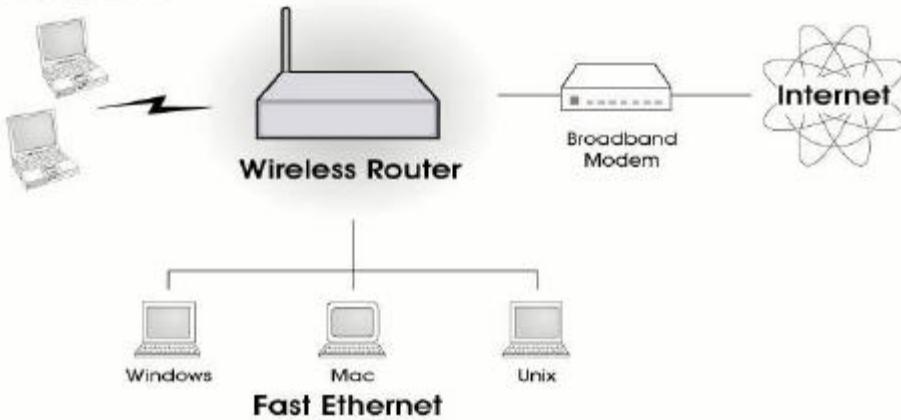

Wireless Router Features

The Wireless-G Router incorporates many advanced features, carefully designed to provide sophisticated functions while being easy to use.

Internet Access Features

- **Shared Internet Access.** All users on the LAN or WLAN can access the Internet through the Wireless Router, using only a single external IP Address. The local (invalid) IP Addresses are hidden from external sources. This process is called NAT (Network Address Translation).
- **DSL & Cable Modem Support.** The Wireless Router has a 10/100BaseT Ethernet port for connecting a DSL or Cable Modem. All popular DSL and Cable Modems are supported. SingTel RAS and Big Pond (Australia) login support is also included.
- **PPPoE, and PPTP.** The Internet (WAN port) connection supports PPPoE (PPP over Ethernet), PPTP (Peer-to-Peer Tunneling Protocol), as well as "Direct Connection" type services. Unnumbered IP with PPPoE is also supported.
- **Fixed or Dynamic IP Address,** the Wireless-G Router supports both Dynamic IP Address (IP Address is allocated on connection) and Fixed IP Address.

Advanced Internet Functions

- **Communication Applications.** Support for Internet communication applications, such as interactive Games, Telephony, and Conferencing applications, which are often difficult to use when behind a Firewall, is included.
- **Special Internet Applications.** Applications which use non-standard connections or port numbers are normally blocked by the Firewall. The ability to define and open ports for whatever your application may be is supported.
- **Virtual Servers.** This feature allows Internet users to access Internet servers on your LAN. The required setup is quick and easy.
- **DDNS Support.** DDNS (Dynamic DNS) allows Internet users to connect to Virtual Servers on your LAN using a domain name, even if your IP address is not fixed.
- **Multi-DMZ.** For each WAN (Internet) IP address allocated to you, only one (1) PC on your local LAN can be configured to allow unrestricted 2-way communication with Servers or individual users on the Internet. This provides the ability to run programs which are incompatible with Firewalls.
- **URL Filter.** Use the URL Filter to block access to undesirable Web sites by LAN users.
- **Internet Access Log.** See which Internet connections have been made.
- **Access Control.** Using the Access Control feature, you can assign LAN users to different groups, and determine which Internet services are available to each group.
- **VPN Pass through Support.** PCs with VPN (Virtual Private Networking) software using PPTP, L2TP and IPSec are transparently supported - no configuration is required.

Wireless Features

- **Standards Compliant.** The Wireless Router complies with the IEEE802.11g (DSSS) specifications for Wireless LANs.
- **Supports both 802.11b and 802.11g Wireless Stations.** The 802.11g standard provides for backward compatibility with the 802.11b standard, so both 802.11b and 802.11g Wireless stations can be used simultaneously.
- **Speeds to 54Mbps.** All speeds up to the 802.11g maximum of 54Mbps are supported.
- **WEP support.** Support for WEP (Wired Equivalent Privacy) is included. Key sizes of 64 Bit and 128 Bit are supported.
- **Wireless MAC Access Control.** The Wireless Access Control feature can check the the MAC address (hardware address) of Wireless stations to ensure that only trusted Wireless Stations can access your LAN.
- **Simple Configuration.** If the default settings are unsuitable, they can be changed quickly and easily.

LAN Features

- **4-Port Switching Hub.** The Wireless Router incorporates a 4-port 10/100BaseT switching hub, making it easy to create or extend your LAN.

- **DHCP Server Support.** Dynamic Host Configuration Protocol provides a dynamic IP address to PCs and other devices upon request. The Wireless Router can act as a **DHCP Server** for devices on your local LAN and WLAN.
- **Multi Segment LAN Support.** LANs containing one or more segments are supported, using the Wireless Router's RIP (Routing Information Protocol) support and built-in static routing table.

Configuration & Management

- **Easy Setup.** Use your WEB browser from anywhere on the LAN or WLAN for configuration.
- **Configuration File Upload/Download.** Save (download) the configuration data from the Wireless Router to your PC, and restore (upload) a previously-saved configuration file to the Wireless-G Router.
- **Remote Management.** The Wireless-G Router can be managed from any PC on your LAN. And, if the Internet connection exists, it can also (optionally) be configured via the Internet.
- **Network Diagnostics.** You can use the Wireless-G Router to perform a *Ping* or *DNS lookup*.
- **UPnP Support.** UPnP (Universal Plug and Play) allows automatic discovery and configuration of the Wireless Router. UPnP is supported by Windows ME, XP, or later.

Security Features

- **Password - protected Configuration.** Optional password protection is provided to prevent unauthorized users from modifying the configuration data and settings.
- **Wireless LAN Security.** WEP (Wired Equivalent Privacy) is supported, as well as Wireless access control to prevent unknown wireless stations from accessing your LAN.
- **NAT Protection.** An intrinsic side effect of NAT (Network Address Translation) technology is that by allowing all LAN users to share a single IP address, the location and even the existence of each PC is hidden. From the external viewpoint, there is no network, only a single device - the Wireless Router.
- **Protection against DoS attacks.** DoS (Denial of Service) attacks can flood your Internet connection with invalid packets and connection requests, using so much bandwidth and so many resources that Internet access becomes unavailable. The Wireless Router incorporates protection against DoS attacks.

Package Contents


The following items should be included:

- Hi-Speed Wireless-G Router Unit
- Power Adapter
- Quick Installation Guide
- One Ethernet Cable
- CD-ROM containing User's Manual and Setup Wizard.

If any of the above items are damaged or missing, please contact your dealer immediately.

Physical Details

Front-mounted LEDs

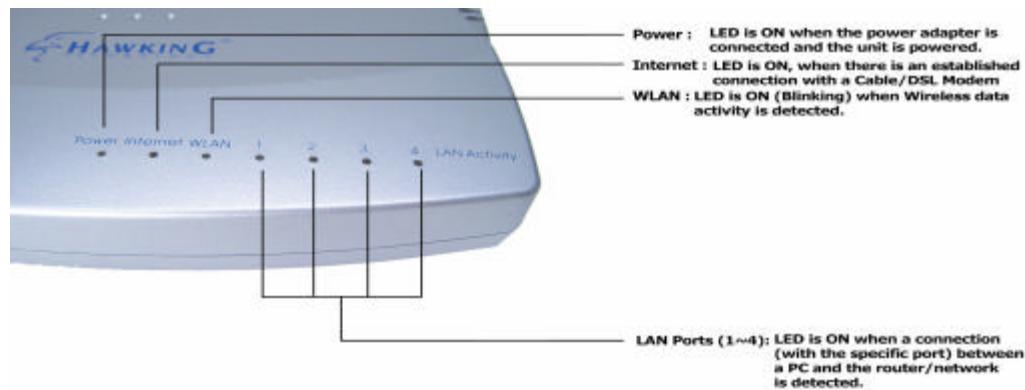

Power LED **On** - Power on.

Off - No power.

Internet LED **On** - Connection to the Broadband Modem attached to the WAN (Internet) port is established.

Off - No connection to the Broadband Modem.

Flashing - Data is being transmitted or received via the WAN port.

WLAN LED **On** - Wireless connection available; Wireless Access Point is ready for use.

Off - No Wireless connection available.

Flashing - Data is being transmitted or received via the Wireless access point. Data includes "network traffic" as well as user data.

LAN LEDs For each port, there are 2 LEDs

- **Link/Act**

- **On** - Corresponding LAN (hub) port is active.

- **Off** - No active connection on the corresponding LAN (hub) port.

- **Flashing** - Data is being transmitted or received via the corresponding LAN (hub) port.

- **100**

- **On** - Corresponding LAN (hub) port is using 100BaseT.

- **Off** - Corresponding LAN (hub) port connection is using 10BaseT, or no active connection.

Rear Panel

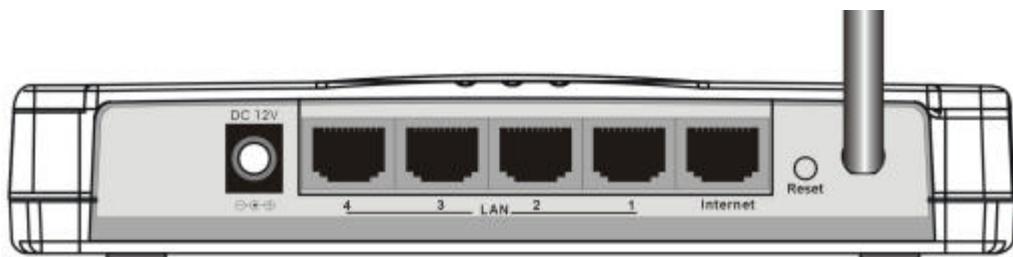


Figure 1: Rear Panel

- Power port** Connect the supplied power adapter here.
- 10/100BaseT LAN port** Use standard LAN cables (RJ45 connectors) to connect your PCs to these ports.
If required, any port can be connected to another hub. Any LAN port will automatically function as an "Uplink" port when necessary.
- Internet port (10/100BaseT)** Connect the DSL or Cable Modem here. If your modem came with a cable, use the supplied cable. Otherwise, use a standard LAN cable.
- Reset Button** This button has two (2) functions:
- **Reboot.** When pressed within 3~5 seconds, the power LED lights amber then released, the Wireless Router will reboot (restart).
 - **Clear All Data.** This button can also be used to clear ALL data and restore ALL settings to the factory default values.
To Clear All Data and restore the factory default values:
 1. After Power On.
 2. Hold the Reset Button down.
 3. Keep holding the Reset Button more than 5 seconds, until the Amber LED has flashed.
 4. Release the Reset Button. The Wireless Router is now using the factory default values.

Installation


2

This Chapter covers the physical installation of the Wireless Router.

Requirements

- Network cables. Use standard 10/100BaseT network (UTP) cables with RJ45 connectors.
- TCP/IP protocol must be installed on all PCs.
- For Internet Access, an Internet Access account with an ISP, and either of a DSL or Cable modem (for WAN port usage)
- To use the Wireless Access Point, all Wireless devices must be compliant with the IEEE802.11b or IEEE802.11g specifications.

Procedure

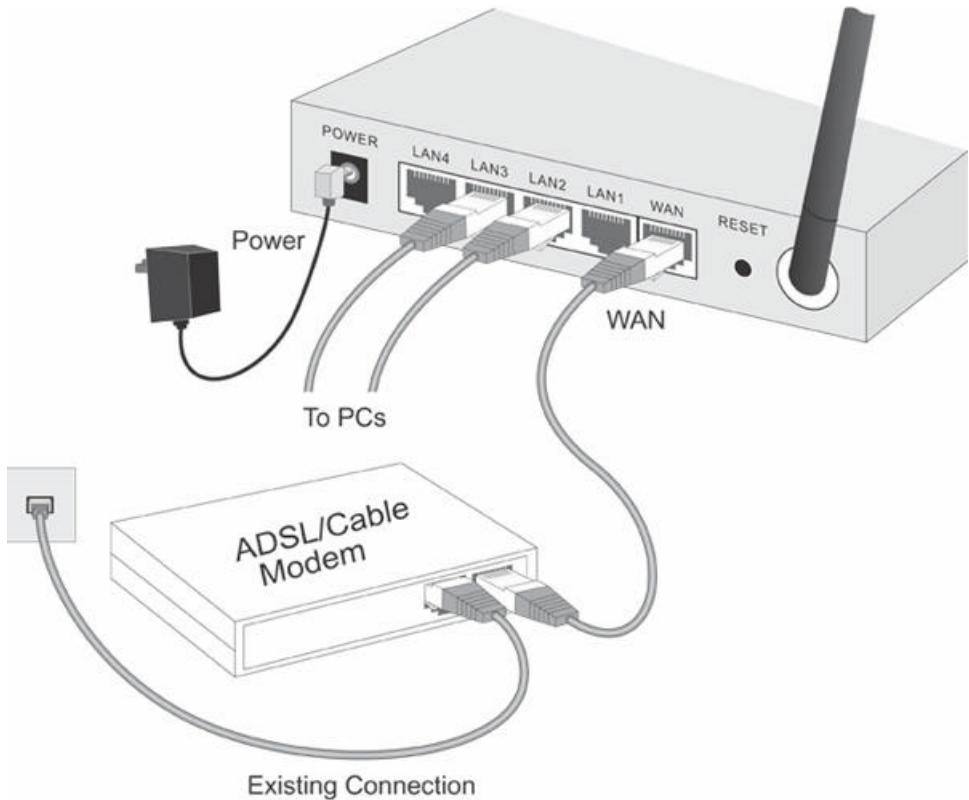

1. Choose an Installation Site

Select a suitable place on the network to install the Wireless Router.
Ensure the Wireless Router and the DSL/Cable modem are powered OFF.



Note!

For best Wireless reception and performance, the Wireless Router should be positioned in a central location with minimum obstructions between the Wireless Router and the PCs.

Also, if using multiple Access Points, adjacent Access Points should use different Channels to avoid interference.

2. Connect LAN Cables

Use standard LAN cables to connect PCs to the Switching Hub ports on the Wireless Router. Both 10BaseT and 100BaseT connections can be used simultaneously.

If required, connect any port to a normal port on another Hub, using a standard LAN cable. Any LAN port on the Wireless Router will automatically function as an "Up-link" port when required.

3. Connect WAN Cable

Connect the DSL or Cable modem to the WAN port on the Wireless Router. Use the cable supplied with your DSL/Cable modem. If no cable was supplied, use a standard cable.

4. Power Up

- Power on the Cable or DSL modem.
- Connect the supplied power adapter to the Wireless Router and power up. Use only the power adapter provided. Using a different one may cause hardware damage

5. Check the LEDs

- The *Power* LED should be ON.
- The *Power* LED should flash, then turn Off. If it stays on, there is a hardware error.
- For each LAN (PC) connection, the LAN *Link/Act* LED should be ON (provided the PC is also ON.)
- The *Internet* LED should be ON.
- The *WLAN* LED should be ON

For more information, refer to *Front-mounted LEDs* in Chapter 1.

Setup

3

This Chapter provides Setup details of the Wireless Router.

Overview

This chapter describes the setup procedure for:

- Internet Access
- LAN configuration
- Wireless setup
- Assigning a Password to protect the configuration data.

PCs on your local LAN may also require configuration. For details, see *Chapter 4 - PC Configuration*.

Other configuration may also be required, depending on which features and functions of the Wireless Router you wish to use. Use the table below to locate detailed instructions for the required functions.

To Do this:	Refer to:
Configure PCs on your LAN.	Chapter 4: PC Configuration
Check Wireless Router operation and Status.	Chapter 5: Operation and Status
Use any of the following Advanced features: <ul style="list-style-type: none">• Access Control• Dynamic DNS• Advanced Internet (Special Applications, DMZ, URL Filter)• Virtual Servers (Port Forwarding)• WAN Port Setup	Chapter 6: Advanced Features
Use any of the following Administration Configuration settings or features: <ul style="list-style-type: none">• Config File download/upload• Logs• Network Diagnostics (Ping, DNS Lookup)• Options (Backup DNS, TFTP, UPnP, Firewall)• PC Database• Remote Management• Security settings• Firmware Upgrade	Chapter 7 Advanced Administration

Configuration Program -

The Wireless Router contains an HTTP server. This enables you to connect to it, and configure it, using your Web Browser. **Your Browser must support JavaScript.**

The configuration program has been tested on the following browsers:

- Netscape V4.08 or later
- Internet Explorer V4 or later

Mac Installation

- Mac OSX users may also follow these instructions for setup. (IE browser recommended)

Preparation

Before attempting to configure the Wireless Router, please ensure that:

- Your PC can establish a physical connection to the Wireless Router. The PC and the Wireless Router must be directly connected (using the Hub ports on the Wireless Router) or on the same LAN segment.
- The Wireless Router must be installed and powered ON.
- If the Wireless Router's default IP Address (192.168.1.254) is already used by another device, the other device must be turned OFF until the Wireless Router is allocated a new IP Address during configuration.

Using UPnP

If your Windows system supports UPnP, an icon for the Wireless Router will appear in the system tray, notifying you that a new network device has been found, and offering to create a new desktop shortcut to the newly-discovered device.

- Unless you intend to change the IP Address of the Wireless Router, you can accept the desktop shortcut.
- Whether you accept the desktop shortcut or not, you can always find UPnP devices in *My Network Places* (previously called *Network Neighborhood*).
- Double - click the icon for the Wireless Router (either on the Desktop, or in *My Network Places*) to start the configuration. Refer to the following section *Setup Wizard* for details of the initial configuration process.

Using your Web Browser

To establish a connection from your PC to the Wireless Router:

1. After installing the Wireless Router in your LAN, start your PC. If your PC is already running, restart it.
2. Start your WEB browser.
3. In the *Address* box, enter "HTTP://" and the IP Address of the Wireless Router, as in this example, which uses the Wireless Router's default IP Address:

HTTP://192.168.1.254

Because the default password is blank, you will not be prompted for a password. However, you should assign a password. See the *Password Setup* section later in this chapter for details.

If you can't connect

If the Wireless Router does not respond, check the following:

- The Wireless Router is properly installed, LAN connection is OK, and it is powered ON. You can test the connection by using the "Ping" command:
 - Open the MS-DOS window or command prompt window.
 - Enter the command:
ping 192.168.1.254
If no response is received, either the connection is not working, or your PC's IP address is not compatible with the Wireless Router's IP Address. (See next item.)
- If your PC is using a fixed IP Address, its IP Address must be within the range 192.168.1.1 to 192.168.1.253 to be compatible with the Wireless Router's default IP Address of 192.168.1.254. Also, the *Network Mask* must be set to 255.255.255.0. See *Chapter 4 - PC Configuration* for details on checking your PC's TCP/IP settings.
- Ensure that your PC and the Wireless Router are on the same network segment. (If you don't have a router, this must be the case.)
- Ensure you are using the wired LAN interface. The Wireless interface can only be used if its configuration matches your PC's wireless settings.

Setup Wizard

The Setup Wizard provides brief and basic configuration of this device, you may enter each screen to change the default settings. For more detailed settings, you may refer to the "Configuration via Web" section.

1. View the listed configuration items and click **Next** to continue.

The screenshot shows the initial setup wizard page. At the top, there is a navigation bar with tabs: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, and STATUS. The first tab, "SETUP WIZARD", is highlighted. Below the navigation bar, the title "Setup Wizard" is displayed in blue. A descriptive text block states: "The setup wizard will guide you to configure the router for the first time. Please follow the setup wizard step by step." Below this text is a numbered list of five steps: 1. Choose your Time Zone, 2. Setup LAN Interface, 3. Setup WAN Interface, 4. Wireless LAN Setting, 5. Wireless Security Setting. At the bottom right of the page are two buttons: "Cancel" and "Next >>".

2. Configure Time Zone and NTP server by enabling NTP client update. Click **Next** to continue.

The screenshot shows the "Time Zone Setting" page of the setup wizard. At the top, there is a navigation bar with tabs: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, and STATUS. The first tab, "SETUP WIZARD", is highlighted. Below the navigation bar, the title "Setup Wizard - Time Zone Setting" is displayed in blue. A descriptive text block says: "You can maintain the system time by synchronizing with a public time server over the Internet." There is a checked checkbox labeled "Enable NTP client update". Below this is a "Time Zone Select:" label followed by a dropdown menu showing "(GMT-08:00)Pacific Time (US & Canada); Tijuana". Underneath is an "NTP server:" label followed by another dropdown menu showing "192.5.41.41 - North America". At the bottom right are three buttons: "Cancel", "<< Back", and "Next >>".

3. Configure the parameters for area network (If you want to change the default parameter) by entering New IP Address and Subnet Mask.

The screenshot shows the "LAN Interface Setup" page of the setup wizard. At the top, there is a navigation bar with tabs: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, and STATUS. The first tab, "SETUP WIZARD", is highlighted. Below the navigation bar, the title "Setup Wizard - LAN Interface Setup" is displayed in blue. A descriptive text block states: "This page is used to configure the parameters for local area network which connects to the LAN port of your Router. Here you may change the setting for IP address, subnet mask." Below this text are two input fields: "IP Address:" containing "192.168.1.254" and "Subnet Mask:" containing "255.255.255.0". At the bottom right are three buttons: "Cancel", "<< Back", and "Next >>".

4. Change the access method (Static IP, DHCP, PPPoE, PPTP) by selecting for the pull-down menu. Enter the appropriate/required information for your selection. (If you do not know what to input in these fields please call your ISP for more information. Click **Next** to continue.

WAN Access Type:

[Next >>](#)

5. Configure the parameters for wireless LAN clients. Check the Disable Access Point to disable the settings of this screen and disable your wireless connection. Click **Next** to continue.

Disable Access Point

Band:

SSID:

Channel Number:

[Cancel](#) [<< Back](#) [Next >>](#)

6. To manage your wireless network security by selecting the encryption type (None, WEP, WPA and WPA2) from the pull-down menu. Enter the required information for your specific security setting selection. Note that all wireless devices within your network must have the same settings in order for the network to function properly. (WPA2 is an advanced security setting and may not yet be available with some networking devices)

SETUP WIZARD | WIRELESS | ADVANCED | LAN | ADMINISTRATION | STATUS |

Setup Wizard - Wireless Security Setup

This page allows you to setup the wireless security. Turning on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

WEP Encryption (Wired Equivalent Privacy) provides basic wireless security for your network.

WPA WiFi Protected Access provides advanced wireless security for your network.

Hawking recommends using WEP Shared Key Authentication or WPA2 Mixed Mode for securing your network.

Note: Each device in your wireless network MUST use the same encryption method and key for your wireless network to function properly.

Authentication: Open system or Shared Key

Encryption: None

WEP Wired Equivalent Privacy

SETUP WIZARD | WIRELESS | ADVANCED | LAN | ADMINISTRATION | STATUS |

Setup Wizard - Wireless Security Setup

This page allows you to setup the wireless security. Turning on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

WEP Encryption (Wired Equivalent Privacy) provides basic wireless security for your network.

WPA WiFi Protected Access provides advanced wireless security for your network.

Hawking recommends using WEP Shared Key Authentication or WPA2 Mixed Mode for securing your network.

Note: Each device in your wireless network MUST use the same encryption method and key for your wireless network to function properly.

Authentication: Shared Key

Encryption: WEP

Key Length: 64-bit

Key Format: ASCII

Default Tx Key: Key 1

Encryption Key 1:

Encryption Key 2:

Encryption Key 3:

Encryption Key 4:

WEP is a basic wireless security setting. It is not full proof and may be hacked into by experienced hackers. For WEP there are two types of security keys 64-bit and 128-bit. The higher the number the more secure. You will have to input the corresponding key (10 digit hex key) for 64-Bit and (28-digit hex key) for 128-Bit.

WPA WiFi Protected Access

The screenshot shows a web-based setup wizard for wireless security. At the top, there's a navigation bar with tabs: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, and STATUS. The WIRELESS tab is selected. Below the tabs, the title "Setup Wizard - Wireless Security Setup" is displayed. A descriptive text block states: "This page allows you to setup the wireless security. Turning on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network." There are two main sections for configuration:

- WEP Encryption (Wired Equivalent Privacy)**: This section is described as providing basic wireless security for your network.
- WPA WiFi Protected Access**: This section is described as providing advanced wireless security for your network.

A note at the bottom of the page specifies: "Hawking recommends using WEP Shared Key Authentication or WPA2 Mixed Mode for securing your network."

Note: Each device in your wireless network MUST use the same encryption method and key for your wireless network to function properly.

The configuration fields shown include:

- Authentication: A dropdown menu set to "WPA-PSK".
- Encryption: A dropdown menu set to "WPA(TKIP)".
- WPA(Pre-Shared Key)Format: A dropdown menu set to "Passphrase".
- WPA Pre-Shared Key: An input field for entering the passphrase.

At the bottom right are three buttons: "Cancel", "<< Back", and "Finished".

WPA is a more advanced standard of security. WPA2 is a newer version of WPA. WPA gives you a choice of two encryption methods: TKIP (Temporal Key Integrity Protocol) and AES (Advanced Encryption System). You simply enter in a passphrase which will be converted to a valid encryption key that will be used throughout your system. Hawking recommends that WPA be used within your network for tighter security.

Note that implementing encryption may have a slight negative effect on your network's performance.

Common Connection Types

Cable Modems

Type	Details	ISP Data required
Dynamic IP Address	Your IP Address is allocated automatically, when you connect to your ISP.	Usually, none. However, some ISP's may require you to use a particular Hostname, Domain name, or MAC (physical) address.
Static (Fixed) IP Address	Your ISP allocates a permanent IP Address to you.	IP Address allocated to you. Some ISP's may also require you to use a particular Hostname, Domain name, or MAC

		(physical) address.
--	--	---------------------

DSL Modems

Type	Details	ISP Data required
Dynamic IP Address	Your IP Address is allocated automatically, when you connect to your ISP.	None.
Static (Fixed) IP Address	Your ISP allocates a permanent IP Address to you.	IP Address allocated to you.
PPPoE	You connect to the ISP only when required. The IP address is usually allocated automatically.	User name and password.
PPTP	Mainly used in Europe. You connect to the ISP only when required. The IP address is usually allocated automatically, but may be Static (Fixed).	<ul style="list-style-type: none"> • PPTP Server IP Address. • User name and password. • IP Address allocated to you, if Static (Fixed).

Other Modems (e.g. Broadband Wireless)

Type	Details	ISP Data required
Dynamic IP Address	Your IP Address is allocated automatically, when you connect to your ISP.	None.
Static (Fixed) IP Address	Your ISP allocates a permanent IP Address to you.	IP Address allocated to you.

Configuration via Web

LAN Interface Setup

The screenshot shows the 'LAN Interface Setup' page with the following configuration:

- IP Address:** 192.168.1.254
- Subnet Mask:** 255.255.255.0
- DHCP:** Server (selected)
- DHCP Client Range:** 192.168.1.1 - 192.168.1.253
- Show DHCP Client** button
- Save** and **Reset** buttons

This page is used to configure the parameters for local area network which connects to the LAN port of your Router. Here you may change the setting for IP address, subnet mask, DHCP, etc..

IP Address	Default: 192.168.1.254 (this is the local address of this Router)
Subnet Mask	Default: 255.255.255.0
DHCP	<p>Disable: Select to disable this Router to distribute IP Addresses (Disabled)</p> <p>Server: Select to enable this Router to distribute IP Addresses (DHCP Server). And the following field will be activated for you to enter the starting IP Address</p>
DHCP Client Range	<p>The starting address of this local IP network address pool. The pool is a piece of continuous IP address segment. Keep the default value 192.168.1.1 should work for most cases.</p> <ul style="list-style-type: none"> • Maximum: 253. Default value 253 should work for most cases. <p><i>Note: If "Continuous IP address poll starts" is set at 192.168.1.1 and the "Number of IP address in pool" is 253, the device will distribute IP addresses from 192.168.1.1 to 192.168.1.253 to all the computers in the network that request IP addresses from DHCP server (Router)</i></p>
Show Client	Click to show Active DHCP Client table.
Save	After completing the settings on this page, click Save to save the settings.

ResetClick **Reset** to restore to default values.

Password Setup

SETUP WIZARD	WIRELESS	ADVANCED	LAN	ADMINISTRATION	STATUS
REMOTE MANAGEMENT	Password Setup This page is used to set the account to access the web server of this router. Empty user name and password will disable the protection. New Password: <input type="text"/> Confirmed Password: <input type="text"/>				
PASSWORD	<input type="button" value="Save"/> <input type="button" value="Reset"/>				
CONFIG FILE					
LOGS					
IP FILTERING					
MAC FILTERING					
URL FILTERING					
STATISTICS					
TIME ZONE SETTING					
UPGRADE FIRMWARE					

New Password	Maximum input is 36 alphanumeric characters (case sensitive)
Confirmed Password	Key in the password again to confirm.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to clear settings.

Status

SETUP WIZARD	WIRELESS	ADVANCED	LAN	ADMINISTRATION	STATUS															
REMOTE MANAGEMENT	Statistics This page shows the packet counters for transmission and reception regarding to wireless and Ethernet networks.																			
PASSWORD	<table border="1"> <tr> <td rowspan="2">Wireless LAN</td> <td>Sent Packets</td> <td>31</td> </tr> <tr> <td>Received Packets</td> <td>21</td> </tr> <tr> <td rowspan="2">Ethernet LAN</td> <td>Sent Packets</td> <td>1217</td> </tr> <tr> <td>Received Packets</td> <td>6928</td> </tr> <tr> <td rowspan="2">Ethernet WAN</td> <td>Sent Packets</td> <td>153</td> </tr> <tr> <td>Received Packets</td> <td>0</td> </tr> </table>					Wireless LAN	Sent Packets	31	Received Packets	21	Ethernet LAN	Sent Packets	1217	Received Packets	6928	Ethernet WAN	Sent Packets	153	Received Packets	0
Wireless LAN	Sent Packets	31																		
	Received Packets	21																		
Ethernet LAN	Sent Packets	1217																		
	Received Packets	6928																		
Ethernet WAN	Sent Packets	153																		
	Received Packets	0																		
CONFIG FILE																				
LOGS																				
IP FILTERING																				
MAC FILTERING																				
URL FILTERING																				
STATISTICS																				
TIME ZONE SETTING																				
UPGRADE FIRMWARE																				

Internet	Shows the internet connection status
LAN	Shows the Local area network information
System	Briefly shows the device name and firmware information
Connection Details	Click to show more details of the internet connection

System Data	Click to show the detailed information of the system
Refresh Screen	Click to refresh all the data


Wireless Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.

Disable Access Point
Band: 2.4 GHz (B+G)
SSID: Untitled
Channel Number: 11
Associated Clients: Show Active Clients

Disable Access Point	<p>Check to disable the Access Point function. (Disables Wireless Access in your Network)</p> <p>The wireless (WLAN) LED on front panel will remain OFF if the Wireless interface is disabled.</p>
Band	<p>You can choose one mode of the following you need.</p> <ul style="list-style-type: none"> <input checked="" type="radio"/> 2.4GHz (B): 802.11b supported rate only. <input checked="" type="radio"/> 2.4GHz (G): 802.11g supported rate only. <input checked="" type="radio"/> 2.4GHz (B+G): 802.11b supported rate and 802.11g supported rate. <p>The default is 2.4GHz (B+G) mode.</p>
Channel Number	Select which channel be located (from 1 to 11).
Associated Clients	Click to show all the listed active clients.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

Wireless Advanced Settings

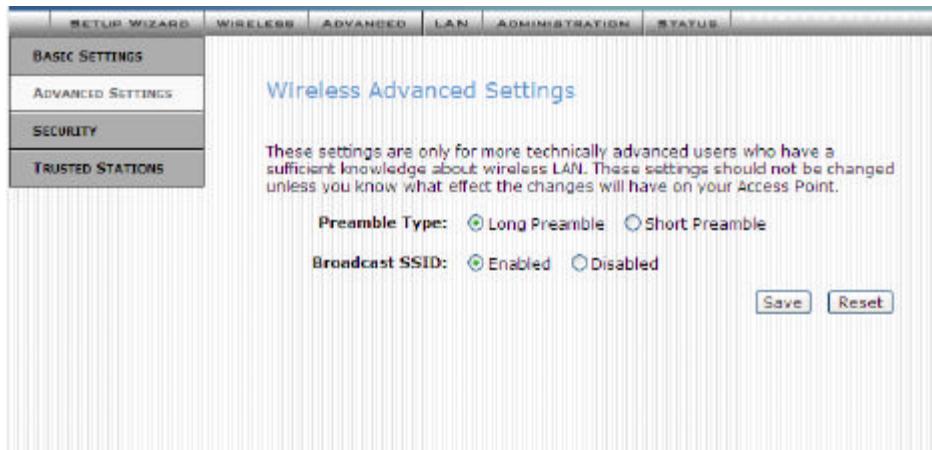

Authentication Type	<p>Open System: If your access point/wireless router is using "Open" authentication, then the wireless adapter will need to be set to the same authentication type.</p> <p>Shared Key: Shared Key is when both the sender and the recipient share a secret key.</p> <p>Auto: Select Auto Switch for the adapter to automatically select the appropriate</p>
Preamble Type	A preamble is a signal used in wireless environment to synchronize the transmitting timing including Synchronization and Start frame delimiter. (Note: If you want to change the Preamble type into Long or Short , please check the setting of AP.)
Broadcast SSID	<p>Enable: This wireless AP will broadcast its SSID to stations.</p> <p>Disable: This wireless AP will not broadcast its SSID to stations. If stations want to connect to this wireless AP, this AP's SSID should be known in advance to make a connection.</p>
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

Wireless Security Setup

	SETUP WIZARD	WIRELESS	ADVANCED	LAN	ADMINISTRATION	STATUS
BASIC SETTINGS	<h3>Wireless Security Setup</h3> <p>This page allows you to setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.</p> <p>Authentication: <input type="button" value="Open system or Shared Key"/></p> <p>Encryption: <input type="button" value="WEP"/> <input type="button" value="Set WEP Key"/> <small>Note: When encryption WEP is selected, you must set WEP key value.</small></p> <p><input checked="" type="radio"/> WEP 64bits <input type="radio"/> WEP 128bits</p> <p>WPA(Pre-Shared Key) Format: <input type="button" value="Passphrase"/></p> <p>WPA Pre-Shared Key: <input type="text"/></p> <p>Group Key Life Time: <input type="text" value="86400"/> sec <input type="checkbox"/> Enable Pre-Authentication</p> <p>Authentication RADIUS Server: Port: <input type="text" value="1812"/> IP address: <input type="text"/> Password: <input type="password"/></p> <p><input type="button" value="Save"/> <input type="button" value="Reset"/></p>					
Encryption	<p>WEP : WEP (Wired Equivalent Privacy) is a data security mechanism based on a 64 Bit/128 Bit shared key algorithm.</p> <p>WPA (TKIP): (WiFi Protected Access) is more secure than WEP, and should be used if possible.</p>					
Set WEP key	<p>KEY1 ~ KEY 4: You can specify up to 4 different keys, but only one can be used at a time.</p> <p>A key of 10 hexadecimal characters (0-9, A-F) is required if a 64-bit Key Size is selected.</p> <p>A key of 26 hexadecimal characters (0-9, A-F) is required if a 128-bit Key Size is selected.</p>					
WPA-PSK (Pre-Shared key)	<p>WPA Pre-Shared Key: In the Passphrase field, enter the key that you are sharing with the network for the WLAN connection.</p>					
WPA2-PSK TKIP and AES	<p>WPA2 Pre-Shared Key: WPA2 is a more advanced security setting than WPA. It has the most advanced security technology to keep your data encrypted. Setup is the same as WPA. Simply enter a passphrase for use throughout your network.</p>					
WPA/WPA2 Radius	<p>WPA and WPA2 Radius: If you wish to use an authentication server you will need to input the correct information regarding your Radius server.</p>					
Save	<p>After completing the settings on this page, click Save to save the settings.</p>					

ResetClick **Reset** to restore to default values.

Wireless Trusted Stations

If you choose 'Allow Listed', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point.

Wireless Access Control Mode:

MAC Address:

Description:

Save Reset

Current Access Control List:

Wireless Access Control Mode

Select the Access Control Mode from the pull-down menu.

Disable: Select to disable Wireless Access Control Mode.

Allow Listed: Only the stations shown in the table can associate with the AP.

MAC Address

The Mac address of the station associated with the AP.

Description

You may key in a description for the MAC Address

Current Access Control List

Shows the current access control list.

Delete Selected

Select the MAC Address(es) you want to delete and then click the **Delete Selected** button to delete the selected items.

Delete All

Click to delete all the MAC Address (es) listed.

Save

After completing the settings on this page, click **Save** to save the settings.

Reset

Click **Reset** to restore to default values.

Access Control

	SETUP WIZARD	WIRELESS	ADVANCED	LAN	ADMINISTRATION	STATUS	
WAN PORT							
ACCESS CONTROL							
DYNAMIC DNS							
SPECIAL APPLICATION							
VIRTUAL SERVERS							
DMZ							
DOS SETTING							
PING							
DIAGNOSTICS							

Access Control

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Router. Here you can restrict local LAN clients to access Internet application/services which use certain port to work. Use of such filters can be helpful in securing or restricting your local network.

Enable Access Control

Select Services to Block:

Port Range: -

Protocol:

Description:

Current Blocked Table:

	Port Range	Protocol	Description	Select
				<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/> <input type="button" value="Reset"/>

Enable Access Control	Select to enable Access Control function.
Select Services to Block	This lists all defined Services. Select the Services you wish to block.
Port Range	For TCP and UDP Services, enter the beginning of the range of port numbers used by the service. If the service uses a single port number, enter it in both the start and finish fields.
Protocol	Select the protocol (TCP, UDP or Both) used to the remote system or service.
Description	You may key in a description for port range.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

Dynamic DNS

SETUP WIZARD WIRELESS ADVANCED LAN ADMINISTRATION STATUS

WAN PORT
ACCESS CONTROL
DYNAMIC DNS
SPECIAL APPLICATION
VIRTUAL SERVERS
DMZ
DOS SETTING
PING
DIAGNOSTICS

Dynamic DNS Setting

Dynamic DNS is a service that provides you with a valid, unchanging, internet domain name (an URL) to go with that (possibly everchanging) IP-address.

Enable DDNS

Service Provider:

Domain Name:

User Name/Email:

Password/Key:

Result:

Note:
For TZO, you can have a 30 days free trial [here](#) or manage your TZO account in [control panel](#).
For DynDNS, you can create your DynDNS account [here](#).

Enable DDNS	Select to enable DDNS function. This free service is very useful when combined with the Virtual Server feature. It allows Internet users to connect to your Virtual Servers using a URL, rather than an IP Address. This also solves the problem of having a dynamic IP address. With a dynamic IP address, your IP address may change whenever you connect, which makes it difficult to connect to you.
Service Provider	<ul style="list-style-type: none">• Select the desired DDNS Service Provider from the list.• Details of your DDNS account (Name, password, Domain name) must then be entered and saved on this screen.• This device will then automatically ensure that your current IP Address is recorded by the DDNS Service Provider.• From the Internet, users will now be able to connect to your Virtual Servers (or DMZ PC) using your Domain name.
Domain Name	<ul style="list-style-type: none">• Apply for a Domain Name, and ensure it is allocated to you.
User Name/Email	Enter your Username for the DDNS Service.
Password/key	Enter your current password for the DDNS Service.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

? Normally, this message should be "Update successful"

? If the message is "No host" or some other error message, you need to connect to the DDNS Service provider and correct the problem.

DMZ

SETUP WIZARD	WIRELESS	ADVANCED	LAN	ADMINISTRATION	STATUS
WAN PORT					
ACCESS CONTROL					
DYNAMIC DNS					
SPECIAL APPLICATION					
VIRTUAL SERVERS					
DMZ					
DOS SETTING					
PING					
DIAGNOSTICS					

DMZ

A Demilitarized Zone is used to provide Internet services without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP (e-mail) servers and DNS servers.

Enable DMZ

DMZ Host IP Address:

Save **Reset**

Enable DMZ

If the DMZ Host Function is enabled, it means that you set up DMZ host at a particular computer to be exposed to the Internet so that some applications/software, especially Internet / online game can have two-way connections.

DMZ Host IP Address

Input the IP address of a particular host in your LAN that will receive all the packets originally going to the WAN port/Public IP address above.

Note: You need to give your LAN PC clients a fixed/static IP address for DMZ to work properly.

Save

After completing the settings on this page, click **Save** to save the settings.

Reset

Click **Reset** to restore to default values.

Virtual Server

SETUP WIZARD	WIRELESS	ADVANCED	LAN	ADMINISTRATION	STATUS
WAN PORT					
ACCESS CONTROL					
DYNAMIC DNS					
SPECIAL APPLICATION					
VIRTUAL SERVERS					
DMZ					
DOS SETTING					
PING					
DIAGNOSTICS					

Virtual Servers

Entries in this table allow you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.

Enable Virtual Servers

Servers:

Local IP Address:

Protocol:

Port Range: -

Description:

Save **Reset**

Enable Virtual Servers	Check to enable virtual server function.
Servers	<p>You can set up a local server with specific port number that stands for the service (e.g. web (80), FTP (21), Telnet (23)). When this device receives an incoming access request for this specific port, it will be forwarded to the corresponding internal server. You can add virtual servers by either port numbers or by names.</p> <p>Maximum 24 Server entries are allowed and each port number can only be assigned to one IP address.</p>
Local IP Address	Enter the Local Server's IP address.
Protocol	Select the protocol (TCP, UDP or Both) used to the remote system or service.
Port Range	For TCP and UDP Services, enter the beginning of the range of port numbers used by the service. If the service uses a single port number, enter it in both the start and finish fields.
Description	You may key in a description for the local IP address.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

WAN Port Configuration

SETUP WIZARD WIRELESS ADVANCED LAN ADMINISTRATION STATUS	<p>WAN Port Configuration</p> <p>This page is used to configure the parameters for Internet network which connects to the WAN port of your router. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.</p> <p>WAN Access Type: <input type="button" value="DHCP Client"/></p> <p><input checked="" type="radio"/> Attain DNS Automatically <input type="radio"/> Set DNS Manually</p> <p>DNS 1: <input type="text"/></p> <p>DNS 2: <input type="text"/></p> <p>DNS 3: <input type="text"/></p> <p>Clone MAC Address: <input type="text" value="000000000000"/></p> <p><input checked="" type="checkbox"/> Enable uPNP <input checked="" type="checkbox"/> Enable IPsec pass through on VPN connection <input checked="" type="checkbox"/> Enable PPTP pass through on VPN connection <input checked="" type="checkbox"/> Enable L2TP pass through on VPN connection</p> <p style="text-align: right;"><input type="button" value="Save"/> <input type="button" value="Reset"/></p>
---	--

WAN Access Type	Select the WAN access type (Static IP, DHCP, PPPoE and PPTP) from the pull-down menu.
DNS 1-3	This is the ISP's DNS server IP address that they gave you; or you can specify your own preferred DNS server IP address The secondary and third DNS servers are optional. You can enter another DNS server's IP address as a backup. The secondary and third DNS servers will be used should the above DNS fail.
Clone MAC Address	Your ISP may require a particular MAC address in order for you to connect to the Internet. This MAC address is the PC's MAC address that your ISP had originally connected your Internet connection to. Type in this Clone MAC address in this section to replace the WAN MAC address with the MAC address of that PC.
Enable Web Server Access via WAN	Remote administration. To enable web server by which allows user to configure system via remote site.
Save	After completing the settings on this page, click Save to save the settings.

ResetClick **Reset** to restore to default values.

Config File

This feature allows you to download the current settings from the Wireless Router, and save them to a file on your PC.

You can restore a previously-downloaded configuration file to the Wireless Router, by uploading it to the Wireless Router.

This screen also allows you to set the Wireless Router back to its factory default configuration. Any existing settings will be deleted.

An example **Config File** screen is shown below.

The screenshot shows the 'Config File' section of a router's web interface. At the top, there is a horizontal navigation bar with tabs: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, and STATUS. Below this, on the left, is a vertical sidebar with links: REMOTE MANAGEMENT, PASSWORD, CONFIG FILE (which is highlighted in blue), LOGS, IP FILTERING, MAC FILTERING, URL FILTERING, STATISTICS, TIME ZONE SETTING, and UPGRADE FIRMWARE. The main content area is titled 'Config File'. It contains instructions for saving current settings ('Save Your Current Settings') with a 'Backup Config:' field, a 'Download' button, and a 'Upgrade your Firmware' link. It also includes a 'Load a Previously Saved Setting:' field with a 'Restore Config:' button, a 'Browse...' button, and a 'Restore' button. Finally, it has a 'Reset Your Router Settings:' section with a 'Default Config:' field and a 'Restore Defaults' button.

Backup Config

Use this to download a copy of the current configuration, and store the file on your PC. Click **Download** to start the download.

Restore Config

This allows you to restore a previously-saved configuration file back to the Wireless Router.

Click **Browse** to select the configuration file, then click **Restore** to upload the configuration file.

WARNING !

Uploading a configuration file will destroy (overwrite) ALL of the existing settings.

Default Config


Clicking the **Restore Defaults** button will reset the Wireless Router to its factory default settings.

WARNING !

This will delete ALL of the existing settings.

System Log

The Logs record various types of activity on the Wireless Router. This data is useful for troubleshooting, but enabling all logs will generate a large amount of data and adversely affect performance.

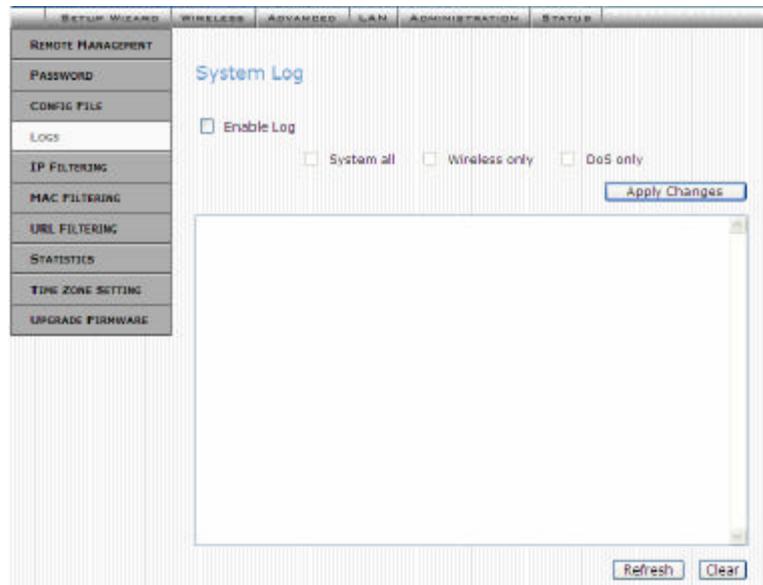

Enable Log	Click to enable log function.
Enable Remote Log	Click to enable the remote log function. The log record will be saved into a remote server.
Save	After completing the settings on this page, click Save to save the settings.
Refresh	Click to refresh the logs.
Clear	Click Clear to delete the logs.

IP Filtering

WIRELESS ADVANCED LAN ADMINISTRATION STATUS

IP Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Router. Here you can restrict local LAN clients to access Internet application/services by IP Address. Use of such filters can be helpful in securing or restricting your local network.

Enable IP Filtering

Local IP Address:

Protocol:

Description:

Save **Reset**

Current Filter Table: **Local IP Address** **Protocol** **Description** **Select**

Delete Selected **Delete All** **Reset**

Enable IP Filtering	Check to enable the IP filtering function.
Local IP Address	Enter the client IP address.
Protocol	Select the protocol (TCP, UDP or Both) used to the remote system or service.
Description	You may key in a description for the local IP address
Current Filter Table	Shows the current filter information.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

MAC Filtering

The screenshot shows the MAC Filtering configuration page. On the left is a sidebar with links: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, STATUS, REMOTE MANAGEMENT, PASSWORD, CONFIG FILE, LOGS, IP FILTERING, MAC FILTERING (which is selected), URL FILTERING, STATISTICS, TIME ZONE SETTING, and UPGRADE FIRMWARE. The main area has a title "MAC Filtering". A note says: "Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Router. Here you can restrict local LAN clients to access Internet application/services by MAC Address. Use of such filters can be helpful in securing or restricting your local network." Below this are fields for "Enable MAC Filtering" (checkbox), "MAC Address" (text input), "Description" (text input), and buttons for "Save", "Reset", "Delete Selected", "Delete All", and "Reset". At the bottom is a table titled "Current Filter Table" with columns "MAC Address", "Description", and "Select".

Enable MAC Filtering	Check to enable MAC filtering function.
MAC Address	Enter the client MAC address.
Description	You may key in a description for the MAC address.
Current Filter Table	Shows the current filter information.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.

Statistics

The screenshot shows the Statistics page. The sidebar on the left includes links: SETUP WIZARD, WIRELESS, ADVANCED, LAN, ADMINISTRATION, STATUS, REMOTE MANAGEMENT, PASSWORD, CONFIG FILE, LOGS, IP FILTERING, MAC FILTERING, URL FILTERING, STATISTICS (selected), TIME ZONE SETTING, and UPGRADE FIRMWARE. The main area has a title "Statistics". A note states: "This page shows the packet counters for transmission and reception regarding to wireless and Ethernet networks." Below is a table with three sections: "Wireless LAN", "Ethernet LAN", and "Ethernet WAN", each with "Sent Packets" and "Received Packets" rows. A "Refresh" button is at the bottom right.

	Sent Packets	Received Packets
Wireless LAN	31	21
Ethernet LAN	1217	6928
Ethernet WAN	153	0

Refresh	Click to refresh the statistics table.
----------------	--

Time Zone Setting

The screenshot shows the 'Time Zone Setting' page of a router's web interface. At the top, there are tabs for 'SETUP WIZARD', 'WIRELESS', 'ADVANCED', 'LAN', 'ADMINISTRATION', and 'STATUS'. On the left, a sidebar menu includes 'REMOTE MANAGEMENT', 'PASSWORD', 'CONFIG FILE', 'LOGS', 'IP FILTERING', 'MAC FILTERING', 'URL FILTERING', 'STATISTICS', 'TIME ZONE SETTING' (which is selected), and 'UPGRADE FIRMWARE'. The main content area is titled 'Time Zone Setting' and contains the following information:

You can maintain the system time by synchronizing with a public time server over the Internet.

Current Time: Year 2000 Month 1 Day 1 Hr 1 Min 48 Sec 5
 Enable NTP client update

Time Zone Select: (GMT-08:00)Pacific Time (US & Canada); Tijuana
 192.5.41.41 - North America
 (Manual IP Setting)

Save Reset Refresh

Current Time	Enter the current time of this wireless router.
Enable NTP client update	Check to enable NTP (Network Time Protocol Server) client update function.
Time Zone Select	Select the time zone from the pull-down menu.
NTP server	You may choose to select NTP server from the pull-down menu or enter an IP address of a specific server.
Save	After completing the settings on this page, click Save to save the settings.
Reset	Click Reset to restore to default values.
Refresh	Click to refresh the current time.

Upgrade Firmware

The screenshot shows the 'Upgrade Firmware' page of a router's web interface. At the top, there are tabs for 'SETUP WIZARD', 'WIRELESS', 'ADVANCED', 'LAN', 'ADMINISTRATION', and 'STATUS'. On the left, a sidebar menu includes 'REMOTE MANAGEMENT', 'PASSWORD', 'CONFIG FILE', 'LOGS', 'IP FILTERING', 'MAC FILTERING', 'URL FILTERING', 'STATISTICS', 'TIME ZONE SETTING' (which is selected), and 'UPGRADE FIRMWARE'. The main content area is titled 'Upgrade Firmware' and contains the following information:

This page allows you to upgrade this router's firmware to new version. If you want to keep the current configuration, remember to backup the config file before upgrading firmware, and restore the config file after upgrading firmware.

Please note, **DO NOT** power off the router during this process because it may crash the system.

Select File:

Browse	Click the Browse button, find and open the firmware file (the browser will display to correct file path).
Start Upgrade	Click the Start Upgrade button to perform

ResetClick **Reset** to restore to default values.

Navigation & Data Input

- Use the menu bar on the left of the screen, and the "Back" button on your Browser, for navigation.
- Changing to another screen without clicking "Save" does NOT save any changes you may have made. You must "Save" before changing screens or your data will be ignored.

PC Configuration

This Chapter details the PC Configuration required on the local ("Internal") LAN.

Overview

For each PC, the following may need to be configured:

- TCP/IP network settings
- Internet Access configuration
- Wireless configuration

Windows Clients

This section describes how to configure Windows clients for Internet access via the Wireless Router.

The first step is to check the PC's TCP/IP settings.

The Wireless Router uses the TCP/IP network protocol for all functions, so it is essential that the TCP/IP protocol be installed and configured on each PC.

TCP/IP Settings - Overview

If using the default Wireless Router settings, and the default Windows TCP/IP settings, no changes need to be made.


- By default, the Wireless Router will act as a DHCP Server, automatically providing a suitable IP Address (and related information) to each PC when the PC boots.
- For all non-Server versions of Windows, the default TCP/IP setting is to act as a DHCP client.

If using a Fixed (specified) IP address, the following changes are required:


- The *Gateway* must be set to the IP address of the Wireless Router
- The *DNS* should be set to the address provided by your ISP.

Checking TCP/IP Settings - Windows 98/ME:

1. Select *Control Panel - Network*. You should see a screen like the following:

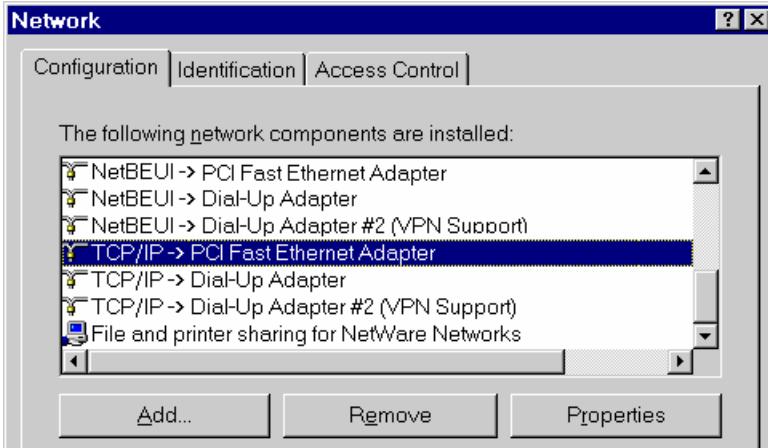

2. Select the *TCP/IP* protocol for your network card.
3. Click on the *Properties* button. You should then see a screen like the following.

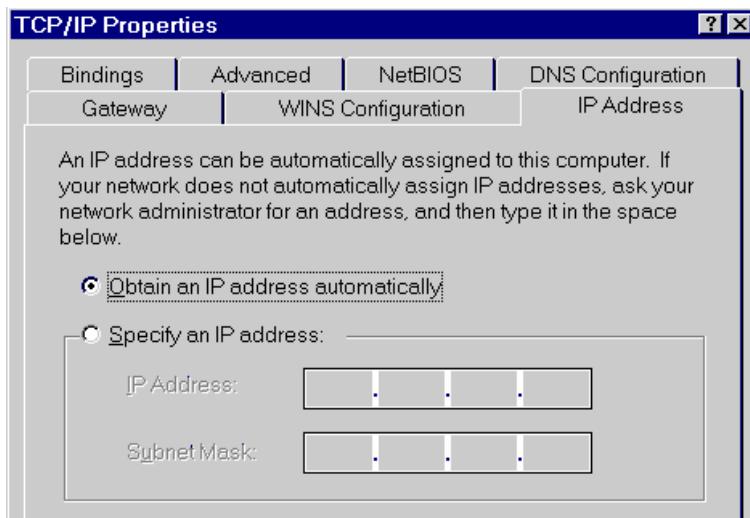

Ensure your TCP/IP settings are correct, as follows:

Using DHCP


To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.


Using "Specify an IP Address"

If your PC is already configured, check with your network administrator before making the following changes:

- On the *Gateway* tab, enter the Wireless Router's IP address in the *New Gateway* field and click *Add*, as shown below. Your LAN administrator can advise you of the IP Address they assigned to the Wireless Router.

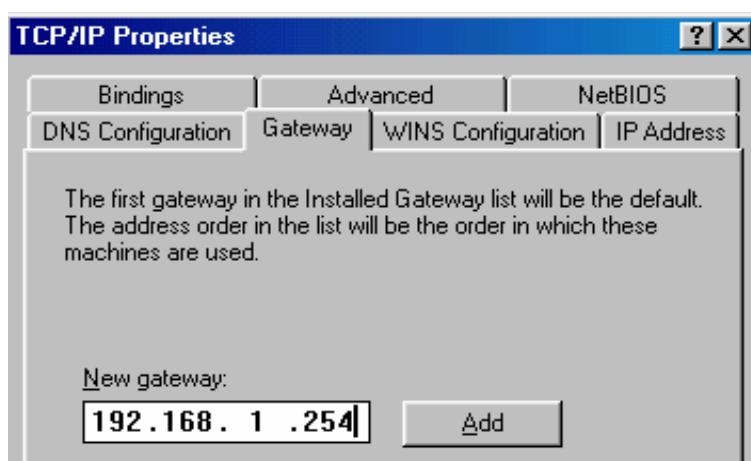


- On the *DNS Configuration* tab, ensure *Enable DNS* is selected. If the *DNS Server Search Order* list is empty, enter the DNS address provided by your ISP in the fields beside the *Add* button, then click *Add*.

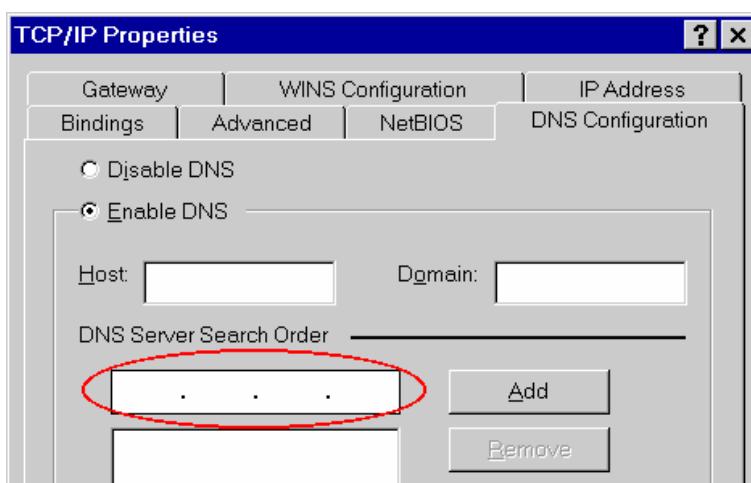


Checking TCP/IP Settings - Windows NT4.0

1. Select *Control Panel - Network*, and, on the *Protocols* tab, select the TCP/IP protocol, as shown below.

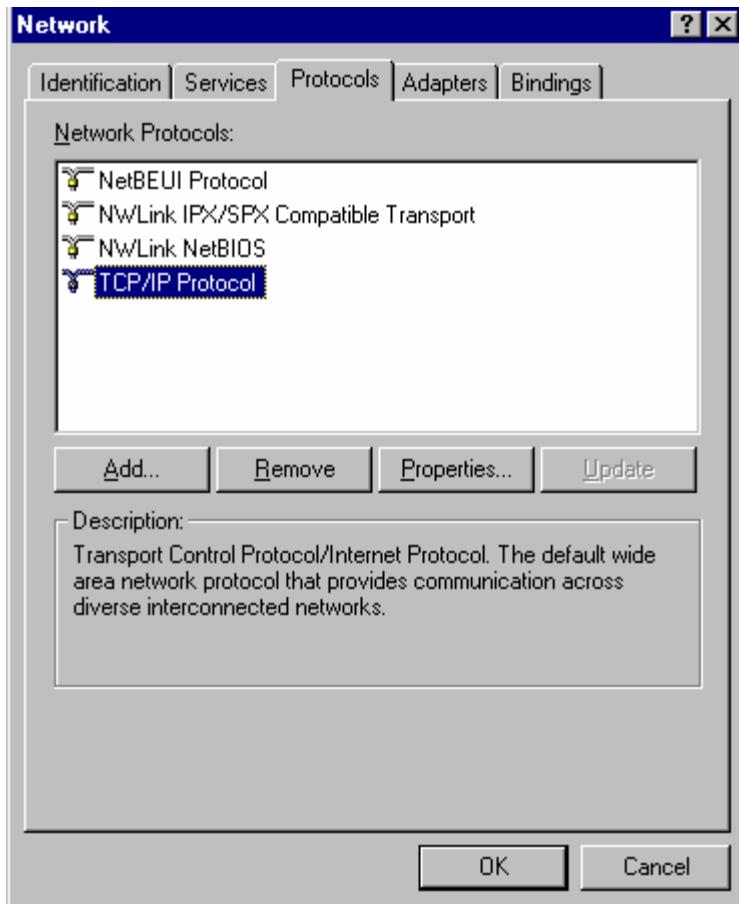

2. Click the *Properties* button to see a screen like the one below.

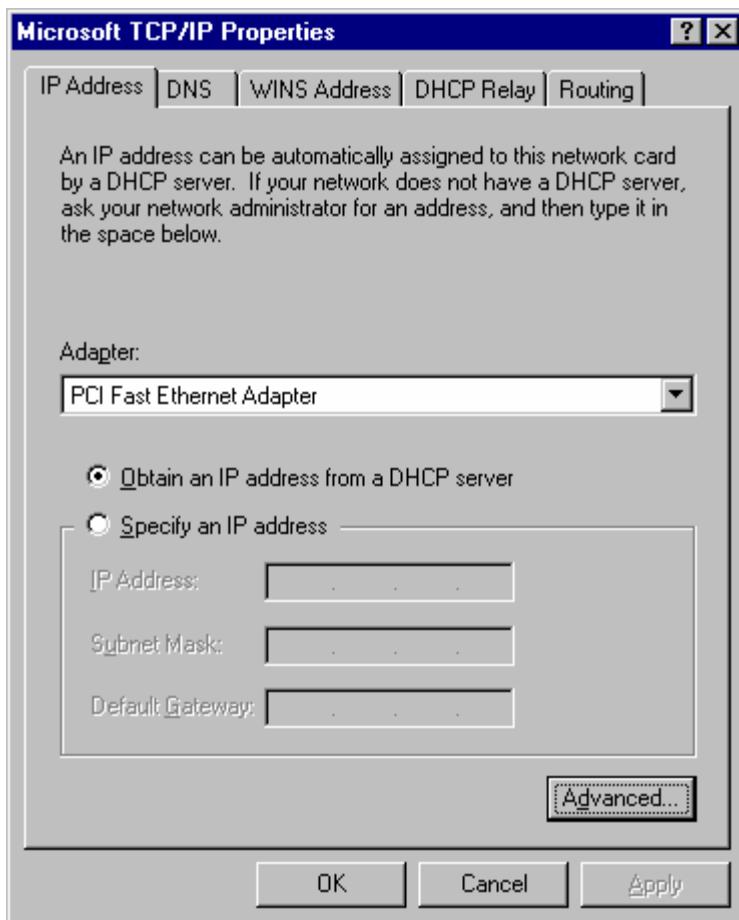

3. Select the network card for your LAN.
4. Select the appropriate radio button - *Obtain an IP address from a DHCP Server* or *Specify an IP Address*, as explained below.

Obtain an IP address from a DHCP Server


This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.


Specify an IP Address

If your PC is already configured, check with your network administrator before making the following changes.

1. The *Default Gateway* must be set to the IP address of the Wireless Router. To set this:
 - Click the *Advanced* button on the screen above.
 - On the following screen, click the *Add* button in the *Gateways* panel, and enter the Wireless Router's IP address.
 - If necessary, use the *Up* button to make the Wireless Router the first entry in the *Gateways* list.

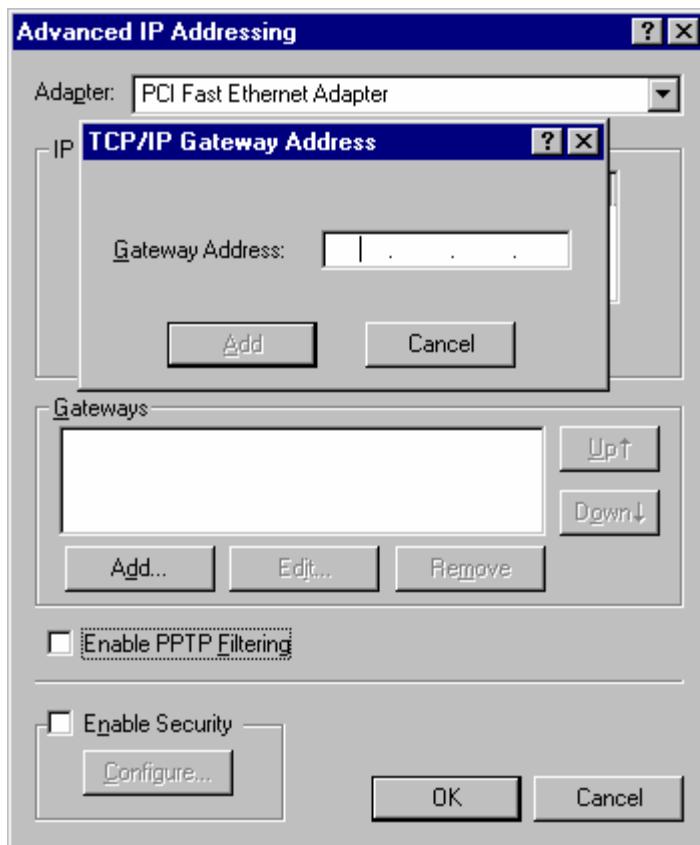


2. The DNS should be set to the address provided by your ISP, as follows:
 - Click the DNS tab.
 - On the DNS screen, shown below, click the *Add* button (under *DNS Service Search Order*), and enter the DNS provided by your ISP.

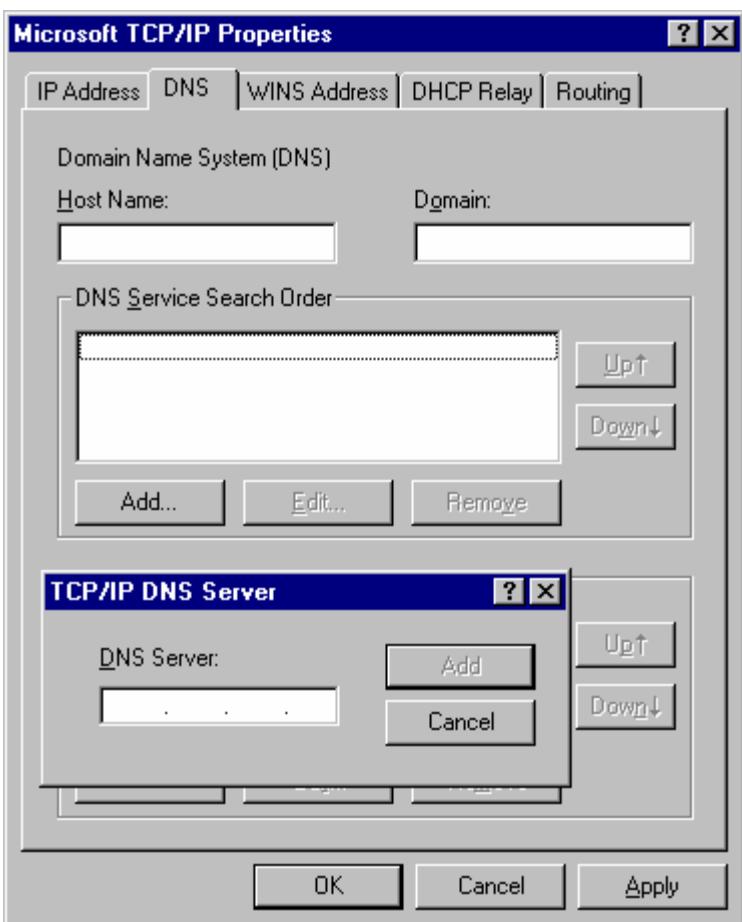


Checking TCP/IP Settings - Windows 2000:

1. Select *Control Panel - Network and Dial-up Connection*.
2. Right - click the *Local Area Connection* icon and select *Properties*. You should see a screen like the following:

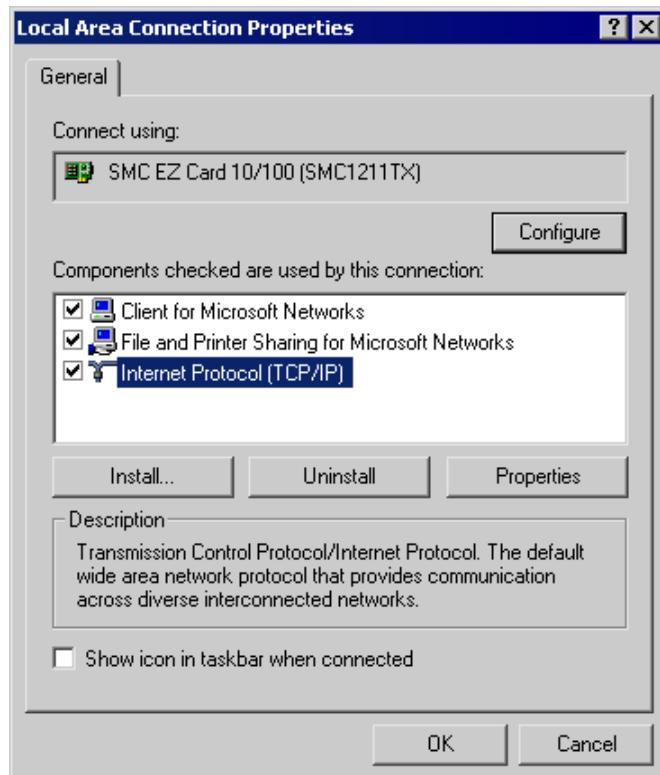

3. Select the *TCP/IP* protocol for your network card.
4. Click on the *Properties* button. You should then see a screen like the following.

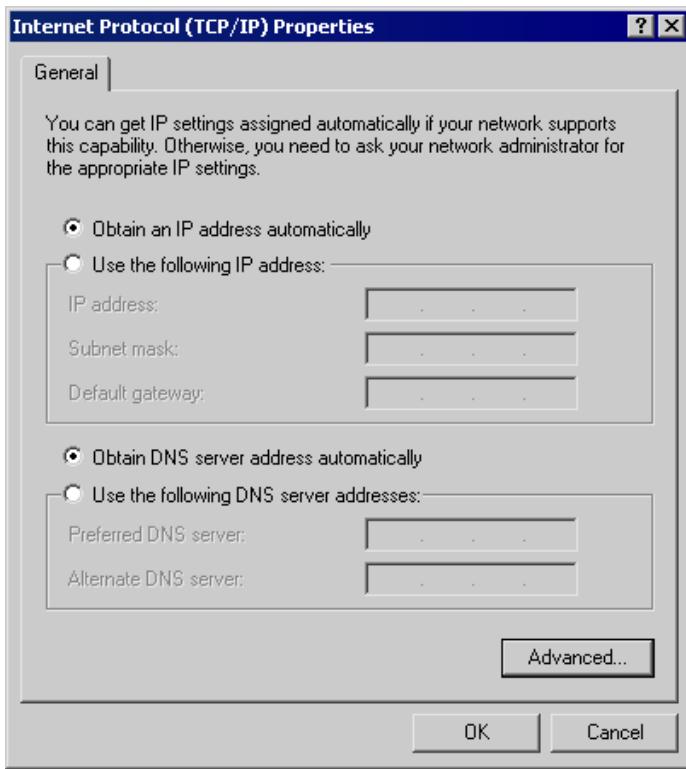

5. Ensure your TCP/IP settings are correct, as described below.

Using DHCP

To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.


Using a fixed IP Address ("Use the following IP Address")

If your PC is already configured, check with your network administrator before making the following changes.


- Enter the Wireless Router's IP address in the *Default gateway* field and click *OK*. (Your LAN administrator can advise you of the IP Address they assigned to the Wireless Router.)
- If the *DNS Server* fields are empty, select *Use the following DNS server addresses*, and enter the DNS address or addresses provided by your ISP, then click *OK*.

Checking TCP/IP Settings - Windows XP

1. Select *Control Panel - Network Connection*.
2. Right click the *Local Area Connection* and choose *Properties*. You should see a screen like the following:

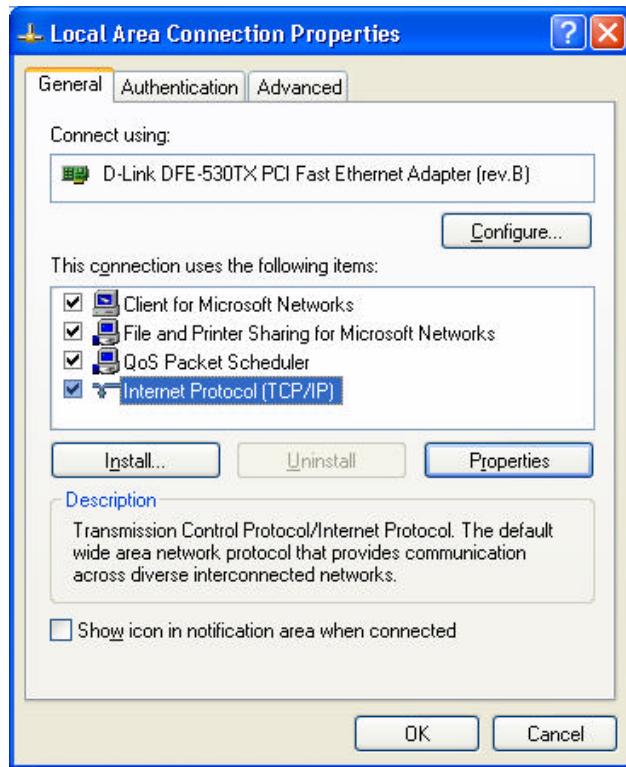

3. Select the *TCP/IP* protocol for your network card.
4. Click on the *Properties* button. You should then see a screen like the following.

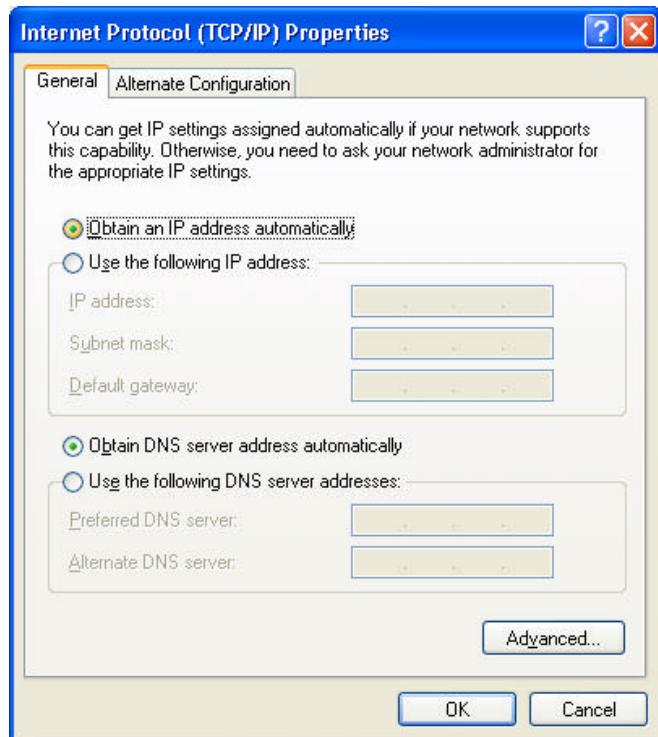

5. Ensure your TCP/IP settings are correct.

Using DHCP

To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.

Using a fixed IP Address ("Use the following IP Address")

If your PC is already configured, check with your network administrator before making the following changes.

- In the *Default gateway* field, enter the Wireless Router's IP address and click **OK**. Your LAN administrator can advise you of the IP Address they assigned to the Wireless Router.
- If the *DNS Server* fields are empty, select *Use the following DNS server addresses*, and enter the DNS address or addresses provided by your ISP, then click **OK**.

Internet Access

To configure your PCs to use the Wireless Router for Internet access:

- Ensure that the DSL modem, Cable modem, or other permanent connection is functional.
- Use the following procedure to configure your Browser to access the Internet via the LAN, rather than by a Dial-up connection.

For Windows 9x/ME/2000

1. Select *Start Menu - Settings - Control Panel - Internet Options*.
2. Select the Connection tab, and click the *Setup* button.
3. Select "I want to set up my Internet connection manually, or I want to connect through a local area network (LAN)" and click *Next*.
4. Select "I connect through a local area network (LAN)" and click *Next*.
5. Ensure all of the boxes on the following Local area network Internet Configuration screen are **unchecked**.
6. Check the "No" option when prompted "Do you want to set up an Internet mail account now?".
7. Click *Finish* to close the Internet Connection Wizard.
Setup is now completed.

For Windows XP

1. Select *Start Menu - Control Panel - Network and Internet Connections*.
2. Select *Set up or change your Internet Connection*.
3. Select the *Connection* tab, and click the *Setup* button.
4. Cancel the pop-up "Location Information" screen.
5. Click *Next* on the "New Connection Wizard" screen.
6. Select "Connect to the Internet" and click *Next*.
7. Select "Set up my connection manually" and click *Next*.
8. Check "Connect using a broadband connection that is always on" and click *Next*.
9. Click *Finish* to close the New Connection Wizard.
Setup is now completed.

Accessing AOL

To access AOL (America On Line) through the Wireless Router, the *AOL for Windows* software must be configured to use TCP/IP network access, rather than a dial-up connection. The configuration process is as follows:

- Start the *AOL for Windows* communication software. Ensure that it is Version 2.5, 3.0 or later. This procedure will not work with earlier versions.
- Click the *Setup* button.
- Select *Create Location*, and change the location name from "New Locality" to "Wireless Router".
- Click *Edit Location*. Select *TCP/IP* for the *Network* field. (Leave the *Phone Number* blank.)
- Click *Save*, then *OK*.
Configuration is now complete.
- Before clicking "Sign On", always ensure that you are using the "Wireless Router" location.

Macintosh Clients

From your Macintosh, you can access the Internet via the Wireless Router. The procedure is as follows.

1. Open the TCP/IP Control Panel.
2. Select *Ethernet* from the *Connect via* pop-up menu.
3. Select *Using DHCP Server* from the *Configure* pop-up menu. The DHCP Client ID field can be left blank.
4. Close the TCP/IP panel, saving your settings.

Note:

If using manually assigned IP addresses instead of DHCP, the required changes are:

- Set the *Router Address* field to the Wireless Router's IP Address.
- Ensure your DNS settings are correct.

Linux Clients

To access the Internet via the Wireless Router, it is only necessary to set the Wireless Router as the "Gateway".

Ensure you are logged in as "root" before attempting any changes.

Fixed IP Address

By default, most Unix installations use a fixed IP Address. If you wish to continue using a fixed IP Address, make the following changes to your configuration.

- Set your "Default Gateway" to the IP Address of the Wireless Router.
- Ensure your DNS (Name server) settings are correct.

To act as a DHCP Client (recommended)

The procedure below may vary according to your version of Linux and X -windows shell.

1. Start your X Windows client.
2. Select *Control Panel - Network*
3. Select the "Interface" entry for your Network card. Normally, this will be called "eth0".
4. Click the *Edit* button, set the "protocol" to "DHCP", and save this data.
5. To apply your changes
 - Use the "Deactivate" and "Activate" buttons, if available.
 - OR, restart your system.

Other Unix Systems

To access the Internet via the Wireless Router:

- Ensure the "Gateway" field for your network card is set to the IP Address of the Wireless Router.
- Ensure your DNS (Name Server) settings are correct.

Wireless Station Configuration

This section applies to all Wireless stations wishing to use the Wireless Router's Access Point, regardless of the operating system which is used on the client.

To use the Wireless Access Point in the Wireless Router, each Wireless Station must have compatible settings, as follows:

Mode	The mode must be set to Infrastructure .
SSID (ESSID)	This must match the value used on the Wireless Router. The default value is Untitled Note! The SSID is case sensitive.
WEP	By default, WEP on the Wireless Router is disabled . <ul style="list-style-type: none">• If WEP remains disabled on the Wireless Router, all stations must have WEP disabled.• If WEP is enabled on the Wireless Router, each station must use the same settings as the Wireless Router.

Note:

By default, the Wireless Router will allow both 802.11b and 802.11g connections.

Appendix A

Troubleshooting

This Appendix covers the most likely problems and their solutions.

Overview

This chapter covers some common problems that may be encountered while using the Wireless Router and some possible solutions to them. If you follow the suggested steps and the Wireless Router still does not function properly, contact your dealer for further advice.

General Problems

Problem 1: Can't connect to the Wireless Router to configure it.

Solution 1: Check the following:

- The Wireless Router is properly installed, LAN connections are OK, and it is powered ON.
- Ensure that your PC and the Wireless Router are on the same network segment. (If you don't have a router, this must be the case.)
- If your PC is set to "Obtain an IP Address automatically" (DHCP client), restart it.
- If your PC uses a Fixed (Static) IP address, ensure that it is using an IP Address within the range 192.168.1.1 to 192.168.1.253 and thus compatible with the Wireless Router's default IP Address of 192.168.1.254.

Also, the Network Mask should be set to 255.255.255.0 to match the Wireless Router.

In Windows, you can check these settings by using *Control Panel-Network* to check the *Properties* for the TCP/IP protocol.

Internet Access

Problem 1: When I enter a URL or IP address I get a time out error.

Solution 1: A number of things could be causing this. Try the following troubleshooting steps.

- Check if other PCs work. If they do, ensure that your PCs IP settings are correct. If using a Fixed (Static) IP Address, check the Network Mask, Default gateway and DNS as well as the IP Address.
- If the PCs are configured correctly, but still not working, check the Wireless Router. Ensure that it is connected and ON. Connect to it and check its settings. (If you can't connect to it, check the LAN and power connections.)
- If the Wireless Router is configured correctly, check your Internet

connection (DSL/Cable modem etc) to see that it is working correctly.

Problem 2: Some applications do not run properly when using the Wireless Router.

Solution 2: The Wireless Router processes the data passing through it, so it is not transparent.

Use the *Special Applications* feature to allow the use of Internet applications which do not function correctly.

If this does solve the problem you can use the *DMZ* function. This should work with almost every application, but:

- It is a security risk, since the firewall is disabled.
- Only one (1) PC can use this feature.

Wireless Access

Problem 1: My PC can't locate the Wireless Access Point.

Solution 1: Check the following.

- Your PC is set to *Infrastructure Mode*. (Access Points are always in *Infrastructure Mode*)
- The SSID on your PC and the Wireless Access Point are the same.
Remember that the SSID is case-sensitive. So, for example "Workgroup" does NOT match "workgroup".
- Both your PC and the Wireless Router must have the same setting for WEP. The default setting for the Wireless Router is disabled, so your wireless station should also have WEP disabled.
- If WEP is enabled on the Wireless Router, your PC must have WEP enabled, and the key must match.
- If the Wireless Router's *Wireless* screen is set to *Allow LAN access to selected Wireless Stations only*, then each of your Wireless stations must have been selected, or access will be blocked.
- To see if radio interference is causing a problem, see if connection is possible when close to the Wireless Router. Remember that the connection range can be as little as 100 feet in poor environments.

Problem 2: Wireless connection speed is very slow.

Solution 2: The wireless system will connect at the highest possible speed, depending on the distance and the environment. To obtain the highest possible connection speed, you can experiment with the following:

- Wireless Router location.
Try adjusting the location and orientation of the Wireless Router.
- Wireless Channel
If interference is the problem, changing to another channel may show a marked improvement.
- Radio Interference
Other devices may be causing interference. You can experiment by switching other devices Off, and see if this helps. Any "noisy" devices should be shielded or relocated.

- RF Shielding

Your environment may tend to block transmission between the wireless stations. This will mean high access speed is only possible when close to the Wireless Router.

Appendix B

About Wireless LANs



This Appendix provides some background information about using Wireless LANs (WLANs).

Modes

Wireless LANs can work in either of two (2) modes:

- Ad-hoc
- Infrastructure

Ad-hoc Mode

Ad-hoc mode does not require an Access Point or a wired (Ethernet) LAN. Wireless Stations (e.g. notebook PCs with wireless cards) communicate directly with each other.

Infrastructure Mode

In Infrastructure Mode, one or more Access Points are used to connect Wireless Stations (e.g. Notebook PCs with wireless cards) to a wired (Ethernet) LAN. The Wireless Stations can then access all LAN resources.



Access Points can only function in "Infrastructure" mode, and can communicate only with Wireless Stations which are set to "Infrastructure" mode.

BSS

BSS

A group of Wireless Stations and a single Access Point, all using the same ID (SSID), form a Basic Service Set (BSS).

Using the same SSID is essential. Devices with different SSIDs are unable to communicate with each other.

Channels

The Wireless Channel sets the radio frequency used for communication.

- Access Points use a fixed Channel. You can select the Channel used. This allows you to choose a Channel which provides the least interference and best performance. In the USA and Canada, 11 channel are available. If using multiple Access Points, it is better if adjacent Access Points use different Channels to reduce interference.

- In "Infrastructure" mode, Wireless Stations normally scan all Channels, looking for an Access Point. If more than one Access Point can be used, the one with the strongest signal is used. (This can only happen within an ESS.)

WEP

WEP (Wired Equivalent Privacy) is a standard for encrypting data before it is transmitted.

This is desirable because it is impossible to prevent snoopers from receiving any data which is transmitted by your Wireless Stations. But if the data is encrypted, then it is meaningless unless the receiver can decrypt it.

If WEP is used, the Wireless Stations and the Access Point must have the same settings for each of the following:

WEP	Off, 64 Bit, 128 Bit
Key	For 64 Bit encryption, the Key value must match. For 128 Bit encryption, the Key value must match
WEP Authentication	Open System or Shared Key.

Wireless LAN Configuration

To allow Wireless Stations to use the Access Point, the Wireless Stations and the Access Point must use the same settings, as follows:

Mode On client Wireless Stations, the mode must be set to "Infrastructure".
(The Access Point is always in "Infrastructure" mode.)

SSID (ESSID) Wireless Stations should use the same SSID (ESSID) as the Access Point they wish to connect to. Alternatively, the SSID can be set to "any" or null (blank) to allow connection to any Access Point.

WEP The Wireless Stations and the Access Point must use the same settings for WEP (Off, 64 Bit, 128 Bit).

WEP Key: If WEP is enabled, the Key must be the same on the Wireless Stations and the Access Point.

WEP Authentication: If WEP is enabled, all Wireless Stations must use the same setting as the Access Point (either "Open System" or "Shared Key").

Appendix C

Specifications



Wireless-G Router

Model	HWR54G Rev. R
Dimensions	141mm(W) * 100mm(D) * 27mm(H)
Operating Temperature	-10° C to 55° C
Storage Temperature	-20° C to 70° C
Network Protocol:	TCP/IP
Network Interface:	5 Ethernet: 4 * 10/100BaseT (RJ45) LAN connection 1 * 10/100BaseT (RJ45) for WAN
LEDs	12
Power Adapter	12 V DC / 0.8A External

Wireless Interface

Standards	IEEE802.11g WLAN, JEIDA 4.2, roaming support
Frequency	2.4 to 2.4835GHz (Industrial Scientific Medical Band)
Channels	Maximum 14 Channels, depending on regulatory authorities
Modulation	DSSS BPSK/QPSK/CCK, OFDM/CCK
Data Rate	Up to 54 Mbps
Coverage Area	Indoors : 15m @54Mbps, 120m @6Mbps or lower Outdoors : 40m @54Mbps, 300m @6Mbps or lower
Security	64Bit, 128Bit WEP, WPA, WPA2, WPA-Radius, WPA2-Radius TKIP, AES
Output Power	13dBm (typical)
Receiver Sensitivity	-80dBm Min.

Regulatory Approvals

CE Standards

This product complies with the 99/5/EEC directives, including the following safety and EMC standards:

- EN300328-2
- EN301489-1/-17
- EN60950

CE Marking Warning

This is a Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>